

CLEANING & MAINTENANCE INSTRUCTIONS (cont'd.)

- 4) Clean the element and drip area.
- 5) To replace the element, reverse the above directions.
- 6) Use damp sudsy cloth to clean baked enamel and or chrome finished surfaces - NEVER USE ABRASIVES OR STEEL WOOL ON FINISHED SURFACES.
- 7) Thoroughly wipe soap and water from surface or range and heating element DO NOT IMMERSE IN LIQUID.

Caution: Heating element may be hot without glowing red. Be sure element is cool before touching.

Unplug unit when not in use.

LIMITED ONE-YEAR WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of purchase by the user thereof, or for a maximum period of eighteen (18) months from the date of manufacture if unit was a gift (refer to ink stamp or black dated sticker on appliance; removing sticker voids the warranty).

To obtain service during warranty period, call BroilKing* at 860-738-2200 for a Return Authorization Number to write on the carton. Then return the appliance, insured and freight prepaid, to the BroilKing factory: BroilKing Corp., 143 Colebrook River Road, Winsted, CT 06098, Phone: 860-738-2200, Fax: 860-738-9404. Proof of purchase is required when requesting warranty service - SAVE YOUR SALES RECEIPT. Send a copy of your receipt along with a note stating your name, address, phone number, and the nature of the problem, and requesting warranty service. Be sure to package the unit carefully; we are not responsible for damage occurring during shipment to the repair facility.

This warranty is extended only to the original purchaser and does not apply to shipping damage, accidental breakage, alteration, tampering, misuse or abuse, commercial use, unreasonable use, or to damage to the product (not resulting from defect or malfunction) while in the possession of the consumer. Lost or broken cordsets, breakage of glass, nonstick or other coatings are not covered by this warranty.

BroilKing Corp. disclaims all responsibility for consequential, incidental, or commercial losses caused by the use of this product. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state. Warranty is applicable only in USA and Canada*. (*Canadian customers contact PGS Commercial Equipment in Ontario, Tel. (905) 795-8395.)

We recommend that you record the following information for warranty purposes: Model # _____

Purchase Date: _____ Dealer: _____

030502 RV01

BroilKing®

Light Duty Portable Buffet Ranges

Use & Care Manual Models BR-5B, BR-5W, BR-7B, BR-7W



120 Volts / 1100 Watts



120 Volts / 1650 Watts / 825 Watts per burner

BroilKing Corp.

143 Colebrook River Road, Winsted, CT 06098
(860) 738-2200 • Fax (860) 738-9404
Website: www.broilking.com • E-mail: info@broilking.com

This is a UL Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Do not touch hot surfaces! Always use hot pad or pot holder until unit cools.
3. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact the BroilKing Factory Service Department at (860) 738-2200 for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not use appliance for other than intended use.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid.
13. Always plug cord into wall outlet before turning unit on with control knob. To disconnect, turn control to "OFF", then remove plug from wall outlet.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.
15. A fire may occur if this appliance is covered or touching flammable material, including curtains, walls, etc., when in operation. **To avoid excessive heat on wall(s) while cooking, always keep a space of at least 4" between your BroilKing range and your rear and side walls.**

SAVE THESE INSTRUCTIONS

This product is for household use only.

IMPORTANT NOTES

- Electrical connection must be a proper outlet for the 3 pronged cord. Before connecting power, make sure the voltage and frequency correspond to the data plate on the unit.
- A short power supply cord (or cord set) has been provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords may be used if care is properly exercised in their use. If a long cord set or extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

- When performing any cleaning or maintenance to this unit, be sure to unplug from power outlet first, and allow to cool.
- Call BroilKing Customer Service at 860-738-2200 with any questions or service needs.

OPERATING INSTRUCTIONS

1. **Avoid letting water or food drop or boil over onto heating element. If liquids or other foreign material are allowed to drip down through the element pan and into the housing, the warranty is voided.**
2. Signal light, on models so equipped, will come on when range is plugged into electric outlet.
3. This is a light duty range with a 5-1/2" diameter heating element. As with all countertop ranges as well as stovetops, the most efficient cooking / heating will be done when using pans that are closest in diameter to the heating element. The pot or pan used should not exceed the heating element diameter.
4. Be sure your Portable Buffet Range is resting level on countertop. Avoid using pans that are unstable and easily tipped.
5. **To avoid excessive heat on wall(s) while cooking, always keep a space of at least 4" between your BroilKing range and your rear and side walls.**
6. To avoid harm to your countertop, place range on a wood cutting board or hot pad when in use.

CLEANING & MAINTENANCE INSTRUCTIONS

1. Always unplug buffet range from electric outlet and allow to cool before cleaning.
2. The element hookup configuration has been changed to improve the longevity of the elements. The new configuration requires a different procedure to remove the element, if necessary for cleaning. (You may also clean the elements without removing them by gripping an element at the point opposite where it goes into the holes in the drip pan and tilting it up. **Do not force it up higher than it will go easily.**)
- 3) To remove an element (Tools needed: pliers and slotted screwdriver):
 - Be sure range is disconnected from electricity and the element is cool.
 - Locate the round push nut on the underside of the unit (directly below the element you want to remove.) You may need to apply pressure to the underside of the unit next to the push nut in order to relieve the pressure that holds it in place in order to get a grip on it with pliers.
 - While the pliers are gripping the push nut, use a screwdriver to loosen and remove the screw in the center of the drip pan.
 - Pull the element up slightly. There are 2 pieces of rubber sleeve on the wires attached to the element. Gently slide the rubber sleeves back and remove the element by detaching the "quick-disconnect" terminal.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>