

SPK-24G

2.4GHz Wireless Outdoor Speaker System



Owner's Manual

(Read carefully the instructions before using this system)

www.cablesunlimited.com

Introduction

This Audio UnlimitedTM .4GHz digital wireless speaker system utilizes the most advanced wireless technology to deliver dynamic, high-quality audio anywhere inside or outside your home. The wireless audio transmission travels freely through walls, floors and other solid objects. Simply connect the system to any audio source such as Radio, TV, VCR, Hi-Fi and CD/MP3/ VCD/DVD players... to enjoy full-spectrum, lifelike sound without complicated wiring and installation.


Features

- 1. 2.4GHz Frequency Hopping Spread Spectrum (FHSS) digital transmission.
- 2. 32-Channel scan-tuning between transmitter and receiver.
- 3. Audio output power up to 20 Watts RMS per channel.
- 4. SRS WOW provides deep, rich bass and creates a 3D surround effect to provide a superior audio experience.
- 5. Weather-resistant speaker and remote control.
- 6. Mood light effect.
- 7. Dual weather-resistant speaker driver (super bass and tweeter built-in).
- 8. UV resistant speaker and remote control.
- 9. Supports stereo audio (with optional additional speaker).
- 10. AUX In jack.
- 11. Operating distance up to 50 meters in open ares (less through walls and other obstructions).
- 12. Works through walls, floors and anywhere in the room.
- 13. Virtually interference-free stereo quality.
- 14. Auto volume level control.
- 15. Remote control unit.
- 16. Powered by 6 D batteries, or by included AC adapter.


Package content


- i. 1 x RF transmitter
- ii. 1 x RF speaker
- iii. 1 x Remote control
- iv. 1 x ac adapter for transmitter
- v. 1 x ac adapter for speaker
- vi. 1 x RCA to RCA cable
- vii. 1 x user manual

Transmitter

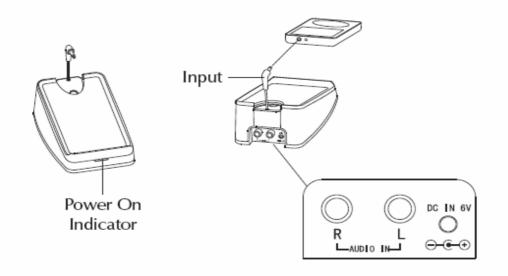


Speaker

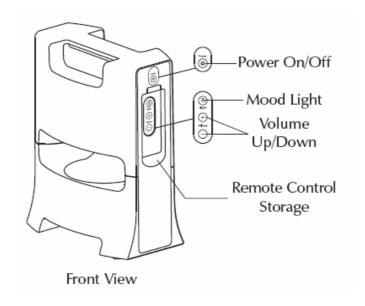

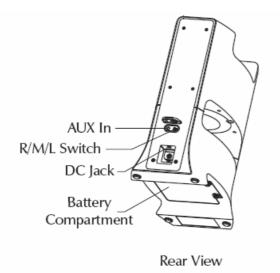

Remote Control

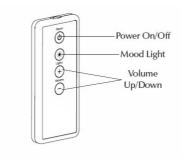


Installation

Transmitter

- 1. Plug the included AC adapter into a standard wall outlet.
- 2. Insert the adapter connector plug firmly into the DC IN jack located on the rear panel of the transmitter base.
- 3. Extend the retractable audio cable located on the back panel of the transmitter and connect it to the output jack of virtually any audio source.

Note: Do not fully extend the cable until ready to retract.


4. To retract the cable, pull it until it is fully extended and then allow it to feed back into the base.

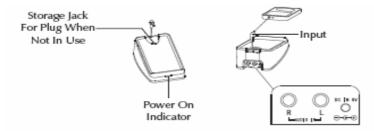

Speaker Receiver

Battery Power

- 1. To operate the speaker using battery power, gently turn the speaker over and open the battery compartment cover located underneath.
- 2. Insert six (6) D alkaline batteries (not provided) into the battery compartment, observing proper +/- polarities as indicated.

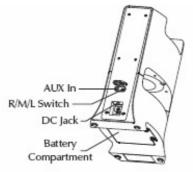

3. Replace the battery compartment cover.

AC Power

- 1. To operate the speaker using AC power, plug the included 12V power adapter into a standard wall outlet.
- 2. Insert the power adapter connector firmly into the DC IN jack located on the back panel of the speaker.

Operation

- 1. To switch on the speaker, press the POWER button located on the front panel of the speaker. The GREEN power LED illuminates.
- 2. To switch off the speaker, press the POWER button again.

Remote Control

The remote control is ready to use with a factory-installed button cell battery. It can be stored in the recessed area on the front panel.

Basic Operation

- 1. When the transmitter power adapter is connected and plugged into a standard wall outlet, the transmitter's GREEN led remains on.
- 2. To switch on the speaker, press the POWER button on the front panel of the speaker. The GREEN led illuminates.
- 3. Turn on the audio source the transmitter is turned off for less then 4 minutes, the blue LEDs on the transmitter and the speaker illuminate when the audio signal link between the two is made.
- 4. If the audio source connected to the transmitter is turned off for less than 4 minutes, the BLUE leds on the transmitter and the speaker remain on, but no sound is transmitted. When the audio signal returns to the transmitter, sound is transmitted again.
- 5. If no signal is detected for more than 4 minutes, the transmitter automatically turns off; the BLUE leds on the transmitter and the speaker switch to GREEN.
- 6. If no signal is detected from the transmitter for more than 5 minutes, the speaker automatically shifts to Standby mode.
- 7. To turn on the speaker again during Standby mode, press the POWER button on remote control unit.
- 8. If no audio signal is detected from the transmitter for more than 15 minutes, the speaker automatically turns off. The GREEN led goes off.
- 9. To switch on the speaker, press the POWER button on the front panel of the speaker.
- 10. To switch off the speaker. Press the POWER button again.

Mood Light

For mood light effect, press the LIGHTS button on the speaker or remote control.

SRS WOW®

SRS WOW® is built into the transmitter and is always on while paying music. It provides deep, rich and creates a 3D surround effect to provide a superior audio experience.

SRS WOW® Technology Delivers The Best Possible Audio Experience.

This system delivers superior stereo sound with the help of advanced audio-enhancement electronics from SRS Labs, Inc., a leading provider of advanced audio solutions. SRS WOW digitally reconstructs the 3D directional cues of the original recording that are lost during the digital compression and mixing process.

For the listener, SRS WOW seems to expand the stereo "sweet spot" and improves the perception of acoustic space and clarity. Additionally, SRS WOW patented techniques overcome low-frequency limitations of smaller speaker drivers to creates a deeper, richer bass response than found in typical speakers.

Left / Right Channel and Mono Selection

The Wireless Outdoor Speaker System comes with one speaker and is designed for either Mono or Stereo playback. For stereo playback, an additional speaker must be purchased separately. Mono playback is suggested when only one speaker is used in an area or room.

Mono Playback

To enable Mono playback, ensure that the switch located on the back panel of the speaker is in the MONO position.

Stereo Playback

To enable Stereo playback, set the switch on one of the two speakers' back panel to LEFT. Set the switch on the other speaker to RIGHT.

Note 1 : It is also possible to listen to only the Left or Right audio channel using only the speaker set. To do so, simply set the switch on the speaker's back panel to LEFT or RIGHT. Only the channel selected will be audible.

Note 2 : If two speakers are connected to the system, ensure both speakers are placed within the effective operational range. If either speaker is out of range it will cause distortion to both speakers.

AUX In

To connect an audio device directly to the speaker, insert the output audio cable from the device into the AUX In jack located on the back panel of the speaker.

Note:

 If the source signal is too weak for reception, the transmitter automatically switched off after approximately 4 minutes to protect the unit and save power. If the source signal returns to an

- adequate level, the transmitter automatically switches back on.
- When the transmitter is in Standby mode, the speaker automatically switches off after approximately 20 minutes to protect the unit and save power.
- To switch speaker power back on during Standby mode, press the POWER button on the remote control. The signal link between the transmitter and speaker reconnects automatically.

Troubleshooting

No sound

- Ensure the AC adapter is securely plugged into the wall outlet and the transmitter DC IN jack.
- Ensure the speaker POWER button is in the ON position.
- Speaker batteries may be too weak. Replace with new batteries or connect with the included ac/dc adapter.
- Ensure the connected audio device is switched on and producing a signal.
- Ensure that the volume level is set to a moderate level.

Distortion

- Speaker batteries may be too weak, Replace with new batteries or connect with the included ac/dc adapter.
- Ensure that the volume level is set to a moderate level.
- The speakers are too fat from the transmitter. Move closer to the transmitter base.
- The audio input signal may be too low: increase the volume level of the audio source.
- If two speakers are connected to the system, ensure both speakers are placed within the effective operational range. If either speaker is out of range it will cause distortion to both speakers.

Specifications

Transmission Mode: UHF Stereo

Carrier Frequency: 2.4GHz Digital

Operation Voltage: Transmitter, DC 6C 300mA

Speaker, DC 12V 1.5A or 6 x D alkaline batteries (not included)

Remote Control, 1 x CR2032 button cell

Frequency Response: 30 Hz – 20 KHz

Distortion: 0.5%

S/N Ratio: 65 dB

Operation Distance: Up to 50 meters (open area)

Speaker Audio Output Power: 20W Max. (RMS)

ATTENTION:

The transmitter for this speaker set is designed to work with a wide variety of devices. Our tests have shown the default volume levels of iPods, MP3 players and other devices connected to the transmitter through the headphone jack does not have the signal strength required by the transmitter. Raising the volume of your device will increase the signal strength to the transmitter. The blue signal LED will light when the required signal strength from your device is reached. We recommend that you keep the volume set on your iPod or MP3 player at a minimum of 3/4 of full volume.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com