

This quick guide explains basic function settings and how to shoot and playback images. You can take this guide with you for shooting. For detailed instructions, refer to the EOS 60D Instruction Manual.



English Edition
© CANON INC. 2010

Quick Start Guide

1 Insert the battery.

2 **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.

3 **Set the lens focus mode switch to <AF>.**

4 **Open the cover and insert a SD card.**

5 **Set the power switch to <ON>, and while holding down the button at the center of the Mode Dial, turn the dial to <□> (Full Auto).**

6 **Flip out the LCD monitor.**

7 **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

8 **Take the picture.**
Press the shutter button completely to take the picture.

9 **View the image.**
The captured image will be displayed for about 2 sec. on the LCD monitor.

The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, B, C).

Battery Life

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 1600 shots	Approx. 1100 shots

Image Playback

Index **Magnify** **Erase** **SET** **INFO. Shooting information** **Play** **Playback**

Preparation

Menu Operations

<MENU> button
<SET> button
<◀▶> <▲▼>

1. Press the <MENU> button to display the menu.
2. Press the <◀▶> key to select the tab, then press the <▲▼> key to select the desired item.
3. Press <SET> to display the setting.
4. After setting the item, press <SET>.

Basic Zone Modes

Quality: Enable
Release shutter without card: Enable
Image review: 2 sec.
Peripheral illumin. correct: Enable
Red-eye reduc.: Disable

Creative Zone Modes

Quality: Enable
Beep: Enable
Release shutter without card: Enable
Image review: 2 sec.
Peripheral illumin. correct: Enable
Red-eye reduc.: Disable
Flash control: Enable

Image-recording Quality

- Select [Q] Quality.
- Select the image-recording quality with the <◀▶> dial or <◀▶> key.

Image-recording quality

Quality: RAW (18M 5184x3456 [514])

RAW: Turn the <◀▶> dial to select the quality.

JPEG: Press the <◀▶> key to select the quality.

Picture Style

- Select [P] Picture Style.
- Press the <▲▼> key to select the Picture Style, then press <SET>.

Picture Style: Standard (3, 0, 0, 0)

Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

Quick Control Screen

Press the <Q> button. The Quick Control screen will appear.

Shooting mode: M, 1/125, F5.6, ISO 200

Aperture: F5.6

ISO speed: ISO 200

Shutter speed: 1/125

Exposure compensation/AEB setting: 3, 2, 1, 0, 1, 2, 3

Flash exposure compensation: 1/3

AF mode: ONE SHOT

AF point: 1

Picture Style: Standard

Metering mode: Average

Drive mode: Single

ISO speed: ISO 200

Highlight tone priority: Off

Electronic level: Off

Image-recording quality: RAW

Auto Lighting Optimizer: Off

White balance: Auto

 
Custom Functions

C.Fn I: Exposure	C.Fn III: Autofocus/Drive
1 Exposure level increments	1 Lens drive when AF impossible
2 ISO speed setting increments	2 AF point selection method
3 ISO expansion	3 Superimposed display
4 Bracketing auto cancel	4 AF-assist beam firing
5 Bracketing sequence	5 Mirror lockup
6 Safety shift	
7 Flash sync. speed in Av mode	


C.Fn II: Image	C.Fn IV: Operation/Others
1 Long exposure noise reduction	1 AF and metering buttons
2 High ISO speed noise reduction	2 Assign SET button
3 Highlight tone priority	3 Dial direction during Tv/Av
	4 Focusing Screen
	5 Add image verification data

Shooting Operation


Nomenclature

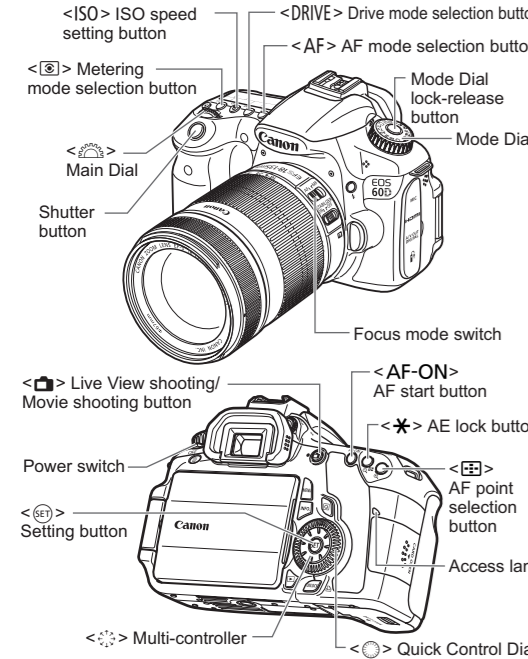


LCD Panel

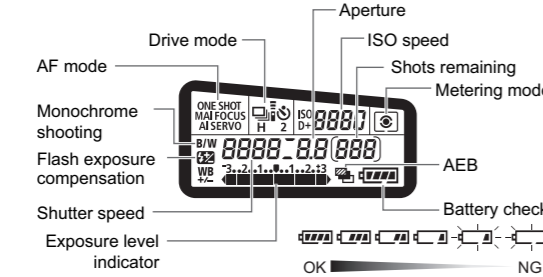 

Viewfinder Information

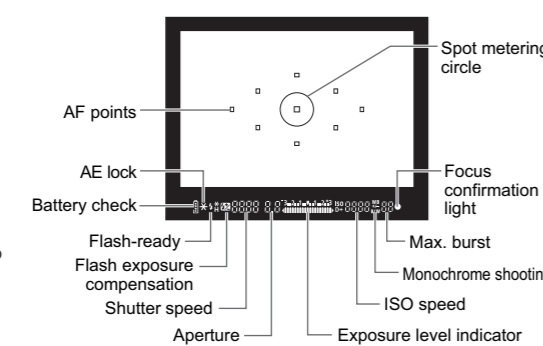 

Basic Zone Modes

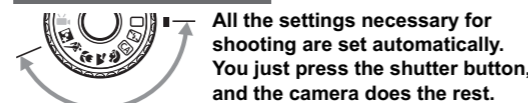


- Pressing the <Q> button will display the Quick Control screen. In the <CA>/<P>/<Tv>/<Av>/<M> shooting mode, press the <▲> key to select the function, then press the <◀> key to set it as desired.


Using the Built-in Flash

Basic Zone Modes
If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the <P>/<Tv>/<Av>/<M> modes).

 - Press the <FLASH> button to pop up the built-in flash, then shoot.

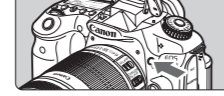

Creative Zone Modes

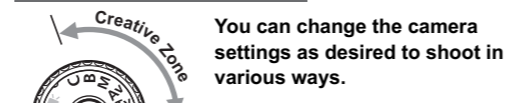

P: Program AE
The camera automatically sets the shutter speed and aperture in the same way as the <P> mode.
• Set the Mode Dial to <P>.

Tv: Shutter-priority AE

- Set the Mode Dial to <Tv>.
- Turn the <WHEEL> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <WHEEL> dial until it stops blinking.

Av: Aperture-priority AE

- Set the Mode Dial to <Av>.
- Turn the <WHEEL> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <WHEEL> dial until it stops blinking.

ISO: ISO Speed

- Press the <ISO> button, then turn the <WHEEL> dial.
- ISO 100 to 6400 can be set in 1/3-stop increments.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.

Drive Mode

- Press the <DRIVE> button, then turn the <WHEEL> dial.
 - <S>: Single shooting
 - <H>: High-speed continuous shooting
 - <L>: Low-speed continuous shooting
 - <10>: 10-sec. self-timer/ Remote control*
 - <2>: 2-sec. self-timer/ Remote control
- * This drive mode <10> can be set in all shooting modes.

AF: AF Mode

- Set the lens focus mode switch to <AF>.
- Press the <AF> button, then turn the <WHEEL> dial.
- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF mode automatically
- AI SERVO (AI Servo AF):** For moving subjects

AF Point

- Press the <AF POINT> button, then look through the viewfinder.
- Turn the <WHEEL> or <MULTI-CONTROLLER> dial to select the AF point.
- You can also use the <MULTI-CONTROLLER> to select the AF point.
- Pressing <SET> will switch between the center AF point and automatic AF point selection.
- When all the AF points light up, automatic AF point selection will take effect.

Live View Shooting

- Press the <LIVE VIEW> button to display the Live View image.
- Press the shutter button halfway to focus.
- Press the <LIVE VIEW> button to start shooting a movie. To stop movie shooting, press <LIVE VIEW> again.
- To shoot still photos, press the shutter button.
- Live View shooting settings will appear under the [INFO] menu tab in Basic Zone modes and under the [INFO] menu tab in Creative Zone modes.

Battery Life with Live View Shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 350 shots	Approx. 320 shots

Shooting Movies

- Set the Mode Dial to <LIVE VIEW>.
- Press the shutter button halfway to focus.
- Press the <LIVE VIEW> button to start shooting a movie. To stop movie shooting, press <LIVE VIEW> again.
- To shoot still photos, press the shutter button.
- Recording movie
- Microphone

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>