

Canon

バッテリーチャージャー

Canon Battery Charger

Canon Akkuladegerät

Cargador de Bateria Canon

 
Chargeur de Batterie Canon

Carica Batterie Canon

佳能电池充电器

CB-2LT/ CB-2LTE

CB-2LT

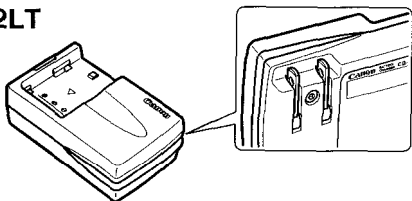

CB-2LTE



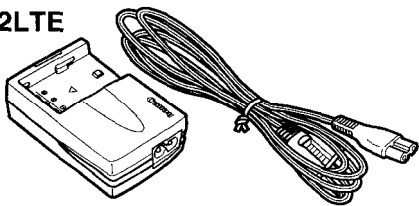 



図1/ Fig. 1/ Abb. 1/ 图1

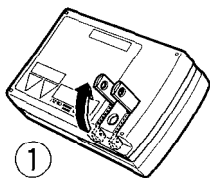 

1

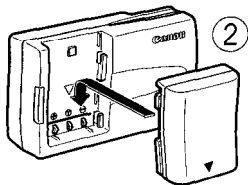 


2

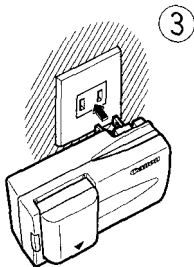 

3

充電ランプ
Charge indicator
Ladeanzeige
Indicador de carga
Indicateur de charge
Indicatore di carica
充电指示灯

 Fig. 2/ Abb. 2/ 图2

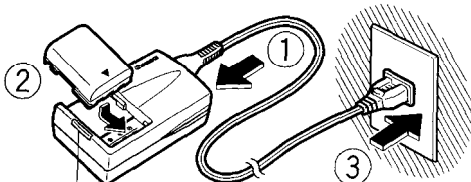

Charge indicator
Ladeanzeige
Indicador de carga
Indicateur de charge
Indicatore di carica
充电指示灯



Thank you for purchasing this charger.

Please check your product's instruction manual to make sure that your battery pack can be charged with this charger.

The shape of the plug differs according to the part of the world it is designed for.

Please also refer to the explanatory material for the product you purchased.

Preparation

CB-2LT

Flip out the retractable plug (Fig. 1-①).

CB-2LTE

Connect the power cable to the charger (Fig. 2-①).

To charge battery packs

1. Attach the battery pack to the charger (Fig. 1-②), (Fig. 2-②).
 - Align the front end of the battery pack with the guides on the charger, then press and slide the battery pack into the charger to set it in place.
2. Plug the AC plug into a household power socket (Fig. 1-③), (Fig. 2-③).

CB-2LT

According to the type of household power socket you have, other sockets may be blocked while the charger is in use.

3. The charge indicator lights in red and charging starts.
4. The indicator light changes to green when the battery pack is fully charged.
5. Unplug the charger from the household power socket
6. Remove the battery pack by sliding it out.

CB-2LT

7. Push the plug back into its retracted position.

CB-2LTE

7. Disconnect the power cable from the charger.

Notes:

- The charger becomes warm during use. This is not a malfunction.
- If the charger is used next to a TV, it may cause the TV to emit noise — move the charger away from the TV or the antenna aerial cable.
- Never unplug the charger during use
- Be sure to unplug the charger when you have finished using it.
- The charger can be used with a power supply between 100 and 240 V AC. Contact your nearest Canon service center for about the plug adapters for overseas use information.
- To prevent equipment breakdowns and excessive heating, do not connect this charger to voltage converters used by travelers, or special power sources such as on aircraft, ships or DC to AC inverters, etc.
- Do not disassemble the charger, do not get it wet, and do not expose it to shock or vibration, or to direct sunlight. Avoid exposure to high temperatures, such as in a closed car in hot weather, and do not leave it near heat-radiating equipment, such as a stove or heater.
- The charger may make noise when it is operating. This is not a malfunction.

Specifications:

Rated input:	100 – 240 V AC, 50/60Hz, 0.17A (100V) – 0.10A (240V)
Rated output:	8.4V DC, 0.5A
Operation temperature:	0°C - 40°C (32°F- 104°F)
Dimensions:	91×29.5×56mm (3 ⁵ / ₈ ×1 ¹ / ₈ ×2 ¹ / ₄ in)
Weight:	CB-2LT: 86g (3 oz) CB-2LTE: 82g (2 ⁷ / ₈ oz) (without power cable)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Important Usage Instructions



WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word “product” refers to the Canon Battery Charger CB-2LT.

1. Read Instructions — All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions — The safety and operating instructions should be retained for future reference.
3. Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions — All operating and maintenance instructions should be followed.
5. Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
6. Accessories — Do not use accessories not recommended in this manual as they may be hazardous.
7. Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
8. Water and Moisture — Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
9. Placing or Moving — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.
A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Power Sources — The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
11. Lightning — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
12. Overloading — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
13. Objects and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
14. Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
15. Damage Requiring Service — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If any liquid has been spilled onto, or objects have fallen into, the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or the cabinet has been damaged.
 - f. When the product exhibits a distinct change in performance. This indicates a need for service.
16. Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
17. Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.



This product is not intended to be serviced. Should the product cease to function in its intended manner, it should be returned to the manufacturer or be discarded.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canadian Radio Interference Regulations

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

Règlementation canadienne sur les interférences radio

CET APPAREIL NUMERIQUE DE LA CLASSE B RESPECTE TOUTES LES EXIGENCES DU REGLEMENT SUR LE MATERIEL BROUILLEUR DU CANADA.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>