

# Canon

23/19-788

キャノンワイヤレスコントローラー  
LC-2 使用説明書  
日本語版

**Canon Wireless Controller**  
**LC-2** Instructions  
English Edition

**Canon Télécommande sans fil**  
**LC-2** Notice d'emploi  
Edition française

**Canon Infrarot-Fernsteuerung**  
**LC-2** Bedienungsanleitung  
Deutsche Ausgabe

**Disparador Inalámbrico**  
**Canon LC-2** Instrucciones  
Edición Española



---

## Contents

1. Loading Batteries ..... p.19
2. Checking Batteries..... p.21
3. Setting Channel..... p.21
4. Mounting Receiver on Camera ... p.22
5. Remote Control Photography ..... p.24
6. Auto Sensing Photography ..... p.26
7. Storage..... p.28
8. Specifications ..... p.28

 


## Nomenclature

---

### ■ Receiver

### ■ Transmitter

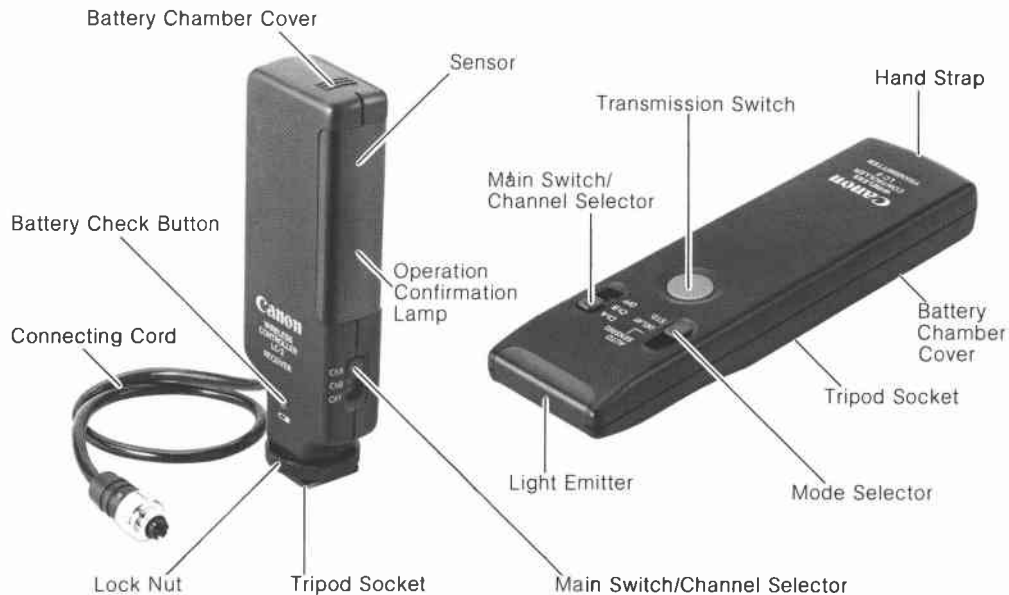




## 1. Loading Batteries

---

Load the batteries into both the transmitter and the receiver.

**Transmitter**—Use two new size-AA alkaline-manganese batteries.

   - 1) Slide the battery chamber cover in the direction of the arrow to open it.
- 2) Load the batteries so that their terminals face in the directions indicated by the diagram inside the battery chamber.
- 3) Once the batteries are loaded, slide the battery chamber cover back.

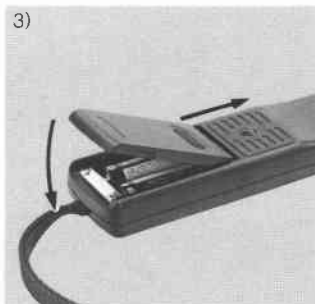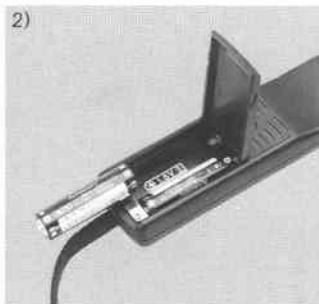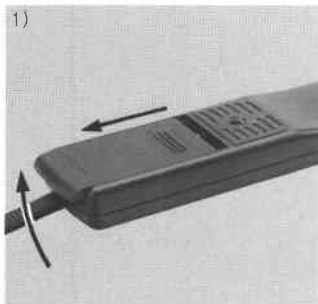

**Receiver**—Use one of the batteries listed below or an equivalent of another brand.


Lithium 6V	Duracell PX 28L
Alkaline-manganese 6V	Eveready (UCAR) No.A544, IEC 4LR44
Silver Oxide	Eveready (UCAR) No.544, Duracell PX 28, IEC 4SR44

- 1) Slide the battery chamber cover in the direction of the arrow to open it.
- 2) Load the battery so that its terminals face in the directions indicated by the diagram inside the battery chamber.
- 3) Slide the battery chamber cover back.



## Notes

 - Incorrect loading may cause batteries to explode.
- Remove the batteries if you do not expect to use either the transmitter or the receiver for three weeks or longer.
- Be sure to turn the main switches of the transmitter and the receiver OFF when they are not in use.
- When the batteries of the transmitter wear out, replace both at the same time with new ones of the same brand.

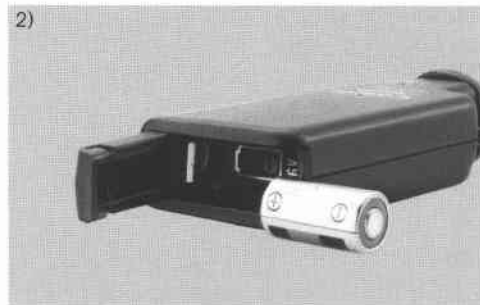

## 2. Checking Batteries

### Receiver

- 1) Set the main switch to either Ch,A or Ch,B.
- 2) Press the red battery check button on the side of the receiver. If the operation confirmation lamp lights up every time you press the button, the battery power is sufficient.

### Note

- A battery check button for the transmitter is not provided. If the operation confirmation lamp of the receiver lights up when the transmission switch is pressed, the battery power is sufficient.



## 3. Setting Channel

- 1) Set both the transmitter and the receiver to the same channel — if the transmitter is set to Ch,A, the receiver must be set to Ch,A too. Otherwise correct operation of the Wireless Controller LC-2 is not possible.
- 2) If you want to control two cameras onto which two separate receivers are mounted in series rather than simultaneously, with one transmitter, set each receiver to a different channel — one must be set to Ch,A and the other to Ch,B — and change the channel on the transmitter in succession.



 
## 4. Mounting Receiver on Camera

- 3) If you use two separate sets of the Wireless Controller LC-2 in the same field, make sure that each is set to a different channel.
- 4) When you try to control one camera with plural transmitters, there is a possibility that the Wireless Controller LC-2 may not function if you press the transmission switches of more than one transmitter at the same time.

- 1) Loosen the lock nut and slide the receiver into the camera's accessory shoe.
- 2) Tighten the lock nut.



3) Screw the plug at the end of the connecting cord directly into the camera's remote control terminal.

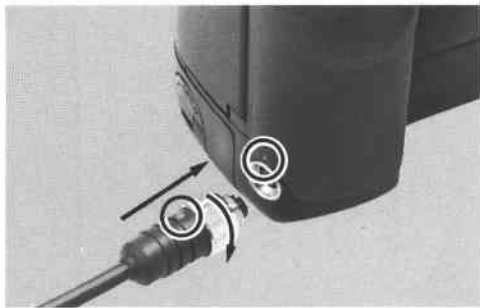

4) Rotate the receiver until the sensor faces in the direction of the transmitter. The receiver's square attachment foot fits into the camera's accessory shoe in any of four directions and the sensor rotates 360° with click-stops every 30°, to face front, behind or to either side.





## 5. Remote Control Photography

You can choose two remote control modes depending on your shooting objectives.

 
 
- (1) **Standard Mode** — Operates immediately when the transmission switch is pressed.
- (2) **Delay Mode** — Operates 2 secs. after pressing the transmission switch.

- 1) Choose either the standard mode or the delay mode and set the transmitter to one of them.

- 2) Press the transmission switch of the transmitter to take a picture.

When you remove your finger from the transmission switch immediately after the shutter release, the camera automatically winds the film to the next frame and then stops.

When you keep pressing the transmission switch, the operation of the camera is as follows:

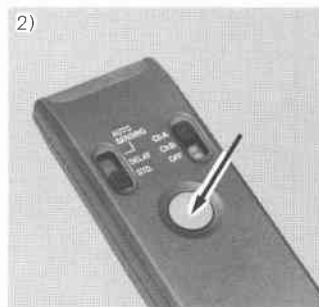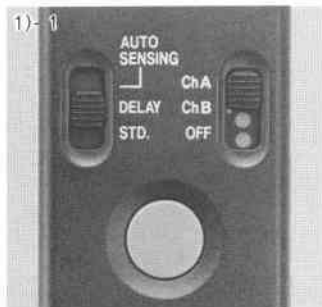

- When using the standard mode

CAMERA	SINGLE EXPOSURE	CONTINUOUS EXPOSURE
T50 T70 T80	(none)	Continuous exposures at about 1.2 frames per second.
T90	After exposure the camera automatically advances the film and then stops.	High mode: Continuous exposures at about 2.5 frames per second. Low mode: Continuous exposures at about 2 frames per second.

- When using the delay mode

CAMERA	SINGLE EXPOSURE	CONTINUOUS EXPOSURE
T50 T70 T80	(none)	Continuous exposures at intervals of about 2 secs.
T90	Continuous exposures at intervals of about 2 secs. (in both the single exposure mode and the continuous exposure mode.)	

The first shutter release begins 2 secs. after pressing the transmission switch.


### Notes

 - With the Wireless Controller LC-2, the camera can be controlled from a distance of approx. 5m (16.4ft) on a straight-line course provided that there are no obstacles. However, since environmental conditions such as temperature and sunlight may shorten the distance, be sure to check whether or not remote control photography from the desired distance is possible before shooting.
- When a flash unit is mounted on the camera's accessory shoe, it is possible to attach the Wireless Controller LC-2 to the camera with the accessory bracket.
- Cover the eyepiece to prevent stray light from entering at the rear. If an eyepiece cover or shutter is not available, use a black cloth or something similar.

## 6. Auto Sensing Photography

The Wireless Controller LC-2 is equipped with an auto sensing mode which makes the camera release the shutter automatically when a subject blocks the light path between the transmitter and the receiver.

- 1) Make sure that the main switch of the camera is set to OFF.
- 2) With the extension Cord 1000T3 (optional), connect the receiver's connecting cord with the camera's remote control terminal.
- 3) Put both the transmitter and the receiver on a tripod, table or other flat surface.
- 4) Place them at an appropriate distance so that they square face each other as illustrated.

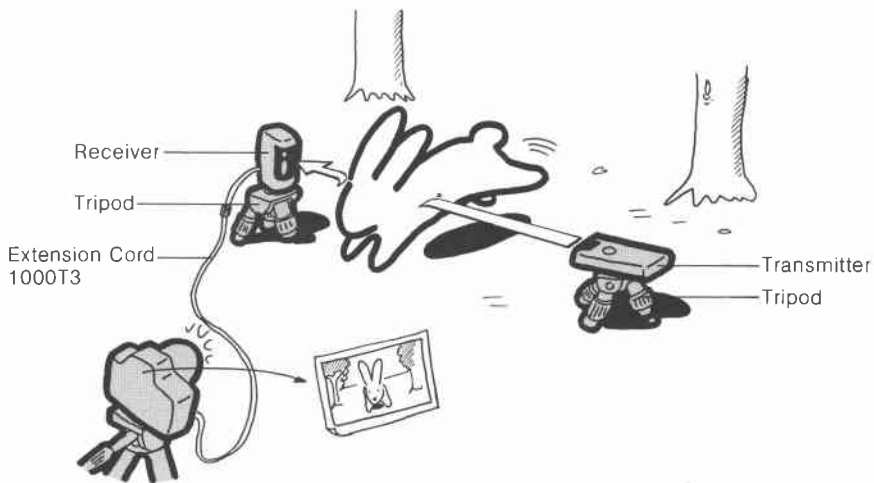


- 5) Compose the picture and focus on where you expect the subject to come.
- 6) Set the same channel on both the transmitter and the receiver.
- 7) Set the transmitter to the auto sensing mode. At this setting, the power is supplied and the Wireless Controller is ready to shoot.
- 8) Check that the operation confirmation lamp lights up: if the lamp lights when you block the light path between the transmitter and the receiver with your hand, the operation is O.K.

- 9) Turn the main switch of the camera ON.
- 10) Each time a certain subject blocks the light path between the transmitter and the receiver as illustrated, the shutter is automatically released.

### Notes

 - Cover the eyepiece to prevent stray light from entering at the rear.
- When using the T80 in combination with the AC lens in this mode, be sure to focus the subject by focusing the lens manually beforehand.

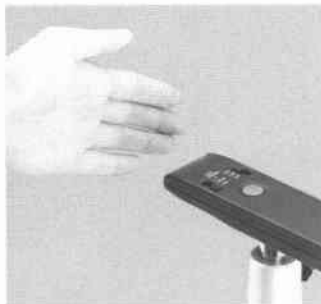

## 7. Storage

---

- Remove the batteries if you do not expect to use the Wireless Controller LC-2 for three weeks or longer.
- Store the Wireless Controller LC-2 in a cool, dry, dust-free place.
- Please avoid storing the Wireless Controller LC-2 in the following places:
  - "Hot spots" such as the trunk, rear window shelf or glove compartment of a car.
  - In direct sunlight.
  - Laboratories or other such areas where chemicals may cause corrosion.

## 8. Specifications

---

**Type:** A wireless controller using infrared light emitted by an infrared LED.

**Usable Cameras:** Canon T-series cameras.

**Operation Range:** Approx. 5m (16.4 ft) in a straight-line course without obstacles in the light path. If the angle between the transmitter and the receiver is 10°, the range is approx. 4m (13.1 ft); if 20°, approx. 3m (9.8 ft).

**Conditions:** Clear weather (with sun no more than 30° from zenith), no obstacles between the transmitter and the receiver, and no highly reflective objects in their immediate vicinity.

**Mode:** Standard mode — operates immediately when the transmission switch is pressed.  
Delay mode — operates 2 secs. after pressing the transmission switch.  
Auto sensing mode — operates immediately when an object blocks the light path between the transmitter and the receiver.

**Number of channels:** 2 (Ch.A and Ch.B)

## Battery life:

Channel	Mode	No. of Operations	Continuous Operating Time
Ch.A/B	Standard	5000	—
	Delay	5000	—
	Auto Sensing	—	4 hrs at 5m (16.4 ft.) 12 hrs at 4m (13.1 ft.) 18 hrs at 3m ( 9.8 ft.)

**Projection Angle:** 40°

**Reception Angle:** 100°

**Operation Confirmation Lamp:** Provided on the receiver. Confirmed when the operation confirmation lamp (red LED) lights up.

**Battery Check:** Provided on the receiver. Checked by pressing the battery check button.

### Power Source:

Transmitter—two size-AA alkaline-manganese batteries.

Receiver—one 4LR44 (6V) alkaline-manganese battery or an equivalent.

### Dimensions:

Transmitter—40(W) × 146(H) × 18.5(D) mm  
(1-9/16" × 5-3/4" × 3/4")

Receiver—21(W) × 114(H) × 40(D) mm  
(13/16" × 4-1/2" × 1-9/16")

### Weight:

Transmitter—60g (2-1/8 ozs) body only

Receiver—70g (2-1/2 ozs) body only

Subject to change without notice.

---

## Télécommande sans fil Canon LC-2

La télécommande sans fil Canon LC-2, spécialement conçue pour les appareils photographiques Canon de la série T, est un dispositif de commande à distance fonctionnant par émission de rayons infrarouges.

La télécommande sans fil LC-2 est composée de l'émetteur, du récepteur et du support, et peut être utilisée en trois modes: le mode standard, qui fonctionne dès que le bouton de commande est actionné; le mode retardement, qui déclenche l'obturateur de l'appareil deux secondes après avoir appuyé sur le bouton de commande; le mode de déclenchement automatique, qui entre en action lorsqu'un objet coupe le rayon de lumière entre l'émetteur et le récepteur. Comme la télécommande sans fil est équipée de deux canaux, vous pouvez aussi commander alternativement deux appareils photo en alternant les canaux.

La LC-2 s'avère très utile pour la chasse photographique, les reportages, et de nombreux autres domaines.

# Canon

CANON INC., 7-1, Nishi-Shinjuku 2-Chome, Shinjuku-ku, Tokyo 163, Japan  
Mailing address: P.O. Box 5050, Dal-chi Seimei Building, Tokyo 163, Japan

- USA \_\_\_\_\_ **CANON U.S.A., INC. HEADQUARTERS**  
One Canon Plaza, Lake Success, N.Y. 11042, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. MANHATTAN SERVICE CENTER**  
600 Third Avenue, New York, N.Y. 10016, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. ATLANTA BRANCH**  
6380 Peachtree Industrial Blvd., Norcross, Georgia 30071, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. CHICAGO BRANCH**  
140 Industrial Drive, Elkharus, Illinois #1128, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. LOS ANGELES BRANCH**  
123 Pasadena Avenue East, Costa Mesa, California 92626, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. LOS ANGELES SERVICE CENTER**  
3121 Wilshire Blvd., Los Angeles, California 90010, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. SANTA CLARA BRANCH**  
4000 Burton Drive, Santa Clara, California 95054, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. DALLAS OFFICE**  
3200 Regent Blvd., Irving, Texas 75039-3145, U.S.A.
- \_\_\_\_\_ **CANON U.S.A., INC. HONOLULU OFFICE**  
Bldg. B-2, 1050 Ala Moana Blvd., Honolulu, Hawaii 96814, U.S.A.
- CANADA \_\_\_\_\_ **CANON CANADA, INC. HEADQUARTERS**  
6390 Davis Road, Mississauga, Ontario L5T 1P7, Canada
- \_\_\_\_\_ **CANON CANADA INC. MONTREAL SERVICE CENTRE**  
10652 Côte de Lipshaw, Lachine, Quebec H8T 1A5, Canada
- \_\_\_\_\_ **CANON CANADA INC. CALGARY OFFICE**  
2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada
- \_\_\_\_\_ **CANON EUROPA N.V.**  
P.O. Box 7907, 1006 AC, Amsterdam, The Netherlands
- \_\_\_\_\_ **CANON FRANCE-PHOTO CINEMA S.A.**  
30, boulevard Villat-Bouhot, Ile de la Jatte, 92521 Neuilly-sur-Seine, France
- \_\_\_\_\_ **CANON UK LTD.**  
Units 4 & 5, Brent Trading Centre, North Circular Road, London NW10 0JF, United Kingdom
- \_\_\_\_\_ **CANON EURO-PHOTO G.m.b.H.**  
Lennestraße 142-156, D-4156 Willich 3, West Germany
- CENTRAL & SOUTH AMERICA \_\_\_\_\_ **CANON LATIN AMERICA, INC. DEPTO. DE VENTAS**  
Apartado 7022, Panama 5, República de Panamá
- \_\_\_\_\_ **CANON LATIN AMERICA, INC. CENTRO DE SERVICIO Y REPARACION**  
Apartado 2019, Zona Libre de Colón, República de Panamá
- SOUTHEAST ASIA \_\_\_\_\_ **CANON HONG KONG TRADING CO., LTD.**  
Golden Bear Industrial Centre, 7/F., 99-82 Cheung Wan Kok Street, Tsuen Wan, New Territories, Hong Kong
- \_\_\_\_\_ **CANON SINGAPORE PTE. LTD.**  
95 South Bridge Road #13-01/15, South Bridge Centre, Singapore 0105
- OCEANIA \_\_\_\_\_ **CANON AUSTRALIA PTY. LTD.**  
Unit 1/37, Waterloo Road, North Ryde (McQuarrie Park), N.S.W. 2113, Australia
- JAPAN \_\_\_\_\_ **CANON SALES CO., INC.**  
11-28, Mita, 3-Chome, Minato-ku, Tokyo 108, Japan

# Canon

キヤノン株式会社  
キヤノン販売株式会社

〒108 東京都港区三田3-11-28  
カメラ相談室 (03) 455-9353

### ◎サービスステーション・営業所

- 札幌 札幌市中央区北三条西4-1 (第一生命ビル) ☎(011) 231-1353
- 仙台 千980 仙台市一番町1-1-30 (山王生命仙台ビル) ☎(0222) 66-4151
- 山形 千963 鶴岡郡山形市緑道2-38-13 ☎(0249) 22-5618
- 新潟 千950 新潟市東大通1-4-1 (マルタケビル) ☎(0252) 43-2111
- 東京 千104 東京都中央区銀座5-9-9 ☎(03) 573-7834
- 茨城 千163 東京都新宿区西新宿2-6-1 (住友三井ビル地下1階) ☎(03) 346-4725
- 茨城 千221 茨城県神奈川郡鹿嶋市3-30-4 (安田生命横浜西口ビル) ☎(045) 312-0211
- 大宮 千330 大宮市大宮町2-273 ☎(0466) 66-3930
- 埼玉 千420 さいたま市緑区2-7-2 (舞ふ会館) ☎(0542) 55-2241
- 千葉 千564 千葉県市川区中野1-21-7 (三友ビル) ☎(052) 563-6822
- 千葉 千530 千葉県市川区南田1-8-17 (第一生命ビル) ☎(06) 941-9335
- 都心 千604 東京都千代田区有明3-1-1 (キヤノン販売有明ビル) ☎(05) 241-0216
- 横浜 千220 横浜市中区2-266 ☎(0762) 91-1215
- 高松 千760 高松市柳道町9-6 (高松大同生命ビル) ☎(0878) 22-3666
- 山形 千970 山形市中山下1-9-40 (新山山ビル) ☎(0862) 22-8228
- 山形 千730 広島市中区小町2-30 (第二有明ビル) ☎(082) 245-7971
- 福岡 千812 福岡市博多区美野島1-2-1 (キヤノン販売福岡ビル) ☎(092) 411-4171
- 福岡 千900 福岡市市井1-2-2 ☎(0988) 67-2106

### ◎営業所

- 群馬 千030 群馬市大平町宇野野35-7 (東和ビル) ☎(0177) 75-1666
- 群馬 千020 群馬市土室3-2-15 (工藤ビル) ☎(0186) 46-8710
- 水戸 千390 水戸市筑波町10-22 (筑波町ビル) ☎(0263) 26-5549
- 千葉 千280 千葉市求道2-13-2 ☎(0472) 61-5121
- 大分 千870 大分市城崎町1-3-31 (富士火災大分ビル) ☎(0975) 37-4117
- 熊本 千832 熊本市中央区西小町3-22 (住友生命熊本ビル) ☎(0992) 24-3141
- ◎サービスセンター
- 大阪 千108 東京都港区港町2-13-29 ☎(03) 450-2731
- 大阪 千540 大阪府北区高倉中央2-10-9 ☎(06) 941-1076

### ◎休務の二案内

新宿(第3本町日) 銀座・南田(日曜日) 祝日その他(土・日曜日・祝日)

PUB. C-11-125  
1185N3

©CANON INC. 1985  
CY8-6571-009

PRINTED IN JAPAN  
IMPRIME AU JAPON

Download from Www.Somanuals.com. All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>