

Instructions for Canon Chip-Resettters

Instructions for Canon CLI-8 SERIES and PGI-5 SERIES Chip-Resettters

The main purpose of the Chip is to monitor ink levels and to provide an on-screen message, telling you that the cartridge is empty. Your CHIP-RESETTER allows you to restore this function and, once you have refilled your cartridge, resume full use.

1. Slide the black (PGI-5) cartridge, Chip facing the CHIP-RESETTER, into the guide. **(picture 1)**



2. Push the cartridge down to ensure that the Chip touches the contact plate. The short flash signals the contact has been made. The following continuous LED-light tells you that the programming has been successfully completed. The cartridge can be removed.

3. To program the colour (CLI-8) cartridges, slide the provided adapter into place and repeat the process, as described for the black (PGI-5) cartridge. **(picture 2)**



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>