

This guide explains how to set digital functions, shoot images, and playback images. You can take this guide with you for shooting. For detailed instructions, refer to the EOS DIGITAL REBEL XS/EOS 1000D Instruction Manual.



# Quick Start Guide

**1** **Insert the battery.**

**2** **Attach the lens.**  
When attaching an EF-S lens, align it with the white index on the camera. For other lenses, align it with the red index.

**3** **Set the lens focus mode switch to <AF>.**

**4** **Open the cover and insert a card.**

**5** **Set the power switch to <ON>.**

**6** **Set the Mode Dial to <□> (Full Auto).**  
All the necessary camera settings will be set automatically.

**7** **Focus the subject.**  
Aim the AF point over the subject and press the shutter button halfway to autofocus.

**8** **Take the picture.**  
Press the shutter button completely to take the picture.

**9** **View the image.**  
The captured image will be displayed for about 2 sec. on the LCD monitor.

The ★ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, A-DEP).



● **Battery Life**

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 600 shots	Approx. 500 shots

# Setting Digital Functions

## Menu Operations

To use a menu, you press the <MENU> button, <⬅➡> cross keys, and <SET> button while looking at the LCD monitor on the camera back.

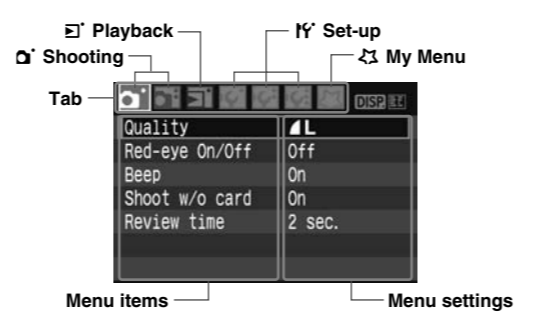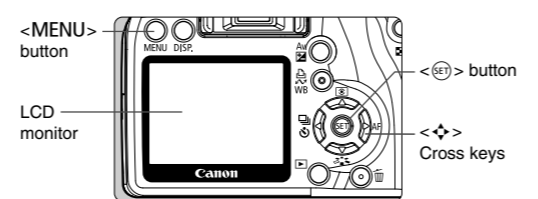

\* The [Shooting/Playback/Set-up/My Menu] tabs are not displayed in Basic Zone modes such as Full Auto. Download from Wwww.Somanuals.com. All Manuals Search And Download.

**1** **Display the menu.**  
● Press the <MENU> button to display the menu.

**2** **Select a tab.**  
● Press the <⬅➡> key to select a menu tab.  
● You can also turn the <☀> dial to select a tab.

**3** **Select a menu item.**  
● Press the <▲▼> key to select the menu item, then press <SET>.

**4** **Select the setting.**  
● Press the <▲▼> or <⬅➡> key to select the setting. (Some settings require you to press either the <▲▼> or <⬅➡> key to select it.)

**5** **Set the desired setting.**  
● Press <SET> to set it.

**6** **Exit the menu.**  
● Press the <MENU> button to return to the shooting settings display.

## Menu Settings

**Shooting 1**

- Quality
- Red-eye On/Off Off
- Beep On
- Shoot w/o card On
- Review time 2 sec.

**Shooting 2**

- AEB -2..1..0..1..2
- Flash exp comp -2..1..0..1..2
- Custom WB
- WB SHIFT/BKT 0, 0/+0
- Color space sRGB
- Picture Style Standard
- Dust Delete Data

**Playback**

- Protect images
- Rotate
- Erase images
- Print order
- Transfer order
- Histogram Brightness
- Auto play

**Set-up 1**

- Auto power off 30 sec.
- File numbering Continuous
- Auto rotate On
- LCD off/on btn Shutter btn.
- Screen color 1

**Set-up 2**

- LCD brightness
- Date/Time 05/24/08 16:30
- Language English
- Video system NTSC
- Sensor cleaning
- Live View function settings
- Flash control

**Set-up 3**

- Custom Functions (C. Fn)
- Clear settings
- Firmware Ver. 1.0.0

These screens apply when a Creative Zone mode is set.  
[Shooting/Playback/Set-up] menu screens or the items indicated by the ► symbol are not displayed when a Basic Zone mode is set.

## Image-recording Quality

● Select [Quality].  
● For the selected recording quality (A), the respective pixel count (B) and number of possible shots (C) will be displayed.

Quality	Pixels	File Size (Approx. MB)	Possible Shots	Maximum Burst
High quality	Approx. 10.1 megapixels (10M)	3.8	514	514
Medium quality	Approx. 5.3 megapixels (5.3M)	2.3	859	859
Low quality	Approx. 2.5 megapixels (2.5M)	1.3	1474	1474
High quality (RAW)	Approx. 10.1 megapixels (10M)	9.8	199	5
High quality (RAW+)	Approx. 10.1 megapixels (10M)	9.8 + 3.8	143	4

● In Basic Zone modes, the RAW and RAW+ recording quality modes are not displayed.  
● The file size, number of possible shots, and maximum burst during continuous shooting vary depending on the shooting conditions. The figures displayed are only estimates.  
● The maximum burst during continuous shooting is displayed on the bottom right in the viewfinder.

## Picture Style ★


● Press the <▼> button.  
● Press the <▲▼> key to select the Picture Style, then press <SET>.



Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Neutral	Natural colors and dull tones.
Faithful	Accurate subject colors as obtained under a color temperature of 5200K.
Monochrome	Black-and-white images.

# Setting Digital Functions

## ISO: ISO Speed \*

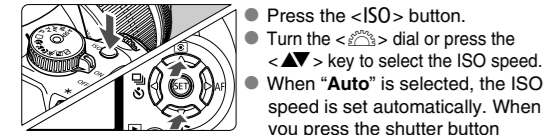


- Press the <ISO> button.
- Turn the <▲> dial or press the <▲> key to select the ISO speed.
- When "Auto" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.

Low ISO For bright scenes and still subjects (less noise and finer grain).

High ISO For low light and moving subjects (more grain).

## WB: White Balance \*


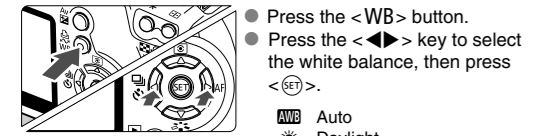


- Press the <WB> button.
- Press the <▲> key to select the white balance, then press <SET>.

- AWB Auto
- Daylight
- Shade
- Cloudy, twilight, sunset
- Tungsten light
- White fluorescent light
- Flash
- Custom

# Shooting Operation

## Nomenclature

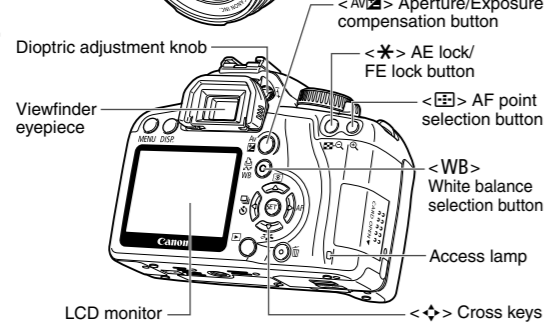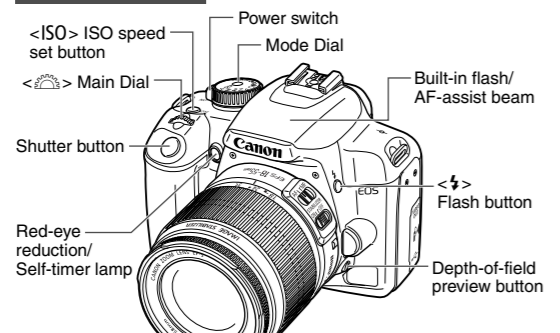

## Shooting Settings Display

## Viewfinder Information

## Basic Zone Modes

All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Select the shooting mode to suit your subject.
- Aim an AF point on the subject.
- Press the shutter button halfway to focus.
- Check the display.
- Compose the shot and press the shutter button completely.

## Creative Zone Modes

You can set the shutter speed and/or aperture and change the exposure as desired. By changing the camera settings, you can obtain various effects.

### P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the <□> mode. The shooting procedure is the same as with Basic Zone modes.

## Tv: Shutter-priority AE

- Set the Mode Dial to <Tv>.
- Turn the <▲> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <▲> dial until it stops blinking.

## Av: Aperture-priority AE

- Set the Mode Dial to <Av>.
- Turn the <▲> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <▲> dial until it stops blinking.

## Using the Built-in Flash

In Basic Zone Modes  
If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions. (except in the <A-DEP> <M> <B> modes)

## Creative Zone Modes

Press the <⚡> button to pop up the built-in flash, then shoot.

ISO Speed	Wide-angle: 18 mm	Telephoto: 55 mm
100	Approx. 1-3.7m (3.3-12.1ft)	Approx. 1-2.3m (3.3-7.5ft)
400	Approx. 1-7.4m (3.3-24.3ft)	Approx. 1-4.6m (3.3-15.1ft)
1600	Approx. 1-14.9m (3.3-48.9ft)	Approx. 1-9.3m (3.3-30.5ft)

Using EF-S18-55mm f/3.5-5.6 IS lens

## AF: AF Mode \*

- Press the <▶ AF> button.
- Press the <▲> key to select the AF mode, then press <SET>.

**ONE SHOT (One-Shot AF):** For still subjects

**AI FOCUS (AI Focus AF):** Switches the AF mode automatically

**AI SERVO (AI Servo AF):** For moving subjects

## AF Point \*

- Press the <AF> button.
- Press the <♦> key to select the AF point.
- While looking at the viewfinder, you can select the AF point by turning the <▲> dial until the desired AF point flashes in red.
- Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.

## Metering Mode \*

- Press the <▲> button.
- Press the <▲> key to select the metering mode, then press <SET>.

**Evaluative metering:** Standard metering mode

**Partial metering:** Approx. 10% at center

**Center-weighted average metering:** Metering weighted at the center and averaged for the entire scene

## Drive Mode \*

- Press the <▶> button.
- Press the <▲> key to select the drive mode, then press <SET>.

**□: Single shooting**

**▶: Continuous shooting**

**⌚10: 10-sec. self-timer \***

**⌚2: 2-sec. self-timer**

**⌚c: Continuous shots after self-timer \***

\* The <⌚10> and <⌚c> drive modes can be selected in all shooting modes.

# Playback Operation

## Shooting Information

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>