

# Canon

## *PowerShot SX120 IS* Camera User Guide



 
**ENGLISH**

- Make sure you read this guide before using the camera.
- Store this guide safely so that you can use it in the future.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Checking the Package Contents

Check if the following items are included in your camera package. If anything is missing, contact the retailer from which you purchased the camera.




Camera



AA-size Alkaline  
Batteries (x2)



 Memory Card



Interface Cable  
IFC-400PCU



AV Cable  
AVC-DC400



Wrist Strap WS-800



Getting Started



DIGITAL CAMERA  
Solution Disk



Warranty  
Card



"Canon Customer  
Support" Leaflet

### Using the PDF Manuals

Also refer to the PDF manuals on the CD-ROM. After installation, shortcut icons appear on the desktop. If the software installation fails, you can find the manuals in the **Readme** folder on the CD-ROM.

- **Camera User Guide (This Guide)**

Once you have mastered the basics, use the camera's many features to shoot more challenging photos.

- **Personal Printing Guide**

Read when you want to connect the camera to a printer (sold separately) and print.

- **Software Guide**

Read when you want to use the included software.



- You can use the included memory card to try out your new camera and take some test shots.
- Adobe Reader is required to view the PDF manuals.

## Read This First

### Test Shots

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

### Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

### Warranty Limitations

This camera's warranty is only effective in the country of sale. If there is a problem with the camera while abroad, please return it to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk. For Canon Customer Support contacts, please see the customer support list supplied with your camera.

### LCD Monitor

- The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. This is not a malfunction and has no effect on the recorded image.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If so, remove the film before using the camera.

### Camera Body Temperature

Please take care when operating the camera for an extended period as the camera body may become warm. This is not a malfunction.

### Memory Cards

The various types of memory cards that can be used in this camera are collectively referred to as memory cards in this guide.

# What Do You Want to Do?

## Shoot



- Shoot, leaving it to the camera to make settings . . . . . 22
- Just take pictures (Easy mode). . . . . 29
- Shoot to match special conditions. . . . . 56 – 59

### Take good people shots



Portraits  
(p. 56)



At night  
(p. 56)



Kids and pets  
(p. 56)



At the beach  
(p. 58)



Against snow  
(p. 59)

### Take good landscapes



Landscape  
(p. 56)



Sunsets  
(p. 58)



Night Scene  
(p. 58)



Foliage  
(p. 59)

### Shoot various other scenes



Indoors  
(p. 57)



Fireworks  
(p. 58)



Aquarium  
(p. 58)



Low light  
(p. 59)

 
- Focus on faces . . . . . 22, 64, 78, 81
- Take pictures with me in them too (self-timer) . . . . . 63, 64, 74, 75
- Insert the date and time into my shots . . . . . 62
- Take close-up pictures of subjects (macro shooting) . . . . . 67
- Take sepia toned or black and white pictures. . . . . 73
- Change the size of picture I want to take (recording pixels) . . . . . 68
- Take pictures continuously . . . . . 72
- Shoot without the effects of camera shake (image stabilization) . . . . . 121
- Shoot without the effects of camera shake even in low light conditions (High ISO Auto) . . . . . 59, 70
- Make dark subjects appear brighter (i-Contrast). . . . . 90

**View**

- Look at my pictures . . . . . 25
- Easy Playback (Easy Mode) . . . . . 30
- Automatically play back pictures (slideshow) . . . . . 102
- Look at my pictures on a TV . . . . . 105
- Quickly search pictures . . . . . 100, 101
- Erase pictures . . . . . 26, 30, 107
- Protect pictures from accidental erasure . . . . . 106

**Shoot/View Movies**

- Shoot movies . . . . . 31
- View movies . . . . . 33, 98

**Print**

- Easily print pictures . . . . . 27

**Save**

- Save images to a computer . . . . . 34

**Other**

- Turn off sounds . . . . . 49
- Use the camera abroad . . . . . 40

# Table of Contents

Chapters 1 – 3 explain the basic operations and frequently used functions of this camera. Chapters 4 onward explain the advanced functions, letting you learn more as you read each chapter.

Checking the Package Contents .....	2
Read This First .....	3
What Do You Want to Do? .....	4
Conventions Used in this Guide .....	8
Safety Precautions.....	9

## 1 Getting Started ..... 13

Inserting the Batteries and Memory Card .....	14
Setting the Date and Time .....	18
Setting the Display Language.....	20
Pressing the Shutter Button.....	21
Taking Pictures .....	22
Viewing Images .....	25
Erasing Images.....	26
Printing Images.....	27
Shooting in Easy mode.....	29
Viewing or Erasing in Easy mode ...	30
Shooting Movies .....	31
Viewing Movies.....	33
Transferring Images to a Computer .....	34
Accessories .....	38
Separately Sold Accessories .....	40

## 2 Learning More..... 41

Components Guide.....	42
Information Displayed on the Screen .....	44
Indicator .....	46
FUNC. Menu – Basic Operations .....	47
MENU – Basic Operations .....	48
Changing the Sound Settings.....	49
Changing the Screen Brightness.....	50
Returning the Camera to Default Settings.....	51

Formatting Memory Cards .....	52
Power Saving Function (Auto Power Down).....	54

## 3 Shooting in Special Conditions and Commonly Used Functions..... 55

Shooting in Various Conditions .....	56
Shooting in Special Scenes .....	57
Zooming in More Closely on Subjects (Digital Zoom).....	60
Inserting the Date and Time.....	62
Using the Self-Timer .....	63
Using the Face Self-Timer .....	64


## 4 Choosing Settings Yourself ..... 65

Shooting in Program AE.....	66
Turning the Flash On .....	66
Adjusting the Brightness (Exposure Compensation) .....	67
Shooting Close-ups (Macro) .....	67
Changing the Recording Pixels (Image Size).....	68
Changing the Compression Ratio (Image Quality).....	68
Changing the ISO Speed .....	70
Adjusting the White Balance .....	71
Continuous Shooting.....	72
Changing the Tone of an Image (My Colors).....	73
Shooting Using the Two Second Self-Timer.....	74
Customizing the Self-Timer.....	75
Changing the Composition with the Focus Lock.....	76

Shooting Using a TV Monitor .....	76	Magnifying Images .....	104
<b>5 Getting More Out of Your Camera ..... 77</b>		Changing Image Transitions .....	104
Changing the AF Frame Mode.....	78	Viewing Images on a TV .....	105
Magnifying the Focal Point.....	79	Protecting Images .....	106
Shooting with the AF Lock .....	80	Erasing All Images .....	107
Choosing the Person to Focus On (Face Select).....	81	Rotating Images .....	108
Changing the Metering Mode.....	82	Resizing Images.....	109
Shooting in Manual Focus Mode ....	83	Correcting the Brightness (i-Contrast) .....	110
Shooting with the AE Lock.....	84	Correcting the Red-Eye Effect.....	111
Shooting with the FE Lock .....	85	Choosing Images for Printing (DPOF).....	112
Shooting with Slow Synchro .....	86	<b>8 Customizing the Camera .... 115</b>	
Setting the Shutter Speed.....	87	Changing Functions .....	116
Setting the Aperture Value.....	88	Changing Shooting Functions .....	119
Setting the Shutter Speed and Aperture Value .....	89	Changing Playback Functions.....	122
Correcting the Brightness and Shooting (i-Contrast).....	90	<b>9 Useful Information ..... 123</b>	
Red-Eye Correction .....	91	Replacing the Date/Time Battery .....	124
Adjusting the Flash Exposure Compensation.....	92	Using Household Power.....	125
Adjusting the Flash Output.....	93	Troubleshooting.....	126
<b>6 Using Various Functions for Shooting Movies ..... 95</b>		List of Messages that Appear on the Screen .....	129
Changing the Image Quality .....	96	Handling Precautions .....	131
AE Lock/Exposure Shift .....	97	Functions Available in Each Shooting Mode .....	132
Other Shooting Functions .....	97	Menus.....	134
Playback Functions.....	98	Specifications .....	138
<b>7 Using Playback and Other Functions ..... 99</b>		Index.....	140
Quickly Searching Images (Index Display).....	100		
Searching for Images Using the Jump Display .....	101		
Viewing Slideshows .....	102		
Checking the Focus .....	103		

## Conventions Used in this Guide

- Icons are used in the text to represent the camera buttons and switches.
- Language that displays on the screen appears inside [ ] (square brackets).
- The directional buttons, control dial, and FUNC./SET button are represented by the following icons.

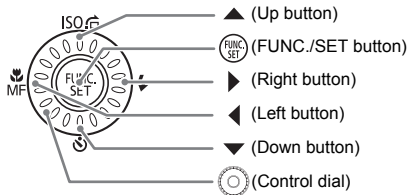

- : Troubleshooting tips.
- : Hints for getting more out of your camera.
- : Things you should be careful about.
- : Supplemental information.
- (p. xx): Reference pages. "xx" stands for page number.
- This guide assumes all functions are at their default settings.



# Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.



**Warning** Denotes the possibility of serious injury or death.



**Caution** Denotes the possibility of injury.

**Caution** Denotes the possibility of damage to the equipment.

## Warning

### Camera

- **Do not trigger the flash in close proximity to human eyes.**  
Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.
- **Store this equipment out of the reach of children and infants.**  
Strap: Putting the strap around a child's neck could result in asphyxiation.  
Memory card, day/date battery: Dangerous if accidentally swallowed. If this occurs, contact a doctor immediately.
- **Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.**
- **To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.**
- **Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not use organic solvents such as alcohol, benzene, or thinner to clean the equipment.**
- **Do not allow liquids or foreign objects to enter the camera.**  
This could result in fire or electrical shock.  
If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the batteries.
- **Use only recommended power sources.**  
Using other power sources could result in fire or electrical shock.

### Battery

- Use only recommended batteries.
- Do not place the batteries near or in direct flame.
- Do not let the batteries come into contact with water (e.g. sea water) or other liquids.
- Do not attempt to disassemble, alter or apply heat to the batteries.
- Avoid dropping or subjecting the batteries to severe impacts.  
This may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance.

### Other Warnings

- Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs.  
Playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers. It is also possible to suffer hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player.



### Caution

- Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.
- Be careful not to bump or push strongly on the lens.  
This could damage the camera or lead to injury.

---

- Avoid using, placing or storing the camera in the following places.
  - Places subject to strong sunlight.
  - Places subject to temperatures above 40 °C (104 °F).
  - Humid or dusty areas.These could cause leakage, overheating or an explosion of the batteries, resulting in electrical shock, fire, burns or other injuries. High temperatures may also cause deformation of the casing.

---

- When using the flash, be careful not to cover it with your fingers or clothing.  
This could result in burns or damage to the flash.

## Caution

- **Do not aim the camera at bright light sources (the sun, etc.).**  
Doing so may cause malfunctions or damage the image sensor.
- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**  
This may cause the camera to malfunction.

---

- **In regular use, small amounts of smoke may be emitted from the flash.**  
This is due to the high intensity of the flash burning dust and foreign materials stuck to the front of the unit. Please use a cotton swab to remove dirt, dust or other foreign matter from the flash to prevent heat build-up and damage to the unit.

---

- **Remove and store the batteries when you are not using the camera.**  
If the batteries are left inside the camera, damage caused by leakage may occur.

---

- **Before you discard batteries, cover the terminals with tape or other insulators.**  
Contacting other metal materials in waste containers may lead to fire or explosions.

---

- **Do not sit in a chair with the camera in your pocket.**  
Doing so may cause malfunctions or damage the LCD monitor.

---

- **When putting the camera in your bag, ensure that hard objects do not come into contact with the LCD monitor.**

---

- **Do not attach accessories to the strap.**  
Doing so may cause malfunctions or damage the LCD monitor.






# Getting Started

This chapter explains preparations before shooting, how to shoot in **AUTO** mode, and then how to view, erase and print the images you take. The latter part of this chapter explains how to shoot and view images in Easy Mode, how to shoot and view movies and how to transfer images to a computer.

---


## Attaching the Strap/Holding the Camera

- Attach the included strap and place it around your wrist to avoid dropping the camera during use.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash while it is raised.

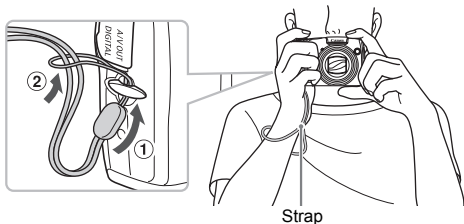


# Inserting the Batteries and Memory Card

 Insert the included batteries and memory card into the camera.




## 1 Check the card's write-protect tab.

- If the memory card has a write-protect tab, you will not be able to record images if the tab is in the locked position. Slide the tab up until you hear a click.

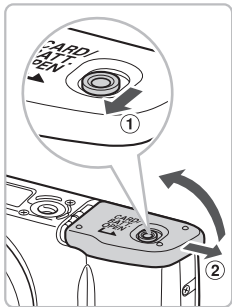


## 2 Open the cover.

- Slide and hold the cover lock ①, then slide and open the cover ② as shown.

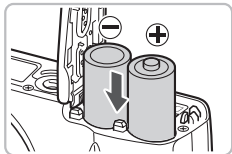

## 3 Insert the batteries.


- Insert the batteries with (+) and (-) ends oriented correctly.

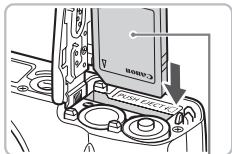

## 4 Insert the memory card.

- Insert the memory card as shown until it locks into place with a click.
- Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera.


Label

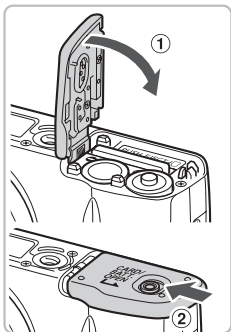

## 5 Close the cover.

- Close the cover ① and press downward as you slide it until it clicks into place ②.

## Removing the Memory Card

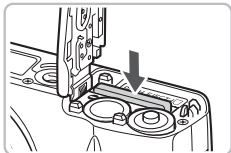

- Push the memory card in until you hear a click, then slowly release it.
- ▶ The memory card will pop up.

## Approximate Number of Shots That Can Be Taken

Power Source	Alkaline Batteries (Supplied)	NiMH Batteries (Sold Separately)
Number of Shots*	130	370
Playback Time (Hours)	7	9

\* The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.

- Under some shooting conditions, fewer shots can be taken.
- Depending on the brand of alkaline batteries used, the number of shots that can be taken may vary widely.
- The values for NiMH batteries are based on fully charged batteries.

### Compatible Batteries

AA-size alkaline batteries and Canon AA-size NiMH batteries (sold separately) (pp. 38, 40).



#### Can any other batteries be used?

We cannot recommend the use of any other batteries than those listed above because performance varies widely.



#### Why use NiMH batteries?

NiMH batteries last much longer than alkaline batteries, especially in cold weather.

### Battery Charge Indicator

When battery charge is low, an icon and message will appear. If the batteries are charged, the icon and message will not display.

Display	Summary
	Battery charge is low. Prepare new batteries to continue using the camera.
"Change the batteries"	The batteries are depleted. Insert new batteries.



## Approximate Number of Shots per Memory Card

<b>Memory Card</b>	2 GB	8 GB
<b>Number of shots</b>	749	2994

- Values are based on the default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.


### ? Can you check the number of shots that can be taken?

You can check the number of shots that can be taken when the camera is in a Shooting mode (p. 22).

Number of shots that can be taken



## Compatible Memory Cards

- SD memory cards
- SDHC memory cards 
- MultiMediaCards
- MMCplus memory cards
- HC MMCplus memory cards

### ? What is the write-protect tab?

SD and SDHC memory cards have a write-protect tab. If this tab is in the locked position, [Card locked!] will appear on the screen and you will not be able to take or erase images.


## Setting the Date and Time

The Date/Time settings screen will appear the first time the camera is turned on. Since the dates and times recorded into your images are based on these settings, be sure to set them.




### 1 Turn on the camera.

- Press the power button.
- ▶ The Date/Time screen will appear.

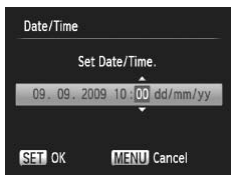


### 2 Set the date and time.

- Press the ◀▶ buttons to choose an option.
- Press the ▲▼ buttons or turn the  dial to set a value.



### 3 Make the setting.

 
- Press the  button.
- ▶ Once the date and time have been set, the Date/Time screen will close.
- Pressing the power button will turn off the camera.

## ? Reappearing Date/Time screen

Set the correct date and time. If you have not set the date and time, the Date/Time screen will appear each time you turn on the camera.

## Changing the Date and Time

You can change the current date and time settings.




### 1 Display the menus.

- Press the **MENU** button.



### 2 Choose [Date/Time] in the **YT** tab.

 - Press the **◀▶** buttons to choose the **YT** tab.
- Press the **▲▼** buttons or turn the **○** dial to choose [Date/Time], then press the **FUNC. SET** button.



### 3 Change the date and time.

- Follow Steps 2 and 3 on p. 18 to adjust the setting.
- To close the menus, press the **MENU** button.



#### Date/Time battery

If the [Date/Time] screen appears even when the date/time have been correctly set, insert a new date/time battery (p. 124).

 
# Setting the Display Language

You can change the display language in the LCD monitor menus and messages.




## 1 Enter Playback mode.

- Press the  button.









## 2 Display the settings screen.



- Press and hold the  button ①, then immediately press the **MENU** button ②.



## 3 Set the display language.

 
- Press the     buttons or turn the  dial to choose a language, then press the  button.
- ▶ Once the display language has been set, the language menu will close.



You can also change the display language by pressing the **MENU** button, choosing the   tab, and choosing the [Language] menu item.


## Pressing the Shutter Button

The shutter button has two stops. To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then take the shot.



### 1 Press halfway (lightly to the first stop).

 - ▶ The camera automatically focuses and selects the necessary settings for shooting, such as the brightness.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.



### 2 Press fully (to the second stop).

- ▶ The camera plays the shutter sound and takes the shot.
- Since the shot is being taken while the shutter sound plays, be careful not to move the camera.



### Does the length of the shutter sound change?

 
- Since the time required to shoot differs according to the scene you want to take, the length of the shutter sound may change.
- If the camera or subject moves while the shutter sound is playing, the recorded image may be blurry.



If you just press the shutter button fully without pausing halfway, the image may not be in focus.

# Taking Pictures

Since the camera can determine the subject and shooting conditions, you can let it automatically select the best settings for the scene and just shoot. The camera can also detect and focus on faces, setting the color and brightness to optimal levels.



## 1 Turn on the camera.

- Press the power button.
- ▶ The start-up sound will play, and the start-up screen will appear.
- Pressing the power button again will turn the camera off.

 



## 2 Choose **AUTO** mode.

- Set the mode dial to **AUTO**.
- When you point the camera toward the subject, the camera will make a slight noise as it determines the scene.
- ▶ The camera focuses on the subject it judges to be the main subject, and the icon for the determined scene appears in the upper right of the screen.
- ▶ When faces are detected, a white frame appears on the face of the main subject, while gray frames appear on other detected faces.
- ▶ Even if the detected faces move, the camera will follow the faces within a certain range.




## 3 Compose the shot.

- Moving the zoom lever toward  will zoom in on your subject, making it appear larger. Moving the lever toward  will zoom out from your subject, making it appear smaller.
- Keep your subject within the available focusing range that appears on the screen for a given zoom position.

Focus range (approx.)

 Zoom bar



## 4 Focus.

- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.



AF Frames

- ▶ Green AF frames appear where the subject is in focus.
- ▶ Several AF frames will appear when the camera focuses on more than one point.
- If the indicator lights orange and “Raise the flash” appears on the screen, it is recommended to shoot with the flash. Raise the flash manually, it will fire when you shoot. When you are not using the flash, lower it until it closes (the flash will turn off).




## 5 Shoot.

- Press the shutter button fully.
- ▶ The camera will play the shutter sound and shoot.
- ▶ The indicator will blink green while the image is recorded to the memory card.
- ▶ The image will appear on the screen for about two seconds.
- You can take a second picture even while an image is displayed by pressing the shutter button again.





### What if...

- **the indicator blinks orange and  blinks on the screen?**

Attach the camera to a tripod so that the camera does not move and blur the image.

- **the camera does not play any sounds?**

Pressing the **DISP.** button while turning on the camera power will turn off all sounds except for warning sounds. To turn the sounds on, press the **MENU** button, choose the  tab, and then choose [Mute]. Press the  buttons to choose [Off].

## Taking Pictures

- **the image comes out dark even if the flash fired when shooting?**  
The subject is too far away for the flash to reach. Shoot within the effective flash range of approximately 50 cm – 4.0 m (1.6 – 13 ft.) at maximum wide angle, and approximately 1.0 – 2.5 m (3.3 – 8.2 ft.) at maximum telephoto.
- **the camera beeps once when the shutter button is pressed halfway?**  
Your subject is too close. When the camera is at maximum wide angle, move about 5 cm (2.0 in.) or more away from your subject and shoot. Move about 1.0 m (3.3 ft.) or more away when the camera is at maximum telephoto.
- **the lamp lights when the shutter button is pressed halfway?**  
To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas.
- **the screen turns off when you try to take an image?**  
When flash recharging begins, the screen turns off. The screen turns on again when recharging ends.

## Scene Icons

The camera displays an icon for the scene it has determined and then automatically focuses and selects the optimum settings for subject brightness and color.

Subject	Bright		Including Blue Skies		Sunsets	Dark	
		Backlit		Backlit			When Using Tripod
People					–		*
Subjects Other Than People/Landscapes	AUTO		AUTO			AUTO	*
Close Subjects					–		–
Icon Background Color	Gray		Light Blue		Orange	Dark Blue	

\* Appears when the camera is attached to a tripod.



Under certain conditions, the icon that appears may not match the actual scene. Especially when there is an orange or blue colored background (a wall for example), or the “Blue Skies” icons may appear and it may not be possible to shoot with the appropriate color. If this happens, try shooting in **P** mode (p. 66).



# Viewing Images

You can view your images on the screen.



 
## 1 Enter Playback mode.

- Press the button.
- ▶ The last image you took will appear.



## 2 Choose an image.

- Pressing the button will cycle through the images in reverse order.
- Pressing the button will cycle through the images in the order they were taken.
- The images change more quickly if you keep the buttons pressed, but they will appear coarse.
- Turning the dial counter-clockwise displays images in reverse order, while turning it clockwise displays images in the order they were taken.
- If you press the shutter button halfway or turn the mode dial while in Playback mode, the camera will switch to Shooting mode.
- The lens will retract after approximately 1 minute elapses.




# Erasing Images

You can choose and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.





 
## 1 Enter Playback mode.

- Press the  button.
- ▶ The last image you took will appear.










 
## 2 Choose an image to erase.

- Press the  buttons or turn the  dial to display an image to erase.



## 3 Erase the image.

- Press the  button.
- ▶ [Erase?] appears.
- Press the  buttons or turn the  dial to choose [Erase], then press the  button.
- ▶ The displayed image will be erased.
- To exit instead of erasing, press the  buttons or turn the  dial to choose [Cancel], then press the  button.




# Printing Images

You can easily print the images you have taken if you connect the camera to a PictBridge compliant printer (sold separately).

## Items to Prepare


- Camera and PictBridge compliant printer (sold separately)
- Interface cable supplied with the camera (p. 2)

### 1 Turn off the camera and printer.

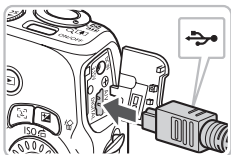



### 2 Connect the camera to the printer.

 - Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.




### 3 Turn on the printer.


 
### 4 Turn on the camera.

- Press the  button to turn on the camera.
- ▶  **SET** will appear on the screen.






### 5 Choose an image to print.

- Press the ◀▶ buttons or turn the  dial to choose an image, then press the  button.



### 6 Print images.

- Press the ▲▼ buttons to choose [Print] and press the  button.
- ▶ Printing will start.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.



- Refer to the *Personal Printing Guide* for details on printing.
- Refer to p. 39 for Canon-brand Pictbridge compliant printers.

 
## Shooting in Easy mode

The explanations of camera operations and behavior below are basically the same as in “Taking Pictures” (p. 22) except that operational instructions appear on the screen, and the camera is set so that only the buttons explained on this page are functional. This prevents incorrect operation of the camera, allowing even beginners to take worry-free pictures.



### 1 Choose mode.

- Set the mode dial to .



### 2 Shoot.

- Follow Steps 3 – 5 on pages 22 – 23 to shoot (no sound will play).
- If the indicator lights orange and “Raise the flash” appears on the screen, it is recommended to shoot with the flash. Raise the flash manually, it will fire when you shoot. When you are not using the flash, lower it until it closes (the flash will turn off).



## Viewing or Erasing in Easy mode

The explanations for viewing or erasing unwanted images are basically the same as in “Viewing Images” (p. 25) and “Erasing Images” (p. 26) except that operational instructions appear on the screen, and the camera is set so that only the buttons explained on this page are functional. This prevents incorrect operation of the camera, allowing even beginners to view or erase images worry-free.




### Viewing Single Images



**1 Press the  button.**

▶ The last image you took will appear.

**2 Choose an image.**

● Press the   buttons or turn the  dial to switch between images.


### Viewing Slideshows



**1 Press the  button.**

**2 Press the  button.**

▶ All the shots you have taken will display for about 3 seconds each.




● Press the  button again to stop the slideshow.

### Erasing Images





 


**1 Press the  button.**

**2 Choose an image to erase.**

▶ Press the   buttons or turn the  dial to choose the image you want to erase.

**3 Erase the image.**

● After pressing the  button, press the   buttons or turn the  dial to choose [Erase]. Then press the  button.

▶ The chosen image will be erased.

# Shooting Movies

The camera can automatically select all settings so that you can shoot movies just by pressing the shutter button.





## 1 Choose mode.

 
- Set the mode dial to .

Shooting Time




## 2 Compose the shot.

- Moving the zoom lever toward  will zoom in on your subject, making it appear larger. Moving the lever toward  will zoom out from your subject, making it appear smaller.



## 3 Focus.

 
- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.



Elapsed Time



 Microphone



### 4 Shoot.

- Press the shutter button fully.
- ▶ The camera will start shooting the movie, and [● Rec] and the elapsed time will appear on the screen.
- Once shooting begins, take your finger off the shutter button.
- If you change the composition of your shot during shooting, the focus, brightness and tone will automatically adjust.
- Do not touch the microphone while shooting.
- Do not press any buttons other than the shutter button. Otherwise, the sound the buttons make will be recorded in the movie.

### 5 Stop shooting.

- Press the shutter button fully again.
- ▶ The camera will beep once and stop shooting the movie.
- ▶ The indicator will blink green, and the movie will record to the memory card.
- ▶ Shooting will automatically stop when the memory card fills.

## Estimated Shooting Times

Memory Card	2 GB	8 GB
Shooting Time	16 min. 47 sec.	1 hr. 7 min. 6 sec.

- Shooting times are based on default settings.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.



# Viewing Movies

You can view your movies on the screen.



## 1 Enter Playback mode.

- Press the button.
- ▶ The last image you shot will appear.
- ▶ appears on movies.



## 2 Choose a movie.

- Press the buttons or turn the dial to choose a movie, then press the button.
- ▶ The movie control panel will appear on the screen.



## 3 Play the movie.

- Press the buttons or turn the dial to choose , then press the button.
- ▶ The movie will play.
- You can pause/resume the movie by pressing the button again.
- Press the buttons to adjust the volume.
- ▶ After the movie finishes, appears.



# Transferring Images to a Computer

You can use the included software to transfer your camera images to a computer. If you are already using ZoomBrowser EX/ImageBrowser, install the software from the included CD-ROM, overwriting your current installation.

## System Requirements

### Windows

OS	Windows Vista (including Service Pack 1 and 2) Windows XP Service Pack 2, Service Pack 3
Computer model	The above OS should be pre-installed on computers with built-in USB ports.
CPU	Pentium 1.3 GHz or higher
RAM	Windows Vista: 1 GB or more Windows XP: 512 MB or more
Interface	USB
Free Hard Disk Space	ZoomBrowser EX: 200 MB or more* PhotoStitch: 40 MB or more
Display	1,024 x 768 pixels or higher

\* For Windows XP, Microsoft .NET Framework 3.0 or later (max. 500MB) must be installed. Installation may take some time depending on your computer's capabilities.

### Macintosh

OS	Mac OS X (v10.4 – v10.5)
Computer model	The above OS should be pre-installed on computers with built-in USB ports.
CPU	PowerPC G4/G5 or Intel Processor
RAM	512 MB or more
Interface	USB
Free Hard Disk Space	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
Display	1,024 x 768 pixels or higher

## Items to Prepare

- Camera and computer
- DIGITAL CAMERA Solution Disk supplied with the camera (p. 2)
- Interface cable supplied with the camera (p. 2)

## Preparations

Windows Vista and Mac OS X (v10.5) are used for these explanations.

### 1 Install the software.

#### Windows



- 1 Place the DIGITAL CAMERA Solution Disk in the computer's CD-ROM drive.

- 2 Begin installation.

- Click [Easy Installation] and follow the onscreen instructions to proceed with the installation.
- If the [User Account Control] window appears, follow the on-screen instructions to proceed.




- 3 When the install finishes, click [Restart] or [Finish].

- 4 Remove the CD-ROM.


- Remove the CD-ROM when your desktop screen appears.

#### Macintosh




- Place the CD-ROM in the computer's CD-ROM drive and double-click the  icon.
- Click [Install], and follow the onscreen instructions to proceed with the installation.

### 2 Connect the camera to the computer.

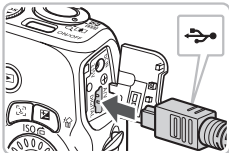

- Turn off the camera.
- Follow the steps on p. 27 to connect the camera to a computer.

### 3 Turn on the camera.

- Press the  button to turn on the camera.

### 4 Open CameraWindow.



### Windows

- Choose [Canon CameraWindow] and click [OK].
- ▶ CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and choose [All Programs], followed by [Canon Utilities], [CameraWindow], [CameraWindow] and [CameraWindow].



### Macintosh

- ▶ CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the CameraWindow icon on the Dock (the bar which appears at the bottom of the desktop).

## Transfer Images



- Click [Import Images from Camera], and then click [Import Untransferred Images].
- ▶ All images not previously transferred will transfer to the computer. Transferred images will be sorted by date and saved in separate folders in the Pictures folder.
- After the transfer finishes, click [x] to close CameraWindow, then turn off the camera and unplug the cable.
- For further operations, refer to the *Software Guide*.



You can transfer images without installing the included software by simply connecting your camera to a computer. There are, however, the following limitations.

- After connecting to the camera, it may take a few minutes until you can transfer images.
- The camera information may not display correctly.
- Movies will not transfer correctly.
- Images shot in the vertical position may be transferred in the horizontal position.
- Protection settings for images may be lost when transferred to a computer.
- There may be problems transferring images or image information correctly depending on the version of the operating system in use, the file size, or the software in use.

# Accessories

## Supplied with Camera

AV Cable AVC-DC400\*<sup>1</sup>

Interface Cable IFC-400PCU\*<sup>1</sup>

Wrist Strap  
WS-800

Memory Card

AA-size Alkaline  
Batteries (×2)

 
DIGITAL CAMERA  
Solution Disk

Battery and Charger Kit  
CBK4-300\*<sup>3</sup>



Battery Charger CB-5AH  
AA-size NiMH batteries  
(NB-3AH x4)

AC Adapter Kit ACK800




Compact Power Adapter CA-PS800  
Power Cord

\*1 Also available for purchase separately.

\*2 See the user guide supplied with the printer for more information on the printer and interface cables.

\*3 Battery and Charger Kit CBK4-200 may also be used.

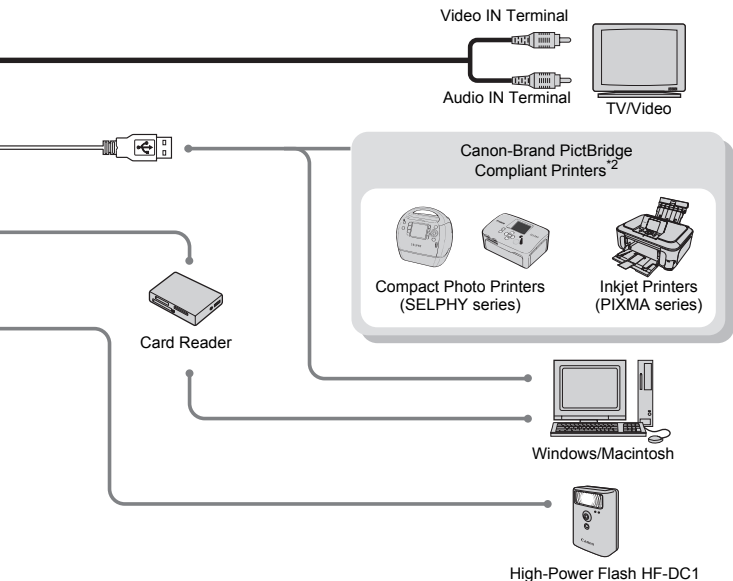

### Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

## Separately Sold Accessories

The following camera accessories are sold separately. Some accessories are not sold in some regions, or may no longer be available.

### Power Supplies

- **Battery and Charger Kit CBK4-300**

This kit includes both a dedicated charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Recommended for powering the camera for an extended period of time.

- **AC Adapter Kit ACK800**

This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer or printer. Cannot be used to charge the batteries inside the camera.



**The battery charger can also be used when abroad.**

The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices such as electrical transformers for foreign travel because they will cause malfunctions.

### Other Accessories

- **High-Power Flash HF-DC1**

This attachable supplementary flash can illuminate subjects that are too distant for the light from the built-in flash to reach.




# 2

## **Learning More**

This chapter explains the parts of the camera and what appears on the screen, as well as the basic operating instructions.

---

# Components Guide

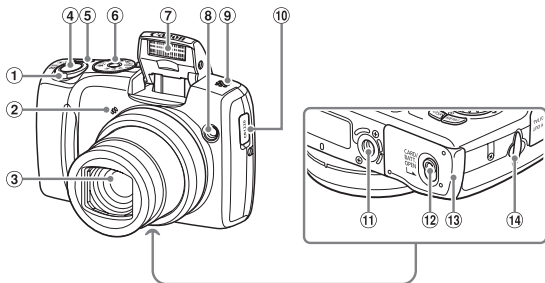

- ① Zoom Lever  
Shooting: (Telephoto) / (Wide Angle) (p. 22)  
Playback: (Magnify) / (Index) (pp. 100, 104)
- ② Microphone (p. 32)
- ③ Lens
- ④ Shutter Button (p. 21)
- ⑤ Power Button
- ⑥ Mode Dial
- ⑦ Flash (pp. 23, 29, 66, 86)
- ⑧ Lamp (Self-Timer Lamp (pp. 63, 64, 74, 75) / AF Assist Beam (p. 119) / Red-Eye Reduction Lamp (p. 120))
- ⑨ Speaker
- ⑩ Date Battery Holder (p. 124)
- ⑪ Tripod Socket
- ⑫ Cover Lock (p. 14)
- ⑬ Memory Card / Battery Cover (p. 14)
- ⑭ Strap Mount (p. 13)

## Mode Dial

Use the mode dial to change the Shooting mode.

### P, Tv, Av, M Mode


You can make settings such as the shutter speed and aperture value in order to take the picture you want (pp. 66, 87, 88, 89).

### Auto Mode

You can leave it to the camera to select settings (p. 22).

### Easy Mode

You can shoot just by pressing the shutter button (p. 29).

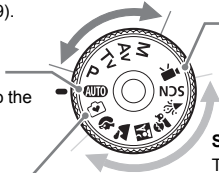

### Movie Mode


For shooting movies (p. 31).

### Scene Mode

The camera can automatically select all settings appropriate for the conditions so that you can take images just by pressing the shutter button (pp. 56 – 59).




If you turn the mode dial while in Playback mode, the camera will switch to Shooting mode.

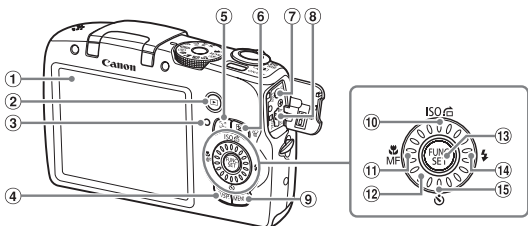

- ① Screen (LCD Monitor) (p. 44)
- ② (Playback) Button (pp. 25, 30, 99)
- ③ Indicator (p. 46)
- ④ **DISP.** (Display) Button (pp. 44, 45)
- ⑤ (Face Selector) Button (p. 81)
- ⑥ (Exposure) (p. 67) / (Single Image Erase) Button (p. 26)
- ⑦ DC IN (Power Input) Terminal (p. 125)
- ⑧ A/V OUT (Audio/Video Output) / DIGITAL Terminal (pp. 27, 35)
- ⑨ **MENU** Button (p. 48)
- ⑩ ISO Speed (p. 70) / (Jump) (p. 101) / Button
- ⑪ (Macro) (p. 67) / **MF** (Manual Focus) (p. 83) / Button
- ⑫ Control Dial (p. 43)
- ⑬ **FUNC./SET** (Function/Set) Button (p. 47)
- ⑭ (Flash) (pp. 66, 86) / Button
- ⑮ (Self-Timer) (pp. 63, 64, 74, 75) / Button

## Control Dial

Turning the control dial allows you to perform operations such as choosing items or switching images.

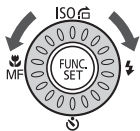


## Button

When the lens is extended, you can switch between the Shooting and Playback modes. When the lens is retracted, you can use this button to turn the camera on and off in Playback mode.

# Information Displayed on the Screen

## Shooting (Information Display)

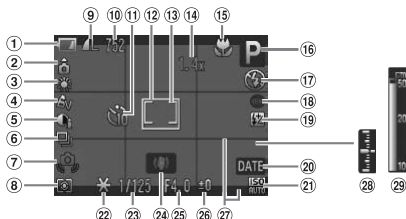

- ① Battery Charge Indicator (p. 16)
- ② Camera Orientation\* (p. 16)
- ③ White Balance (p. 71)
- ④ My Colors (p. 73)
- ⑤ i-Contrast (p. 90)
- ⑥ Drive Mode (p. 72)
- ⑦ Camera Shake Warning (p. 121)
- ⑧ Metering Modes (p. 82)
- ⑨ Compression (Image Quality) (p. 68)
- ⑩ Still Images: Recordable shots (pp. 17, 69)
- ⑩ Movies: Remaining Time/ Elapsed Time (pp. 32, 96)
- ⑪ Self-Timer (pp. 63, 64, 74, 75)
- ⑫ AF Frame (p. 23)
- ⑬ Spot AE Point Frame (p. 82)
- ⑭ Digital Zoom Magnification (p. 60) / Digital Tele-Converter (p. 61)
- ⑮ Macro (p. 67) / Manual Focus (p. 83)
- ⑯ Shooting Mode (p. 42)
- ⑰ Flash Mode (pp. 23, 29, 66, 86)
- ⑱ Red-Eye Correction (p. 91)
- ⑲ Flash Exposure Compensation / Flash Output (pp. 92, 93)
- ⑳ Date Stamp (p. 62)
- ㉑ ISO Speed (p. 70)
- ㉒ AE Lock (p. 84), FE Lock (p. 85)
- ㉓ Shutter Speed (pp. 87, 89)
- ㉔ Image Stabilizer (p. 121)
- ㉕ Aperture Value (pp. 88, 89)
- ㉖ Exposure Compensation (p. 67)
- ㉗ Disp. Overlay (p. 121)
- ㉘ Exposure Level Indicator (p. 89)
- ㉙ MF Indicator (p. 83)

\* : Standard, : Held vertically

When shooting, the camera detects if it is held vertically or horizontally, and adjusts settings accordingly for the best shot. It also detects orientation during playback, so you can hold the camera in either orientation and it will automatically rotate images for correct viewing.

This function may not operate correctly when the camera is pointed straight up or down.

## Switching the Display

You can change the display using the **DISP.** button.




Information Display



No Information Display


## Playback (Detailed Information Display)

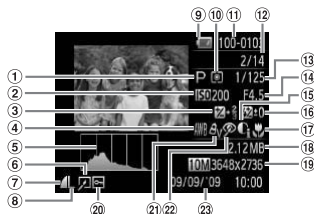

- |  |   |  |
|--|---|--|
| ① Shooting Mode (p. 42)  | ⑩ Metering Modes (p. 82)                                      | ⑰ Macro (p. 67), Manual Focus (p. 83)                                    |
| ② ISO Speed (p. 70)  | ⑪ Folder Number – File Number (p. 116)                        | ⑱ File Size (pp. 69, 96)   |
| ③ Exposure Compensation (p. 67), Exposure Shift Amount (p. 97) | ⑫ Displayed image number / Total number of images             | ⑲ Still Images: Recording Pixels (p. 69)<br>Movies: Movie Length (p. 96) |
| ④ White Balance (p. 71)  | ⑬ Shutter Speed (pp. 87, 89)                                  | ⑳ Protect (p. 106)   |
| ⑤ Histogram (p. 46)  | ⑭ Aperture Value (pp. 88, 89), Image Quality (Movies) (p. 96) | ㉑ My Colors (p. 73)  |
| ⑥ Image Editing (pp. 109 – 111)                                | ⑮ i-Contrast (pp. 90, 110)                                    | ㉒ Red-Eye Correction (pp. 91, 111)                                       |
| ⑦ Compression (Image Quality) (p. 68)                          | ⑯ Flash (pp. 66, 86), Flash Exposure Compensation (p. 92)     | ㉓ Shooting Date and Time (p. 62)   |
| ⑧ Recording Pixels (p. 68), AVI (Movies) (p. 96)               |   |  |
| ⑨ Battery Charge Indicator (p. 16)                             |   |  |

### Switching the Display

You can change the display using the **DISP.** button.

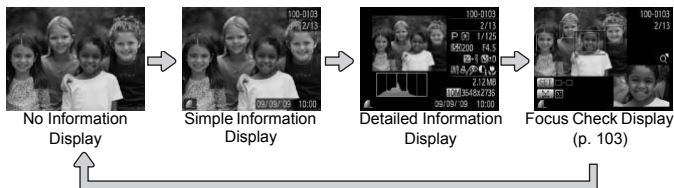

You can also switch the display by pressing the **DISP.** button while the image displays shortly after shooting. However, Simple Information will not display. You can set the display that appears first. Press the **MENU** button to choose the tab. Then set [Review Info].


## Display in Dark Conditions during Shooting

The display automatically brightens when shooting in dark conditions, allowing you to check the composition (Night Display function). However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Screen noise may appear and the movement of the subject may appear somewhat jagged on the screen. This has no effect on the recorded image.

## Overexposure Warning during Playback

In “Detailed Information Display” (p. 45), overexposed areas of the image flash on the screen.

## Histogram during Playback

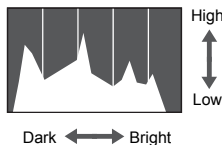

- The graph that appears in “Detailed Information Display” (p. 45) is called the histogram. The histogram shows the distribution and amount of brightness of an image. When the graph approaches the right side, the image is bright, but when it approaches the left side, the image is dark, and in this way you can judge the exposure.

## Indicator

The Indicator on the back of the camera (p. 43) will light or blink under the following conditions.

Colors	Status	Operation Status
Green	Lights	Shooting preparation complete (p. 22)/Display Off (p. 118)
	Blinks	Recording/reading/transmitting image data (p. 23)
Orange	Lights	Shooting preparation complete (flash on) (p. 23)
	Blinks	Camera shake warning (p. 23)



When the indicator blinks green, data is being recorded to/read from the memory card or various information is being transmitted. Do not turn off the power, open the memory card slot/battery cover, shake or jolt the camera. These actions may corrupt the image data or cause the camera or memory card to malfunction.

# FUNC. Menu – Basic Operations

Commonly used shooting functions can be set with the FUNC. menu. The menu items and options differ depending on the mode (pp. 132 – 135).




## 1 Choose a shooting mode.

- Set the mode dial to the desired shooting mode.



## 2 Display the FUNC. menu.



- Press the  button.







Available Options

 
Menu Items

## 3 Choose a menu item.


- Press the   buttons to choose a menu item.
- ▶ The available options for the menu item appear in the lower part of the screen.

## 4 Choose an option.

- Press the   buttons or turn the  dial to choose an option.
- You can also choose settings by pressing the **DISP.** button on options that display .




## 5 Make the setting.

- Press the  button.
- ▶ The shooting screen will reappear and the setting you chose will display on the screen.

# MENU – Basic Operations

 Various functions can be set from the menus. The menu items are organized under tabs, such as for shooting (📷) and playback (▶). The available menu items differ depending on the mode (pp. 134 – 137).



## 1 Display the menu.



- Press the **MENU** button.



## 2 Choose a tab.

- Press the ◀▶ buttons, or move the zoom lever (p. 42) left or right to choose a tab.

## 3 Choose a menu item.

- Press the ▲▼ buttons or turn the  dial to choose a menu item.
- Some items require you to press the  button or ▶ button to display a submenu in which you change the setting.

 


## 4 Choose an option.

- Press the ◀▶ buttons to choose an option.

## 5 Make the setting.

- Press the **MENU** button.
- ▶ The normal screen will reappear.





# Changing the Sound Settings

You can silence or adjust the volume of camera sounds.

## Muting Sounds

 


### 1 Display the menu.


- Press the **MENU** button.

### 2 Choose [Mute].

- Press the **◀▶** buttons to choose the **↑↑** tab.
- Press the **▲▼** buttons or turn the **○** dial to choose [Mute], then press the **◀▶** buttons to choose [On].



## Adjusting the Volume

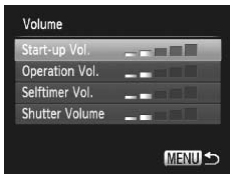

### 1 Display the menu.

 
- Press the **MENU** button.

### 2 Choose [Volume].


- Press the **◀▶** buttons to choose the **↑↑** tab.
- Press the **▲▼** buttons or turn the **○** dial to choose [Volume], then press the **○** dial button.

### 3 Change the volume.

- Press the **▲▼** buttons or turn the **○** dial to choose an item, then press the **◀▶** buttons to adjust the volume.




# Changing the Screen Brightness

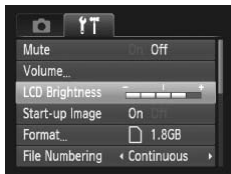


## 1 Display the menu.

- Press the **MENU** button.

## 2 Choose [LCD Brightness].

 - Press the ◀▶ buttons to choose the YT tab.
- Press the ▲▼ buttons or turn the  dial to choose [LCD Brightness].




## 3 Change the brightness.

- Press the ◀▶ buttons to change the brightness.
- Press the **MENU** button again to complete the setting.

## Returning the Camera to Default Settings

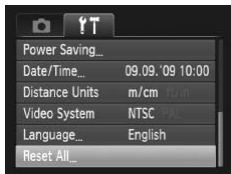

When you have mistakenly changed a setting, you can reset the camera to the default settings.




### 1 Display the menu.



 - Press the **MENU** button.


### 2 Choose [Reset All].

- Press the **◀▶** buttons to choose the **⏏** tab.
- Press the **▲▼** buttons or turn the  dial to choose [Reset All], then press the  button.



### 3 Reset the settings.

- Press the **◀▶** buttons or turn the  dial to choose [OK], then press the  button.
- ▶ The camera will reset to the default settings.

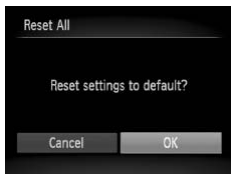


### Are there functions that cannot be reset?

- The [Date/Time] (p. 18) in the **⏏** tab, [Language] (p. 20), [Video System] (p. 105).
- The saved data for custom white balance (p. 71).

# Formatting Memory Cards

Before you use a new memory card or one that has been used in other devices, you should format the card with this camera. Formatting (initializing) a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.


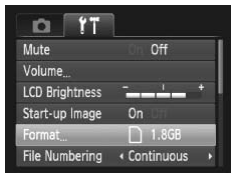


## 1 Display the menu.

- Press the **MENU** button.

## 2 Choose [Format].

 - Press the **◀▶** buttons to choose the **FORMAT** tab.
- Press the **▲▼** buttons or turn the **○** dial to choose [Format], then press the **FUNC SET** button.

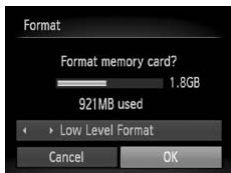





## 3 Format the memory card.

- Press the **◀▶** buttons or turn the **○** dial to choose [OK], then press the **FUNC SET** button.
- ▶ The memory card will be formatted.
- ▶ When formatting has finished, the menu screen will reappear.

## Low Level Format

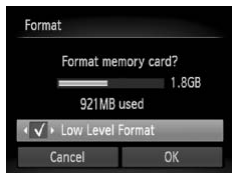Perform low level formatting when you think that the recording/reading speed of a memory card has dropped.



- Follow Steps 1 – 2 to display the [Format] screen.
  - Press the ▲▼ buttons or turn the  dial to choose [Low Level Format], then press the ◀▶ buttons to display ✓.
  - Press the ▲▼◀▶ buttons or turn the  dial to choose [OK], then press the  button.
- ▶ Low level formatting starts.

### About formatting

- The supplied memory card has already been formatted.
- When the [Memory card error] message appears, or when the camera does not work correctly, formatting the memory card may solve the problem. Copy the images from the memory card to a computer or other device before formatting.



Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. Be careful when transferring or disposing of a memory card. When disposing of a memory card, take precautions such as physically destroying the card to prevent personal information leaks.



- The total capacity of the memory card displayed in the formatting screen may be less than indicated on the memory card.
- Low level formatting may take longer than standard formatting, since all recorded data are erased.
- You can stop a low level format of a memory card by choosing [Stop]. When stopping low level formatting, the data will be erased but the memory card can be used without problem.

## Power Saving Function (Auto Power Down)

To save battery power, the camera shuts down automatically when it is not operated for a certain time.

### Power Saving during Shooting

The monitor will turn off approximately 1 minute after the camera is last operated. After about 2 more minutes, the lens will retract and the power will turn off. When the monitor has turned off but the lens has not yet retracted, pressing the shutter button halfway (p. 21) turns on the monitor and shooting can continue.

### Power Saving during Playback

The power will turn off approximately 5 minutes after the camera is last operated.



 
- You can turn off the Power Saving Function (p. 117).
- You can adjust the time before the monitor turns off (p. 118).

# 3

## Shooting in Special Conditions and Commonly Used Functions

This chapter explains how to shoot in different conditions, as well as how to use common functions, such as the flash and self-timer.

---



- When you choose a Shooting mode that matches a particular set of conditions, the camera will automatically select any necessary settings. All you need do is press the shutter button to take an optimized picture.
- This chapter assumes the mode dial is set to **AUTO** for “Zooming in More Closely on Subjects (Digital Zoom)” (p. 60) to “Using the Face Self-Timer” (p. 64). When shooting in a scene mode, check which functions are available in that mode (pp. 132 – 135).

# Shooting in Various Conditions

The camera will select the necessary settings for the conditions in which you wish to shoot when you choose the matching mode.



## 1 Choose the Shooting mode.

- Set the mode dial to the desired Shooting mode.

## 2 Shoot.



### Take portraits (Portrait)

- Produces a soft effect when photographing people.



### Take landscapes (Landscape)

- Lets you shoot majestic landscapes.



### Take snapshots at night (Night Snapshot)

- Lets you take beautiful snapshots of people against city nightscapes or night backgrounds.
- If you hold the camera firmly, you can take pictures with reduced camera shake, even without a tripod.



### Take shots of kids and pets (Kids&Pets)

- Lets you capture subjects that move around, such as children and pets, without missing photo opportunities.





## Take indoor shots (Indoor)

- Lets you shoot indoors with natural colors.



In **FA**, **SR**, or **SR** mode, images may appear coarse because the ISO speed (p. 70) is increased to match the shooting conditions.

## Shooting in Special Scenes


The camera will select the necessary settings for the conditions in which you wish to shoot when you choose the matching mode.

 


### 1 Choose a Shooting mode.

- Set the mode dial to **SCN**.



- Turn the  dial to choose the shooting mode.




### 2 Shoot.



### **Shoot sunsets (Sunset)**

- Lets you take shots of sunsets in vivid colors.

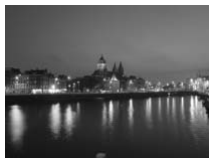

### **Take nightscapes (Night Scene)**

- Lets you take beautifully lit city nightscapes or night backgrounds.
- You can also take beautifully lit pictures of people along with the backgrounds due to the slower shutter speed.



### **Take shots of fireworks (Fireworks)**

- Lets you take shots of fireworks in vivid colors.



### **Take shots of people at the beach (Beach)**

- Lets you take bright shots of people on sandy beaches where the reflected sunlight is strong.



### **Take shots of aquatic life in an aquarium (Aquarium)**

- Lets you take natural-colored shots of aquatic life in indoor aquariums.



### Take shots of foliage (Foliage)

- Lets you shoot trees and leaves, such as new growth, autumn leaves or blossoms, in vivid colors.



### Take shots of people in snow (Snow)






- Lets you take bright, natural-colored shots of people against snowy backgrounds.



### Shoot using high ISO speed (ISO 3200)

- Lets you set the ISO speed to 3200, and lets you shoot without camera shake or subject blurring even in low light conditions.
- Recording pixels are set to **M3** (1600 x 1200 pixels) (p. 68).



- In  mode, make sure the subject does not move until the shutter sound plays, even after the flash fires.
- In  or  mode, attach the camera to a tripod to prevent the camera from moving and blurring the image. Additionally, you are recommended to set [IS Mode] to [Off] (p. 121).
- In  mode, images may appear coarse because the ISO speed (p. 70) is increased to match the shooting conditions.
- In  mode, images may appear coarse.

## Zooming in More Closely on Subjects (Digital Zoom)

You can use the digital zoom to zoom up to a maximum of 40x and capture subjects that are too far away for the optical zoom (p. 22) to enlarge. The images may appear coarse, however, depending on the recording pixel setting (p. 68) and the zoom factor used.



### 1 Move the zoom lever toward [1].

- Hold the lever until zooming stops.
- ▶ The zoom will stop when the largest possible zoom factor without image deterioration has been reached, and the zoom factor will appear.



### 2 Move it toward [∞] again.

- ▶ The digital zoom will zoom in even further on the subject.

## Zoom Factors at which Images Deteriorate

Recording Pixels	Optical Zoom (36 – 360 mm)*	Digital Zoom (360 – 1440 mm)*
L	10x →	
M1	10x →	
M2		14x →
M3		23x →
S		40x →

□ : No image deterioration (zoom factor appears white)


■ : Image deterioration (zoom factor appears blue)

→ : Maximum zoom factor without deterioration (Safety Zoom)

\* Focal length (35mm equivalent)




## Turning off the digital zoom

To turn off the digital zoom, press the **MENU** button, choose the  tab, and choose [Digital Zoom] and the [Off] option.


## Digital Tele-Converter

The focal length of the lens can be increased by an equivalent of 1.4x or 2.3x. This enables a faster shutter speed and less chance of camera shake than the zoom (including digital zoom) used by itself at the same zoom factor.

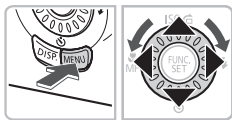

The images may appear coarse, however, depending on the combination of recording pixel (p. 68) and digital tele-converter settings used.



### 1 Choose [Digital Zoom].

- Press the **MENU** button and choose the  tab, then choose [Digital Zoom].

### 2 Accept the setting.

- Press the   buttons to choose [1.4x] or [2.3x].
- Pressing the **MENU** button will restore the shooting screen.
- ▶ The view will be enlarged and the zoom factor will appear on the screen.
- To return to standard digital zoom, choose [Digital Zoom] and the [Standard] option.

## Combinations that Cause Image Deterioration


- Using [1.4x] at a recording pixel setting of **L** or **M1** will cause image deterioration (the zoom factor will display in blue).
- Using [2.3x] at a recording pixel setting of **L**, **M1** or **M2** will cause image deterioration (the zoom factor will display in blue).





- The respective focal lengths when using [1.4x] and [2.3x] are 50.4 – 504 mm and 82.8 – 828 mm (35mm film equivalent).
- The digital tele-converter cannot be used together with the digital zoom.


# Inserting the Date and Time

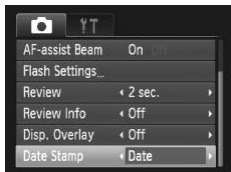You can insert the shooting date and time in the lower right corner of an image. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set (p. 18).



## 1 Choose [Date Stamp].

 - Press the **MENU** button.
- Press the **◀▶** buttons to choose the  tab.
- Press the **▲▼** buttons or turn the  dial to choose [Date Stamp].



## 2 Accept the setting.

- Press the **◀▶** buttons to choose [Date] or [Date & Time].
- Pressing the **MENU** button will restore the shooting screen.
- ▶ [DATE] will appear on the screen.



## 3 Shoot.

- ▶ The shooting date and time will be recorded in the image's lower right corner.
- To restore to the original setting, choose [Off] in Step 1.



### Inserting and printing the date and time in images without an embedded date and time

- Use the **DPOF print settings** (p. 112) to print.
- Use the **included software to print**. Refer to the *Software Guide* for details.
- **Connect the camera to a printer to print**. Refer to the *Personal Printing Guide* for details.

# Using the Self-Timer



The self-timer can be used to shoot a group photo that includes the camera operator. The camera will activate approximately 10 seconds after the shutter button is pressed.



## 1 Press the ▼ button.




## 2 Choose 10.

- Press the ▲▼ buttons or turn the  dial to choose 10, then press the  button.
- ▶ Once set, 10 will appear.



## 3 Shoot.

- Press the shutter button halfway to focus on the subject, then press it fully.
- ▶ When the self-timer starts, the lamp blinks and the self-timer sound plays.
- ▶ Two seconds before the shutter releases, the lamp and sound speed up (the lamp remains lit when the flash will fire).
- To cancel shooting with the self-timer after countdown has started, press the ▼ button.
- To restore the original setting, choose  in Step 2.




You can change the delay time and number of shots (p. 75).

## Using the Face Self-Timer

Once you compose the shot, such as for a group photo, press the shutter button, and enter the composition, the camera will take three shots in a row two seconds after it detects your face (p. 78).

 


### 1 Choose .

- Follow Step 2 on p. 63 and choose .

### 2 Compose the shot and press the shutter button halfway.

- Make sure a green frame appears on the face focused on and white frames appear on other faces.




### 3 Press the shutter button fully.

- ▶ The camera will enter shooting stand-by, and [Look straight at camera to start count down] will appear on the screen.
- ▶ The lamp will blink and the self-timer sound will play.



### 4 Join the subjects and look at the camera.

- ▶ When the camera detects a new face, the lamp and sound will speed up (the lamp remains lit when the flash will fire), and two seconds later the shutter will release.
- ▶ The second and third shots will continue in succession.
- To restore the original setting, choose  in Step 2 on p. 63.


 




### What if a face is not detected?

Even if your face is not detected after joining the subjects, the shutter will release approximately 30 seconds later.



### Changing the number of shots

For the screen in Step 1, press the **MENU** button, then press the   buttons or turn the  to change the number of shots. Press the  button to accept the setting.



# 4

## Choosing Settings Yourself

In this chapter you will learn how to use the various functions in **P** mode to progressively advance your shooting skills.

---



- This chapter assumes that the mode dial is set to **P**.
- **P** stands for Program AE.
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 132 – 135).

## Shooting in Program AE

You can choose the settings for various functions to suit your preferences. AE stands for Auto Exposure.



- 1 Set the mode dial to **P**.
- 2 Adjust the settings according to your purposes (pp. 66 – 75).
- 3 Shoot.



### What if the shutter speed and aperture value are displayed in orange?

If a correct exposure cannot be obtained when pressing the shutter button halfway, the shutter speed and aperture value are shown in orange. Try the following settings to obtain the correct exposure.

- Turn on the flash (p. 66)
- Choose a higher ISO speed (p. 70)

## Turning the Flash On

You can make the flash fire every time you shoot. At maximum wide angle, the flash range is approximately 50 cm – 4.0 m (1.6 – 13 ft.), and at maximum telephoto, it is 1.0 – 2.5 m (3.3 – 8.2 ft.)



- 1 Raise the flash.
- 2 Choose **⚡**.
  - After pressing the **▶** button, press the **◀▶** buttons or turn the **◉** dial to choose **⚡**, then press the **FUNC. SET** button.
  - ▶ Once set, **⚡** will appear.

## Adjusting the Brightness (Exposure Compensation)



You can adjust the standard exposure set by the camera in 1/3-stop increments in the range of -2 to +2.




### 1 Choose the exposure compensation.

- Press the  button.

### 2 Adjust the brightness.







- While watching the screen, turn the  dial to adjust the brightness and press the  button.

## Shooting Close-ups (Macro)



You can shoot an object at a close distance or even shoot extreme close-ups of it. The shooting range is approximately 1 – 50 cm (0.4 in. – 1.6 ft.) from the end of the lens (when the zoom lever is pushed to the maximum ).



 
### Choose .


- After pressing the  button, press the  buttons or turn the  dial to choose , then press the  button.
- ▶ Once set,  will appear.

## ? About the Zoom Bar

- When you move the zoom lever, the zoom bar appears on the screen. When shooting in Macro mode, the camera cannot focus in the range of the yellow bar.
- When zooming within the range of the yellow bar,  will be grayed out and shooting will be done in .

## 💡 How can I take better close-ups?

- You are recommended to attach the camera to a tripod and shoot in , to prevent the camera from moving and blurring the image (p. 74).
- You can reduce the AF frame size when you want to focus on a specific portion of the subject (p. 78).

 The edges of the image may darken if the flash fires.

## Changing the Recording Pixels (Image Size)




You can choose from six recording pixels (image size) settings.



### 1 Choose the recording pixels.

- After pressing the  button, press the  buttons to choose .



### 2 Choose an option.

- Press the  buttons or turn the  dial to choose an option, then press the  button.
- ▶ The setting you chose will display on the screen.



If you choose , you cannot use Digital Zoom (p. 60) or Digital Tele-Converter (p. 61).

## Changing the Compression Ratio (Image Quality)




You can choose from the following two levels of compression ratio (image quality):  (Fine),  (Normal).















### 1 Choose the compression ratio.

- After pressing the  button, press the  buttons to choose .

### 2 Choose an option.


- Press the  buttons or turn the  dial to choose an option, then press the  button.
- ▶ The setting you chose will display on the screen.

## Approximate Values for Recording Pixels and Compression Ratio

Recording Pixels	Compression Ratio	Single Image Data Size (Approx. KB)	Number of Recordable Images	
			2 GB	8 GB
<b>L</b> (Large) 10 M/3648 x 2736		2565	749	2994
		1226	1536	6140
<b>M1</b> (Medium 1) 6 M/2816 x 2112		1620	1181	4723
		780	2363	9446
<b>M2</b> (Medium 2) 4 M/2272 x 1704		1116	1707	6822
		556	3235	12927
<b>M3</b> (Medium 3) 2 M/1600 x 1200		558	3235	12927
		278	6146	24562
<b>S</b> (Small) 0.3 M/640 x 480		150	10245	40937
		84	15368	61406
<b>W</b> (Widescreen) 3648 x 2048		1920	1007	4026
		918	2048	8187

\* The values in the table are measured according to Canon standards and may change depending on the subject, memory card and camera settings.

## Approximate Values for Paper Size

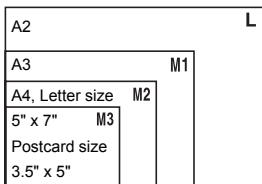












- **S** Suitable for sending images as e-mail attachments.
- **W** For printing on wide size paper.

# Changing the ISO Speed



## Choose the ISO speed.

- After pressing the  button, press the  buttons or turn the  dial to choose an option, then press the  button.


	Automatically adjusts the ISO speed to the Shooting mode and shooting conditions.	
  	Low	Fine weather conditions, outdoor shooting.
 	↑ ↓	Cloudy, Twilight
	High	Nightsapes, Dark interiors



## Changing the ISO speed

- Lowering the ISO speed results in sharper images, but there may be an increased chance of image blurring in certain shooting conditions.
- Raising the ISO speed results in a faster shutter speed, reducing camera shake and letting the flash reach greater distances to the subject. The images, however, will appear coarse.



- When the camera is set to , you can press the shutter button halfway to display the automatically set ISO speed.
- With ISO 3200 you can set an even faster speed (p. 59).

# Adjusting the White Balance

The white balance (WB) function sets the optimal white balance for natural looking colors.



## 1 Choose the white balance.

- After pressing the **FUNC SET** button, press the **▲▼** buttons to choose **AWB**.

## 2 Choose an option.

- Press the **◀▶** buttons or turn the **○** dial to choose an option, then press the **FUNC SET** button.
  - ▶ The setting you chose will display on the screen.

<b>AWB</b> Auto	Automatically sets the optimal white balance for the shooting conditions.
Day Light	Fine weather conditions, outdoor shooting
Cloudy	Cloudy, shady, twilight conditions
Tungsten	Tungsten, bulb-type (3-wavelength) fluorescent lighting
Fluorescent	Warm-white fluorescent, cool-white fluorescent, warm-white-type (3-wavelength) fluorescent lighting
Fluorescent H	Daylight fluorescent, daylight-type (3-wavelength) fluorescent lighting
Custom	Manually sets a custom white balance.

## Custom White Balance

You can adjust the white balance to the light source at the shooting location. Make sure that you set the white balance under the light source of the actual scene you will shoot.



- In Step 2 above, choose .
- Make sure the entire screen is filled with a white colored subject, then press the **DISP** button.
  - ▶ The tint on the screen will change when a white balance data is set.



If you change camera settings after recording white balance data, the tone may not turn out properly.

# Continuous Shooting







You can shoot continuously at a fixed interval.



## 1 Choose a Drive mode.




- After pressing the  button, press the   buttons to choose .

## 2 Choose an option.

 


- Press the   buttons or turn the  dial to choose  or , then press the  button.

## 3 Shoot.

- ▶ As long as you hold the shutter button down, the camera will shoot successive images.

Drive Mode	Shooting Interval	Description
 Continuous	Approx. 1.3 images/sec.	For continuous shooting, the focus and exposure are locked when the shutter button is pressed halfway.
 Continuous Shooting AF	Approx. 0.9 images/sec.	The camera shoots continuously and focuses. The [AF Frame] is set to [Center].
 Continuous Shooting LV	Approx. 0.9 images/sec.	The camera shoots continuously with the focus locked to the position set in the first shot.



- Cannot be used with the self-timer (pp. 63, 64, 74, 75).
- As the number of images increases, the shooting intervals may take longer.
- If the flash fires, shooting intervals may take longer.
- When in  mode,  will change to  when shooting in manual focus (p. 83).



# Changing the Tone of an Image (My Colors)

You can change the tone of an image to sepia or black and white when shooting.



## 1 Choose My Colors.

- After pressing the button, press the to choose .

## 2 Choose an option.

- Press the or turn the dial to choose an option, then press the button.
- ▶ The setting you choose will display on the screen.

My Colors Off	—
Vivid	Emphasizes the contrast and color saturation for a vivid impression.
Neutral	Tones down the contrast and color saturation for neutral hues.
Sepia	Sepia tones.
B/W	Black and white.
Custom Color	You can adjust contrast, sharpness, and color saturation etc. to your preference (p. 74).







The white balance cannot be set in the and modes (p. 71).

### Custom Color


The contrast, sharpness and color saturation in an image can be chosen and set from 5 different levels.



 
 

 
 
 
- Follow Step 2 on p. 73 to choose , then press the **DISP.** button.
- Press the  buttons to choose an option, then press the  buttons or turn the  dial to choose a value.
- The more to the right, the stronger/deeper the effect gets, the more to the left, the weaker/lighter the effect gets.
- Press the **DISP.** button to accept the setting.

### Shooting Using the Two Second Self-Timer

You can set the self-timer to a delay of approximately two seconds.

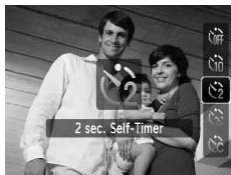


#### Choose .





- After pressing the  button, press the  buttons or turn the  dial to choose , then press the  button.
- ▶ Once set,  will appear on the screen.
- Follow Step 3 on p. 63 to shoot.

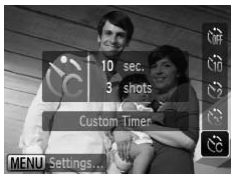
# Customizing the Self-Timer

You can set the time delay (0 – 30 seconds) and the number of shots (1 – 10 shots).


 




## 1 Choose .

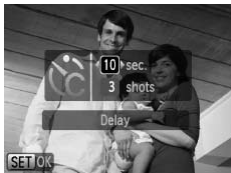- After pressing the  button, press the  buttons or turn the  dial to choose , then press the **MENU** button.



## 2 Choose the settings.

- Press the  buttons to choose [Delay] or [Shots].
- Press the  buttons or turn the  dial to choose a value, then press the  button.
- Follow Step 3 on p. 63 to shoot.



## What if the number of shots is set to two or more shots?

- Exposure and white balance settings are set with the first shot.
- When you set the time delay for more than 2 seconds, the self-timer lamp and sound speed up 2 seconds before the shutter releases (when the flash will fire, the lamp lights).



- If the flash fires, the shooting interval may be longer.
- If you set a high number of shots, the shooting interval may be longer.
- If the memory card becomes full, shooting stops automatically.

## Shooting Using a TV Monitor

You can use a TV to display the camera screen content while shooting.

- Connect the camera to a TV as described in “Viewing Images on a TV” (p. 105).
- Shooting procedures are the same as when using the camera’s monitor.

## Changing the Composition with the Focus Lock

While you keep the shutter button pressed halfway, the focus and exposure are locked. You can now recompose and shoot. This is called Focus Lock.



### 1 Focus.

- Center the subject you want in focus, and press the shutter button halfway.
- Confirm that the AF Frame is green.



### 2 Recompose.

- Keep the shutter button pressed halfway and recompose the scene.

### 3 Shoot.

- Press the shutter button fully.

# 5

## Getting More Out of Your Camera

This chapter serves as the advanced version of Chapter 4 and explains how to take pictures using various functions.

---






- This chapter assumes that the mode dial is set to **P**.
- The sections “Setting the Shutter Speed” (p. 87), “Setting the Aperture Value” (p. 88), “Setting the Shutter Speed and Aperture Value” (p. 89), assume that the mode dial is set to these modes.
- The section “Adjusting the Flash Output” (p. 93) assumes that the mode dial is set to **M**.
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 132 – 135).

## Changing the AF Frame Mode

You can change the AF (Auto Focus) frame mode to match the conditions you want to shoot.



### Choose [AF Frame].

- Press the **MENU** button, choose the  tab, and then choose the [AF Frame] menu item. Press the   buttons to choose an option.

## Face Detect

- Detects people's faces and sets the focus, exposure (evaluative metering only) and white balance (AWB only).
- When the camera is pointed at subjects, a white frame appears on the face the camera judges to be the main subject, and gray frames (max. 2) will appear on other faces. When the shutter button is pressed halfway, up to 9 green frames will appear on faces on which the camera focuses.




- If a face is not detected and only gray frames (no white frame) appear, AF Frame will be set to [Center].
- Examples of faces that cannot be detected:
  - Subjects that are far away or extremely close.
  - Subjects that are dark or light.
  - Faces turned to the side or at a diagonal, or faces with a portion hidden.
- The camera may mistakenly identify non-human subjects as a face.
- If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.

## Center


The AF frame is locked to the center. This is effective for focusing on a specific point.



### You can reduce the AF frame size


- Press the **MENU** button, choose the  tab, then choose the [AF Frame Size] menu item and [Small] option.
- The setting is configured to [Normal] when the Digital Zoom (p. 60) or Digital Tele-converter (p. 61) is used.






- If the camera cannot focus when you press the shutter button halfway, the AF frame will turn yellow and  will appear.

# Magnifying the Focal Point

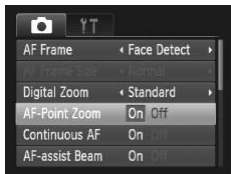If you press the shutter button halfway, the AF frame will magnify and you can check the focus.



## 1 Choose [AF-Point Zoom].

- Press the **MENU** button, choose the  tab, and then choose the [AF-Point Zoom] menu item. Press the   buttons to choose [On].



## 2 Check the focus.

- Press the shutter button halfway.
  - ▶ In [Face Detect] (p. 78), the face selected as the main subject will appear magnified.
  - ▶ In [Center] (p. 78), the contents of the center AF frame will appear magnified.



### What if the display does not magnify?

 
The display will not appear magnified in [Face Detect] if a face cannot be detected or is too big in relation to the screen. In [Center], it will not appear magnified if the camera cannot focus.



The magnified display will not appear when using Digital Zoom (p. 60) or Digital Tele-Converter (p. 61) or when connected to a TV (p. 76).

## Shooting with the AF Lock

The focus can be locked. After locking the focus, the focal distance will not change even when you release your finger from the shutter button.



### 1 Lock the focus.

- Keep the shutter button pressed halfway and press the **AF-ON** button.
- ▶ **MF** and the MF indicator appear. You can check the distance to the subject.

### 2 Compose the scene and shoot.



# Choosing the Person to Focus On (Face Select)

You can choose a specific person's face to focus on and then shoot.



## 1 Set Face Select mode.

- Point the camera toward the face of the subject and press the  $\left[ \begin{smallmatrix} \text{AF-L} \\ \text{AF-ON} \end{smallmatrix} \right]$  button.
- ▶ After [Face Select : On] appears, a face frame  $\left[ \begin{smallmatrix} \text{FR} \\ \text{FD} \end{smallmatrix} \right]$  will appear around the face detected as the main subject.
- Even if the subject moves, the face frame  $\left[ \begin{smallmatrix} \text{FR} \\ \text{FD} \end{smallmatrix} \right]$  will follow the subject within a certain range.
- If a face is not detected,  $\left[ \begin{smallmatrix} \text{FR} \\ \text{FD} \end{smallmatrix} \right]$  will not appear.



## 2 Choose the face on which to focus.

- If you press the  $\left[ \begin{smallmatrix} \text{AF-L} \\ \text{AF-ON} \end{smallmatrix} \right]$  button, the face frame  $\left[ \begin{smallmatrix} \text{FR} \\ \text{FD} \end{smallmatrix} \right]$  will move to another face detected by the camera.
- When the frame has made a full circuit of all detected faces, [Face Select: Off] will display, and the AF frame mode screen will reappear.



## 3 Shoot.

- Press the shutter button halfway. The face frame of the chosen face will change into a green  $\square$ .
- Press the shutter button fully to shoot.




### Confirming the number of detected faces

Keeping the  $\left[ \begin{smallmatrix} \text{AF-L} \\ \text{AF-ON} \end{smallmatrix} \right]$  button pressed will display the number of faces detected by the camera (35 at the most) (orange: main subject's face, white: detected face).

# Changing the Metering Mode



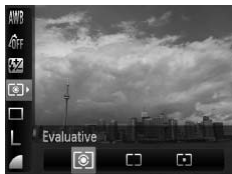

You can change the Metering mode (brightness measuring function) to match the shooting conditions.







## 1 Choose the Metering mode.

- After pressing the  button, press the   buttons to choose .

## 2 Choose an option.

- Press the   buttons or turn the  dial to choose an option, then press the  button.
- ▶ The setting will display on the screen.

 Evaluative	Suitable for standard shooting conditions, including back lit shots. Automatically adjusts the exposure to match the the shooting conditions.
 Center Weighted Avg.	Averages the light metered from the entire frame, but gives greater weight to the center.
 Spot	Only meters within the  (Spot AE Point frame) that appears at the center of the screen.

# Shooting in Manual Focus Mode

You can use manual focus when auto focus is not possible. If you press the shutter button halfway after roughly focusing manually, you can fine tune the focus.



## 1 Choose MF.

- Press the button, then press the buttons or turn the dial to choose , then press the button again.
- ▶ and the MF indicator appear.



## 2 Focusing roughly.

- Using the bar that shows the distance display and AF point zoom as a guide, turn the dial while looking at the magnified display to adjust the focus.
- ▶ The image at the center of the AF frame is displayed enlarged.

## 3 Fine tuning the focus.

 
- If you press the shutter button halfway, you can fine tune the focus (Safety MF).






- You cannot change the AF frame setting or size while focusing manually (p. 78). If you want to change the AF frame mode or size, cancel Manual focus mode first.
- In order to focus accurately, you are recommended to fix the camera to a tripod.
- Magnified display cannot be used with the Digital Zoom (p. 60), the Digital Tele-Converter (p. 61) or when connected to a TV (p. 76), however the focus can be adjusted.
- If [MF-Point Zoom] is set to [Off] in the tab, the magnified display will not be available.
- If [Safety MF] is set to [Off] in the tab, you will not be able to fine tune the focus even if you press the shutter button.

## Shooting with the AE Lock

When you wish to take several shots with the same exposure, you can set the exposure and focus separately using the AE lock. AE stands for “Auto Exposure”.



### 1 Lock the exposure.

- Point the camera toward the subject and press the  button while pressing the shutter button halfway.
- ▶ When  appears, the exposure will be set.
- If you release your finger from the shutter button and press another button,  will disappear and the AE will unlock.

### 2 Compose the scene and shoot.



 
#### Program Shift

If you lock the exposure and turn the  dial, you can change the shutter speed and aperture value combination.




## Shooting with the FE Lock

Just as with the AE lock (p. 84), you can lock the exposure for shooting with the flash. FE stands for “Flash Exposure”.

### 1 Raise the flash and choose (p. 66).



### 2 Lock the exposure.

- Point the camera toward the subject and press the  button while pressing the shutter button halfway.
- ▶ The flash will fire and when  appears, the flash output will be retained.
- If you release your finger from the shutter button and press another button,  will disappear and the FE will unlock.

### 3 Compose the scene and shoot.

## Shooting with Slow Synchro

You can make the main subject, such as people, appear bright by having the camera provide the appropriate illumination with the flash. At the same time, you can use a slow shutter speed to brighten the background that the light from the flash cannot reach.



### 1 Raise the flash.

### 2 Choose .

- After pressing the  button, press the  buttons or turn the  dial to choose , then press the  button again.
- ▶ Once set,  will appear on the screen.

### 3 Shoot.

- Even if the flash fires, ensure that the subject does not move until the shutter sound ends.




Attach the camera to a tripod to prevent the camera from moving and blurring the image. It is recommended to set the [IS Mode] to [Off] when shooting with a tripod (p. 121).

## Setting the Shutter Speed

You can set the shutter to the speed at which you want to shoot. The camera will set the appropriate aperture value for the shutter speed you set.

**Tv** stands for "Time value".



- 1 Set the mode dial to **Tv**.
- 2 Make the setting.
  - Turn the  dial to set the shutter speed.
- 3 Shoot.

### Available Shutter Speeds

15", 13", 10", 8", 6", 5", 4", 3"2, 2"5, 2", 1"6, 1"3, 1", 0"8, 0"6, 0"5, 0"4, 0"3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/13, 1/15, 1/20, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600, 1/2000, 1/2500

- 2" indicates 2 seconds, 0"3 indicates 0.3 second and 1/160 indicates 1/160 second.
- The fastest shutter speed when using the flash is 1/500 second. The camera automatically resets the shutter speed to 1/500 second if a faster speed is chosen.
- Depending on the zoom position, some shutter speeds may not be available.



### What if aperture value is displayed in orange?

If the aperture value displays in orange when the shutter button is pressed halfway, the scene has exceeded the correct exposure limits. Adjust the shutter speed until the aperture value displays in white. Safety shift can also be used (p. 88).



- When shutter speeds of 1.3 seconds or slower are used, images are processed to eliminate noise after being taken. A certain amount of processing time may be needed before you can take the next shot.
- It is recommended to set the [IS Mode] to [Off] when lowering the shutter speed and shooting with a tripod (p. 121).

## Setting the Aperture Value


You can set the aperture to a value at which you want to shoot. The camera will set the appropriate shutter speed for the aperture value you set.

**Av** stands for “Aperture value”.



**1** Set the mode dial to **Av**.

**2** Make the setting.

- Turn the  dial to set the aperture value.

**3** Shoot.

### Available Aperture Values

F2.8, F3.2, F3.5, F4.0, F4.3, F4.5, F5.0, F5.6, F6.3, F7.1, F8.0

- The fastest shutter speed when using the flash is 1/500 second. As a result, the camera will not set a shutter speed faster than 1/500 second regardless of the the aperture value you set.
- Depending on the zoom position, some aperture values may not be available.




### What if shutter speed is displayed in orange?

If the shutter speed displays in orange when the shutter button is pressed halfway, the scene has exceeded the correct exposure limits. Adjust the aperture value until the shutter speed displays in white. Safety shift can also be used.



### Safety Shift

With **Tv** and **Av** modes, if [Safety Shift] is set to [On] in the  tab, the shutter speed or aperture value is automatically adjusted for the correct exposure when it cannot otherwise be obtained.

Safety Shift is disabled when the flash is enabled.






# Setting the Shutter Speed and Aperture Value

You can manually set the shutter speed and aperture to shoot images. **M** stands for “Manual”.



## 1 Set the mode dial to **M**.
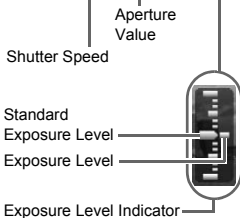
## 2 Make the setting.



 
- Press the  button to choose the shutter speed or aperture value.
- Turn the  dial to set a value.
- ▶ The set exposure level appears on the indicator. You can check the difference against the standard exposure level.
- ▶ When the difference is more than  $\pm 2$  stops, the set exposure level appears in orange. When you press the shutter button halfway, “-2” or “+2” appears in orange.





- The standard exposure is calculated according to the metering method chosen (p. 82).
- If you use the zoom after making settings or change the composition, the exposure level may change.
- Depending on the shutter speed or aperture value set, the monitor brightness may change. If the flash is raised and set to , the monitor brightness will not change.
- If you press the  button while holding down the shutter button halfway, the shutter speed or aperture value (whichever is not currently chosen) will automatically adjust to obtain the correct exposure (the correct exposure may not be obtained depending on the settings).

## Correcting the Brightness and Shooting (i-Contrast)

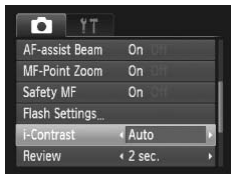The camera can detect areas in the scene, such as faces or backgrounds, that are too bright or dark and automatically adjust them to the optimum brightness when shooting. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression when shooting.



### Choose [i-Contrast].

- Press the **MENU** button, choose the  tab, and then choose the [i-Contrast] menu item. Press the **◀▶** buttons to choose [Auto].
- ▶  will appear on the screen.




Under some conditions, the image may appear coarse or may not be corrected properly.



You can correct recorded images (p. 110).


# Red-Eye Correction

You can automatically correct red-eye that occurs in images taken with the flash.

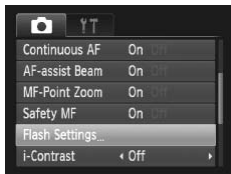

## 1 Choose [Flash Settings].

- Press the **MENU** button, choose [Flash Settings] from the tab and press the button.

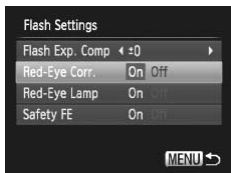

## 2 Adjust the setting.

- Press the or turn the dial to choose [Red-Eye Corr.] and press the buttons to choose [On].
  - ▶ will appear on the screen (p. 44).



Red-eye correction may be applied to red areas other than red eyes. For example, when red make-up has been used around eyes.



- You can correct recorded images (p. 111).
- With the flash raised, if you press the button and immediately press the **MENU** button, the Flash Settings screen will appear.

# Adjusting the Flash Exposure Compensation





Just like with exposure compensation (p. 67), you can adjust the exposure  $\pm 2$  stops in 1/3-stop increments when using the flash.





## 1 Choose .

- After pressing the  button, press the  buttons to choose .

## 2 Make the setting.


- Press the  buttons or turn the  dial to choose the flash exposure compensation, then press the  button.
  - ▶  will appear on the screen.



To set the flash exposure compensation, choose [Flash Settings] (p. 91) from the  tab, then choose [Flash Exp. Comp] and press the  buttons to choose a setting (p. 48).



## Safety FE

The camera automatically changes the shutter speed or aperture value when the flash fires to avoid overexposing and blowing out the highlights in the scene. In the  tab, if [Safety FE] in [Flash Settings] is set to [Off], the shutter speed and aperture value will not automatically adjust.

# Adjusting the Flash Output

In **M** mode, you can choose 3 levels of flash output.






**1** Set the camera to **M** mode (p. 89).




**2** Choose the flash output.

- After pressing the  button, press the  buttons to choose .

**3** Make the setting.

- Press the  buttons or turn the  dial to choose an option, then press the  button.



- To set the flash output, choose [Flash Settings] (p. 91) from the  tab, then choose [Flash Output] and press the  buttons to choose a setting (p. 48).
- In **Tv** and **Av** modes, you can set the flash output if you choose the  tab, then [Flash Settings] and set the [Flash Mode] option to [Manual].

 



# 6

## Using Various Functions for Shooting Movies

This chapter provides more advanced information than the “Shooting Movies” and “Viewing Movies” sections of Chapter 1.

---



- This chapter assumes that the mode dial is set to  (Movie mode).

# Changing the Image Quality

You can choose between three image quality settings.



## 1 Choose the image quality.

- After pressing the **FUNC SET** button, press the **▲▼** buttons to choose **640**.

## 2 Choose an option.

- Press the **◀▶** buttons or turn the **○** dial to choose an option, and press the **FUNC SET** button.
- ▶ The setting will display on the screen.

## Image Quality Table

Image Quality (Recording Pixels/Frame Rate)	Content
<b>640</b> 640 x 480 pixels, 30 frames/sec.	For shooting standard quality movies.
<b>640P</b> 640 x 480 pixels, 30 frames/sec. LP	The image quality will be lower than with <b>640</b> , but you can record twice the length.
<b>320</b> 320 x 240 pixels, 30 frames/sec.	Since the number of the recording pixels is smaller, the image quality will be lower than with <b>640</b> , but you can record three times the length.


## Estimated Shooting Time

Image Quality	Shooting Time	
	2 GB	8 GB
<b>640</b>	16 min. 47 sec.	1 hr. 7 min. 6 sec.
<b>640P</b>	33 min. 2 sec.	2 hrs. 12 min. 3 sec.
<b>320</b>	46 min. 33 sec.	3 hrs. 6 min. 4 sec.

- Based on Canon's testing standards.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.



## AE Lock/Exposure Shift



In  mode, you can set the exposure or change it in 1/3 steps within a range of  $\pm 2$ .

### 1 Focus.


- Press the shutter button halfway to focus.



### 2 Lock the exposure.

- After releasing the shutter button, press the  button to lock the exposure. The exposure shift bar appears.
- Press the  button again to release the lock.

### 3 Change the exposure.

- While watching the screen, turn the  dial to adjust the brightness.

### 4 Shoot.

## Other Shooting Functions

The following functions can be used in the same way as for still images.











- **Zooming in More Closely on Subjects (Digital Zoom) (p. 60)**  
You can use the digital zoom, but the optical zoom cannot be used.  
If you want to shoot at the maximum zoom factor, you should adjust the optical zoom to the maximum before shooting.  
The sound of the zoom will be recorded.
- **Using the Self-Timer (p. 63)**
- **Shooting Close-ups (Macro) (p. 67)**
- **Adjusting the White Balance (p. 71)**
- **Changing the Tone of an Image (My Colors) (p. 73)**
- **Shooting Using the Two Second Self-Timer (p. 74)**
- **Shooting Using a TV Monitor (p. 76)**
- **Shooting with the AF Lock (p. 80)**
- **Shooting in Manual Focus Mode (p. 83)**
- **Turning off the AF Assist Beam (p. 119)**
- **Displaying the Overlay (p. 121)**  
[3:2 Guide] is not available.
- **Changing the IS-Mode Settings (p. 121)**  
You can switch between [Continuous] and [Off].

# Playback Functions

The following functions can be used in the same way as for still images.

- Erasing Images (p. 26)
- Quickly Searching Images (Index Display) (p. 100)
- Searching for Images Using the Jump Display (p. 101)
- Viewing Slideshows (p. 102)
- Changing Image Transitions (p. 104)
- Viewing Images on a TV (p. 105)
- Protecting Images (p. 106)
- Erasing All Images (p. 107)
- Rotating Images (p. 108)

## Summary for “Viewing Movies” (p. 33)


	Exit
	Playback
	Slow Motion Playback (you can use the ◀▶ buttons to adjust the speed. Sound will not play back.)
	Display the first frame
	Previous frame (Rewind if you hold down the  button.)
	Next frame (Fast forward if you hold down the  button.)
	Display the last frame
	Appears when connected to a PictBridge compliant printer (p. 27). Refer to the <i>Personal Printing Guide</i> for details.

# 7

## Using Playback and Other Functions

The first part of this chapter explains various ways to play back and edit images. The latter part explains how to specify images for printing.

---

 
- Press the  button to enter Playback mode before operating the camera.





- It may not be possible to play back or edit images that have been edited on a computer, had their file name changed, or have been taken on a different camera.
- The edit function (pp. 109 – 111) cannot be used if the memory card does not have free space available.

## Quickly Searching Images (Index Display)

Displaying multiple images at a time lets you quickly find the image you want.




### 1 Move the zoom lever toward .





- ▶ Images will display in an index.
- Move the zoom lever toward  to increase the number of images. The number of images increases each time you move the lever.
- Move the zoom lever toward  to reduce the number of images. The number of images will reduce each time you move the lever.



### 2 Change the displayed images.

- Turn the  dial to switch to the next set of images set in Step 1.

### 3 Choose an image.

- Press the    buttons to choose an image.
- An orange frame appears on the chosen image.
- Press the  button to display the chosen image by itself.

# Searching for Images Using the Jump Display

When there are many images on the memory card, you can search them by a specified method or image unit.




## 1 Choose a jump method.






- In Single Image Playback, press the ▲ button.
- ▶ The search method and the position of the currently displayed image will appear at the bottom of the screen.
- Press the ▲▼ buttons to choose the desired search method.





Position of currently displayed image

## 2 Jump to an image.

- Press the ◀▶ buttons or turn the  dial.
- ▶ The camera will use the chosen search method to jump to an image.
- To return to Single Image Playback, press the **MENU** button.

 Jump 10 Images	Jumps over 10 images at a time.
 Jump 100 Images	Jumps over 100 images at a time.
 Jump Shot Date	Jumps to the first image in each shooting date group.
 Jump to first	Jumps to still images only.
 Jump to Movie	Jumps to a movie.



\* The number of images matching the search filter will display on the right side of the screen except for  and .



If there are no images matching the search filter, the ◀▶ buttons will not function.

# Viewing Slideshows

You can automatically play back images recorded to a memory card.

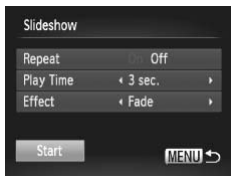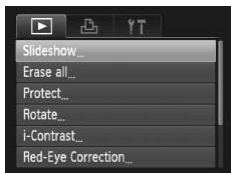

## 1 Choose [Slideshow].

- Press the **MENU** button, choose [Slideshow] from the tab and press the button.

## 2 Make the setting.

- Press the or turn the dial to choose an item, and press the to adjust the setting.

Repeat	Repeats playback of images
Play Time	Display time for each image
Effect	Transition effects when switching between images

## 3 Choose [Start].


- Press the or turn the dial to choose [Start], the press the button.
- ▶ The slideshow will start a few seconds after [Loading image...] displays.
- You can pause/restart a slideshow by pressing the button again.
- Press the **MENU** button to stop the slideshow.



- If you press the or turn the dial during playback, the image will switch. If you keep the pressed, you can fast-forward through images.
- The power saving function does not work during slideshows (p. 54).

## Checking the Focus

You can magnify the area of a recorded image that was inside the AF Frame, or the area of a face that was detected, to check the focus.

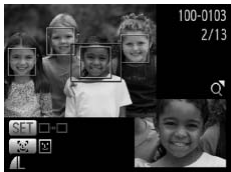

### 1 Press the **DISP.** button, and switch to the focus check display (p. 45).

- For images with detected faces, you can also switch to the focus check display by pressing the **[DISP.]** button.
- ▶ A white frame will appear where the AF frame or face was when the focus was set.
- ▶ A gray frame will appear on a face detected during playback.
- ▶ The area within the orange frame appears magnified.



### 2 Switch frames.

- Move the zoom lever toward **Q** once.
- ▶ The screen shown to the left will appear.
- Press the **[DISP.]** button to switch between frames of detected faces.
- Press the **[FUNC/SET]** button to switch between frames other than those of detected faces.

### 3 Change the magnification level or location.







- Use the zoom lever to change the display size, and the **▲▼◀▶** buttons to change the display position while checking the focus.
- Pressing the **MENU** button resets the display to Step 1.

## Magnifying Images



Approximate Location  
of Displayed Area

### Move the zoom lever toward .


 

- The display will zoom in on the image and, if you continue to hold the zoom lever, it will continue to zoom in up to a factor of 10x.
- If you press the     buttons, you can move the location of the displayed area.
- Move the zoom lever toward  to zoom out or return to Single Image Playback.
- If you turn the  dial, you can switch images in the zoomed state.

## Changing Image Transitions

You can choose from two transition effects when switching between images in single image playback.



### Choose [Transition].

- Press the **MENU** button and choose the  tab, then choose [Transition] and press the   buttons to choose a transition effect.




## Viewing Images on a TV

Using the supplied AV Cable, you can connect the camera to a TV to view images you have shot.

### Items to Prepare


- Camera and TV
- AV cable supplied with the camera (p. 2)

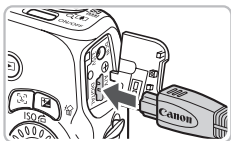

**1 Turn off the camera and TV.**


**2 Connect the camera to the TV.**

- Open the camera's terminal cover and fully insert the plug of the cable into the camera's terminal.
- Insert the cable plug fully into the video input terminals as shown in the illustration.

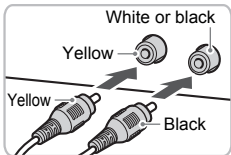


**3 Turn on the TV and switch it to the input to which the cable is connected.**

**4 Turn on the camera.**

- Press the  button to turn on the camera.
- ▶ The image will appear on the TV (nothing will appear on the monitor of the camera).
- After you finish viewing, turn off the camera and TV, and unplug the AV cable.




### What if the images don't properly display on the TV?



Images will not display correctly if the camera's video output setting (NTSC/PAL) does not match the TV system. Press the **MENU** button, choose the  tab and [Video System] to switch to the correct video system.

# Protecting Images

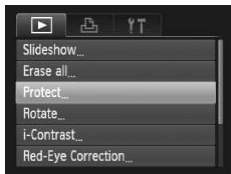You can protect important images so that they cannot be erased by the camera (pp. 26, 30, 107).









## 1 Choose [Protect].

- Press the **MENU** button, choose the  tab and [Protect], and then press the  button.



## 2 Protect the image.

- Press the   buttons to choose an image, then press the .
- ▶ Once protected,  will appear.
- Pressing the  button again deselects the image and  will disappear.
- To protect additional images, repeat the above procedure.
- Pressing the **MENU** button will restore the menu screen.




If you format the memory card (p. 52), protected images will also be erased.





Protected images cannot be erased with the camera's erase function. To erase an image, cancel protection first.


## Erasing All Images

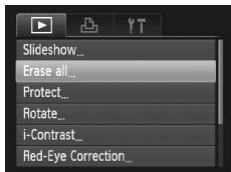You can choose and erase all images at once. Since erased images cannot be recovered, exercise adequate caution before erasing. Protected images (p. 106) cannot be erased.





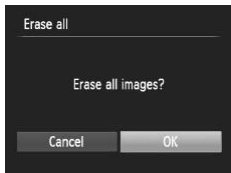

### 1 Choose [Erase all].

- Press the **MENU** button, choose the  tab and [Erase all], and press the  button.




### 2 Erase all images.



- Press the   buttons or turn the  dial to choose [OK], then press the  button.
- ▶ All images will be erased.
- Pressing the **MENU** button will restore the menu screen.

# Rotating Images

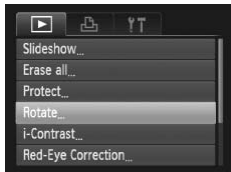You can change the orientation of an image and save it.


 




## 1 Choose [Rotate].

- Press the **MENU** button, choose the  tab and [Rotate], and press the  button.




## 2 Rotate the image.

- Press the   buttons or turn the  dial to choose an image.
- The image will rotate 90° with each press of the  button.
- Pressing the **MENU** button will restore the menu screen.

# Resizing Images

You can resize images to a lower pixel setting and save the resized image as a separate file.

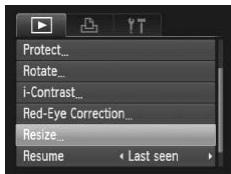

## 1 Choose [Resize].

- Press the **MENU** button and choose the tab, then choose [Resize] and press the button.


## 2 Choose an image.

- Press the buttons or turn the dial to choose the image and press the button.



## 3 Choose an image size.

- Press the buttons or turn the dial to choose an option, then press the button.
  - ▶ The [Save new image?] screen will appear.

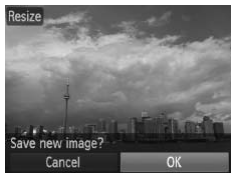

## 4 Save the new image.

- Press the buttons or turn the dial to choose [OK] and press the button.
  - ▶ The image will be saved as a new file.



## 5 Display the new image.


- When you press the **MENU** button, the [Display new image?] screen will appear.
- Press the buttons, or turn the dial to choose [Yes] and press the button.
  - ▶ The saved image will display.





- You cannot resize an image to a larger size.
- You cannot resize images taken with the **W** and **XS** settings.

## Correcting the Brightness (i-Contrast)

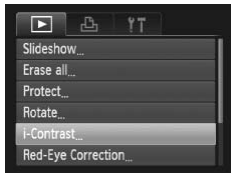



The camera can detect areas in an image, such as faces or backgrounds, that are too dark and automatically adjust them to the optimum brightness. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression. You can choose 4 levels of correction: [Auto], [Low], [Medium] or [High]. Corrected images will be saved as a new file.



### 1 Choose [i-Contrast].





- Press the **MENU** button, choose the  tab and [i-Contrast], then press the  button.

### 2 Choose an image.

- Press the   buttons or turn the  dial to choose the image and press the  button.



### 3 Choose a menu item.

- Press the   buttons or turn the  dial to choose an option, then press the  button.

### 4 Save as a new image and display.

- Perform Steps 4 and 5 on p. 109.



**What if the image wasn't corrected by the [Auto] option as well as you would like?**


Choose [Low], [Medium] or [High] and adjust the image.





- Under some conditions, the image may appear coarse or the exposure setting may not be suitable.
- Repeatedly adjusting the same image may cause the quality to deteriorate.

# Correcting the Red-Eye Effect

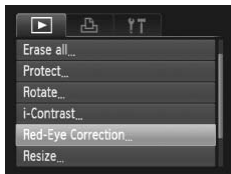


You can automatically correct red eyes in images and save them as new files.




## 1 Choose [Red-Eye Correction].


- Press the **MENU** button, choose the  tab and [Red-Eye Correction], then press the  button.
- ▶ The [Red-Eye Correction] screen will appear.

## 2 Choose an image.






- Press the   buttons or turn the  dial to choose an image.
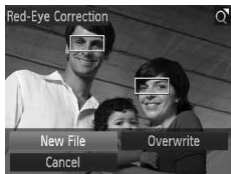
## 3 Correct the image.

- Press the  button.
- ▶ Red-eye detected by the camera will be corrected and a frame will appear around the corrected portion.
- You can zoom the image using the procedures in “Magnifying Images” (p. 104).



## 4 Save as a new image and display.

- Press the    buttons, or turn the  dial to choose [New File], and press the  button.
- ▶ The image will be saved as a new file.
- Perform Step 5 on p. 109.




- Some images may not be properly corrected.
- When [Overwrite] in Step 4 is chosen, the uncorrected image is overwritten with the corrected data, erasing the original image.
- Protected images cannot be overwritten.

## Choosing Images for Printing (DPOF)



You can choose certain images on a memory card for printing (up to 998 images) and specify the number of print copies so they can be printed together or processed at a photo developer service. You can then print all the chosen images at once or take the memory card to a photo developer to order prints. These selection methods comply with the DPOF (Digital Print Order Format) standards.

### Print Settings

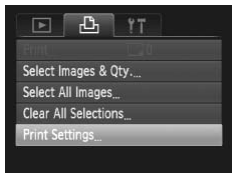
 

 

You can set the print type, date and file number. These settings apply to all images chosen for printing.



#### 1 Choose [Print Settings].


- Press the **MENU** button and choose the  tab, then choose [Print Settings] and press the  button.

#### 2 Adjust the settings.

- Press the   buttons or turn the  dial to choose a menu item, then press the   buttons to choose an option.
- ▶ Pressing the **MENU** button accepts the settings and restores the menu screen.

<b>Print Type</b>	Standard	Prints one image per page.
	Index	Prints several reduced size images per page.
	Both	Prints both standard and index formats.
<b>Date</b>	On	Prints the date from the shooting information.
	Off	–
<b>File No.</b>	On	Prints the file number.
	Off	–
<b>Clear DPOF data</b>	On	Removes all print settings after printing.
	Off	–




- Some printers or photo developer services may not be able to reflect all of the print settings in the output.
-  may appear when using a memory card with print settings set by a different camera. These settings will be overwritten with those set by your camera.
- Images with the date embedded always print with the date, regardless of the [Date] setting. As a result, some printers may print the date twice on these images if [Date] is also set to [On].





- With [Index] chosen, the [Date] and [File No.] options cannot be set to [On] at the same time.
- The date will be printed in the style set in the [Date/Time] function in the **Y T** tab (p. 18).

## Choosing the Number of Copies

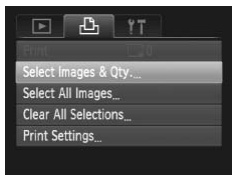

### 1 Choose [Select Images & Qty.].

- Press the **MENU** button and choose the tab, then choose [Select Images & Qty.] and press the button.

### 2 Choose an image.

- Press the buttons or turn the dial to choose an image, then press the button.
- ▶ You will be able to set the number of print copies.
- If you choose [Index], appears on the screen. Pressing the button again will deselect the image and will disappear.




### 3 Set the number of prints.

- Press the buttons or turn the dial to set the number of prints (maximum 99).
- Repeat Steps 2 and 3 to choose other images and the number of prints for each.
- You cannot set the number of print copies for index prints. You can only choose which images to print.
- Pressing the **MENU** button accepts the settings and restores the menu screen.



## Set All Images to Print Once




### 1 Choose [Select All Images].

- Choose [Select All Images] from the screen in Step 1 on p. 113 and press the  button.


### 2 Make print settings.

- Press the ◀▶ buttons or turn the  dial to choose [OK] and press the  button.

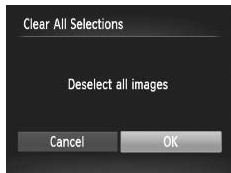

## Clearing All Selections



### 1 Choose [Clear All Selections].

- Choose [Clear All Selections] in Step 1 on p. 113, and press the  button.

### 2 All selections will be cleared.

- Press the ◀▶ buttons or turn the  dial to choose [OK], then press the  button.

# 8

## Customizing the Camera

You can customize various functions to suit your shooting preferences. The first part of this chapter explains convenient and commonly used functions. The latter part explains how to change shooting and playback settings to suit your purposes.

---



## Changing Functions

You can customize convenient and commonly used functions from the **Fn** tab (p. 48).

### Turning Off the Start-up Image

You can turn off the start-up image that displays when you turn on the camera.



- Choose [Start-up Image], then press the **Left/Right** buttons to choose [Off].

### Changing the File Number Assignment

Images you shoot are automatically assigned file numbers in the order they were taken, from 0001 – 9999, and saved to folders of up to 2,000 images. You can change the file number assignment.



- Choose [File Numbering], then press the **Left/Right** buttons to choose an option.

Continuous	Even if you shoot using a new memory card, the file numbers are assigned consecutively until an image with the number 9999 is taken/saved.
Auto Reset	If you replace the memory card with a new one, file numbering begins with 0001 again.



- If you use a memory card already containing images, the newly assigned file numbers may continue the existing numbering for both the [Continuous] and [Auto Reset] settings. If you want to start over with file number 0001, format the memory card before use (p. 52).
- Refer to the *Software Guide* for information regarding folder structure or image types.

## Creating Folders by Shooting Date


Images are saved into folders created each month, however, you can also create folders by shooting date.



- Choose [Create Folder] and press the ◀▶ buttons to choose [Daily].
- Images will be saved into folders created on each shooting date.

## Changing the Lens Retract Time


For safety reasons, the lens retracts about 1 minute after pressing the ▶ button when in a Shooting mode (p. 25). You can set the retraction time to [0 sec.].

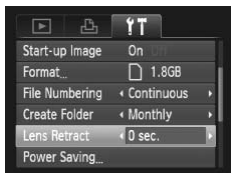



- Choose [Lens Retract], then press the ◀▶ buttons to choose [0 sec.].

## Turning off the Power Saving Function

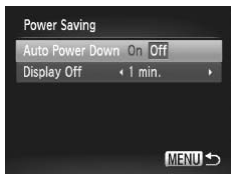You can set the power saving function (p. 54) to [Off]. Setting it to [On] is recommended to save battery power.







- Choose [Power Saving], then press the  button.
- Press the ▲▼ buttons or turn the  dial to choose [Auto Power Down], then press the ◀▶ buttons to choose [Off].
- If you set the power saving function to [Off], be careful not to forget to turn off the camera after use.

### Setting the Screen Shut-Off Time

You can adjust the time the screen takes to shut off automatically (p. 54). This also works when [Auto Power Down] is set to [Off].




- Choose [Power Saving], then press the  button.
- Press the  buttons or turn the  dial to choose [Display Off], then press the  buttons to choose a time.
- In order to save battery power, it is recommended to choose less than [1 min.].


### Changing Distance Units

You can change the distance units that display in the zoom bar (pp. 22, 60) and the MF indicator (p. 83) from m/cm to ft/in.



- Choose [Distance Units], then press the  buttons to choose [ft/in].

## Changing Shooting Functions


If you set the mode dial to **P**, you can change the settings in the  tab (p. 48).




Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 132 – 135).

## Switching the Focus Setting

The camera focuses on whatever it is aimed at even when the shutter button is not pressed. However, you can set it so that the camera only focuses when the shutter button is pressed halfway.

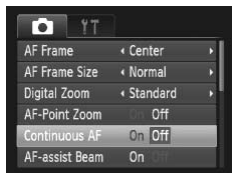



- Choose [Continuous AF], then press the  buttons to choose [Off].

On	Since the camera focuses continuously until you press the shutter button halfway, it allows you to shoot without missing opportunities.
Off	This conserves battery power.

## Turning off the AF Assist Beam


The lamp will automatically light to assist focusing in low light conditions when you press the shutter button halfway. You can turn off the lamp.

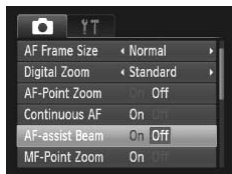





- Choose [AF-assist Beam], then press the  buttons to choose [Off].
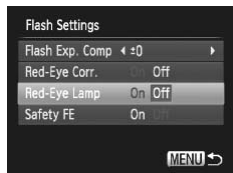
## Turning off the Red-Eye Reduction Function

The red-eye reduction lamp lights in order to reduce the red-eye effect that occurs when shooting in dark conditions with the flash. You can turn off this function.




- Choose [Flash Settings], then press the  button.
- Press the  buttons or turn the  dial to choose [Red-Eye Lamp], then press the  buttons to choose [Off].

## Changing the Image Display Time

 You can change the length of time the images display directly after shooting.




- Choose [Review], then press the  buttons to choose an option.

2 – 10 sec.	Displays images for the set time.
Hold	The image displays until you press the shutter button halfway.
Off	No image displays

## Changing the Way the Image Displays Right After Shooting

You can change the way the image displays after shooting.



- Choose [Review Info], then press the  buttons to choose an option.

Off	Displays the image only.
Detailed	Displays detailed information (p. 45).
Focus Check	The area inside the AF frame is magnified, allowing you to check the focus. The procedure is the same as in "Checking the Focus" (p. 103).



## Displaying the Overlay

You can display gridlines for vertical and horizontal guidance, or a 3:2 guide to confirm the printable area for postcard size prints.



- Choose [Disp. Overlay], then press the ◀▶ buttons to choose an option.

Grid Lines	A grid overlays the display.
3:2 Guide	The areas outside the 3:2 range are grayed out. This area will not print when printing on paper with a 3:2 aspect ratio.
Both	Both grid lines, and the 3:2 guide will display.



- In **W** mode, you cannot set [3:2 Guide] or [Both].
- Grid Lines will not be recorded on the image.
- The gray areas displayed with [3:2 Guide] are the areas that will not be printed. The actual image recorded will include the portion in the gray areas.

## Changing the IS-Mode Settings



- Choose [IS Mode], then press the ◀▶ buttons to choose an option.

Continuous	Image stabilization is always on. You can confirm the result directly on the display, which makes it easier to check the composition or focus.
Shoot Only	Image stabilization is only active at the moment of shooting.
Panning	Image stabilization only counters up and down motion. This option is recommended for shooting objects moving horizontally.




- If camera shake is too strong, attach the camera to a tripod. It is recommended to set the IS Mode to [Off] when the camera is attached to a tripod.
- When using [Panning], hold the camera horizontally. Image stabilization does not work when the camera is held vertically.

## Changing Playback Functions

You can adjust the settings in the  tab by pressing the  button (p. 48).

### Choosing the Image that First Displays in Playback

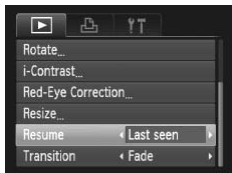

- Choose [Resume], then press the ◀▶ buttons to choose an option.

Last seen	Resumes with the image last viewed.
Last shot	Resumes with the most recently shot image.

# 9

## Useful Information

This chapter introduces date/time battery replacement, how to use the AC adapter kit (sold separately), troubleshooting tips, and contains lists of available camera functions. The index also appears at the end.

 
---




## Replacing the Date/Time Battery

The life of the date/time battery (back-up battery) is approximately 7 years. If the Date/Time settings screen appears every time the camera is turned on, replace the date/time battery with a new one (CR1220).

**1** Turn off the camera.




**2** Remove the date/time battery holder.

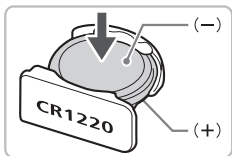

**3** Replace the battery.

 - Insert the battery with (+) and (-) sides oriented correctly.




**4** Insert the battery holder.

**5** Turn on the camera's power and set the date/time (p. 18).

## Using Household Power


If you use AC Adapter Kit ACK800 (sold separately), you can use the camera without worrying about how much charge is left in the battery.

### 1 Turn off the camera.

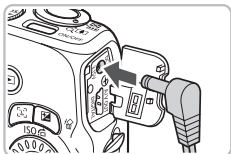

### 2 Plug the cord into the camera.

 - Open the cover and fully insert the plug into the camera.



### 3 Connect the power cord.

- Connect the power cord to the compact power adapter, then plug the other end into a power outlet.
- You can turn the camera on to use it.
- After you finish, turn off the camera and unplug the power cord from the power outlet.



Do not unplug the plug and power cord with the camera turned on. This could erase images you have taken or damage the camera.

# Troubleshooting

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list.

## Power

### You pressed the power button, but nothing happened.

- Confirm that the batteries are properly inserted (p. 14).
- Confirm that the batteries are not depleted (p. 16).
- Confirm that the memory card/battery cover is securely closed (p. 15).
- If the battery terminals are dirty, battery performance will decrease. Clean the terminals with a cotton swab and re-insert the batteries several times.

### Batteries are consumed quickly.

- Battery performance decreases at low temperatures. Warm the batteries by, for example, placing them in your pocket, taking care that the terminals do not come into contact with any metal objects.

### Lens will not retract.

- Confirm that the memory card/battery cover is securely closed. After closing the memory card/battery cover, turn the power on then back off (p. 15).

## TV output

### Image is distorted or not showing on TV (p. 105).

## Shooting

### Cannot shoot.

- Set the mode dial to the desired Shooting mode (p. 42).
- When in Playback mode (p. 25), press the shutter button halfway (p. 21).

### Screen does not display properly in dark places (p. 46).

### Screen does not display properly while shooting.

Please note, the following will not be recorded in still images, but will be recorded in movies.

- When the camera is subjected to powerful light sources, the display may darken.
- Under fluorescent lighting, the screen may flicker.
- When shooting bright light sources, a bar of light (purplish red) may appear on the screen.

### The screen turns off and you cannot shoot when you press the shutter button halfway (p. 24).

### appears when the shutter button was pressed halfway (p. 23).

- Set the [IS mode] to [Continuous] (p. 121).
- Raise the flash and shoot (p. 66).
- Increase the ISO speed (p. 70).
- Attach the camera to a tripod.


**Image is blurred.**

- Press the shutter button halfway to focus on the subject, then press fully to shoot (p. 21).
- Shoot the subject within the focusing distance (p. 138).
- Set the [AF-assist Beam] to [On] (p. 119).
- Confirm that functions which you do not intend to use (macro, etc.) are not set.
- Shoot using the focus lock or AF lock (pp. 76, 80).


**Even when you press the shutter button halfway, the AF frame does not appear, and the camera does not focus.**

- If you center on the light and dark contrasting area of the subject and push the shutter button halfway, or repeatedly push the shutter button halfway, the frame will appear and the camera will focus.

**Subject is too dark.**

- Raise the flash and set it to  (p. 66).
- Adjust the brightness with exposure compensation (p. 67).
- Adjust the image with i-contrast (pp. 90, 110)
- Use the AE lock, or spot metering to shoot (pp. 82, 84).


**Subject is too bright (overexposed).**

- Lower the flash and set it to  (p. 23).
- Adjust the brightness with exposure compensation (p. 67).
- Use the AE lock, or spot metering to shoot (pp. 82, 84).
- Reduce the light illuminating the subject.

**Image is dark even though the flash fired (p. 24).**

- Increase the ISO speed (p. 70).
- Shoot within an appropriate distance for flash photography (p. 66).
- Adjust the flash exposure compensation or the flash output (pp. 92, 93).

**Image taken using the flash is too bright (overexposed).**

- Shoot within an appropriate distance for flash photography (p. 66).
- Lower the flash and set it to  (p. 23).
- Adjust the flash exposure compensation or the flash output (pp. 92, 93).

**White dots appear on the image when shooting with the flash.**

- Light from the flash has reflected off dust particles or other objects in the air.

**Image appears rough or grainy.**

- Shoot with the ISO speed on a lower setting (p. 70).
- Depending on the Shooting mode, when shooting in a high ISO speed the image may appear rough or grainy (pp. 57, 59).

**Eyes appear red (p. 91).**

- Set the [Red-Eye Lamp] to [On] (p. 120). When shooting with the flash, the lamp (on the front of the camera) lights (p. 42), and for approximately 1 second while the camera is reducing red-eye, it is not possible to shoot. It is more effective if the subject is looking directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.


### Recording images to the memory card takes a long time, or continuous shooting slows down.

- Perform a low-level format of the memory card in the camera (p. 53)

### When you can't make settings for shooting functions or FUNC. menu.

- The items in which settings can be made differ depending on the shooting mode. Refer to Functions Available in Each Shooting Mode (pp. 132–133).

### Cannot operate buttons.

- When the mode dial is set to , some buttons cannot be used (p. 29).

## Shooting movies

### Correct shooting time does not display, or stops.

- Format the memory card in the camera, or use a memory card capable of recording at high speeds. Even when the shooting time does not display properly, the recorded video will be the length that it was actually shot (pp. 32, 52).

### appeared on the screen and shooting ended automatically.

The camera's internal memory was insufficient. Try one of the following.

- Perform a low-level format of the memory card in the camera (p. 53).
- Change the image quality setting (p. 96).
- Use a memory card capable of recording at high speeds (p. 96).

### Zoom does not operate.

- You can use the digital zoom while recording, but not the optical zoom (p. 97).

## Playback


### Cannot play back images or movies.

- If the file name or folder structure is changed on a computer, you may not be able to play back images or movies. Refer to the *Software Guide* for information regarding folder structure or file names.

### Playback stops, or audio cuts out.

- Use a memory card that has been formatted on this camera (p. 52).
- If you copy a movie to a memory card that reads slowly, playback may interrupt momentarily.
- Depending on its capabilities, the computer may drop frames, or the audio may cut out, when playing movies.




### Cannot operate buttons.

- When the mode dial is set to , some buttons cannot be used (p. 30).

## Computer

### Cannot transfer images to a computer.

The problem may be solved by performing the following operations to slow down transfer speed when the camera is connected to a computer by a cable.

- Press and hold down the **MENU** button, then press the  and  buttons simultaneously. Choose [B] when it appears on the screen, then press the  button.



## List of Messages that Appear on the Screen

If error messages appear on the LCD monitor, try one of the following solutions.

### No memory card

- The memory card is not installed in the correct direction. Install the memory card in the correct direction (p. 14).

### Card locked!

- The SD memory card or SDHC memory card's write protect tab is set to "LOCK". Unlock the write protect tab (pp. 14, 17).

### Cannot record!

- You attempted to shoot an image without the a memory card, or with a memory card installed incorrectly. Install the memory card in the correct direction when shooting (p. 14).

### Memory card error (p. 52)

- Contact your Canon Customer Support Help Desk as there may be a problem with the camera.

### Memory card full

- There is not enough free space on the memory card to shoot (pp. 22, 29, 31, 55, 65, 77) or edit images (pp. 109 – 111). Erase the images (pp. 26, 30, 107) to open space for new images, or insert an empty memory card (p. 14).

### Change the batteries (p. 14)

### No Image.

- There are no images recorded on the memory card that can be displayed.

### Protected! (p. 106)

### Unidentified Image/Incompatible JPEG/Image too large./Cannot play back MOV/RAW

- Unsupported images or data, or corrupted image data cannot be displayed.
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not display.

### Cannot magnify!/Cannot rotate/Cannot modify image/Cannot assign to category

- Incompatible images cannot be magnified (p. 104), rotated (p. 108), edited (pp. 109 – 111), or added to a print list (p. 112).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, or added to a print list.
- Movies cannot be magnified (p. 104).

### Too many marks.

- You chose more than 998 images in print settings. Choose less than 998 images (p. 112).

### **Cannot complete!**

- Print settings could not be saved correctly. Reduce the number of selected images and try again (p. 112).

### **Naming error!**

- The file name could not be created because there is an image with the same name as the folder that the camera is attempting to create, or the highest possible file number has already been reached. In the **FILE** menu, change [File Numbering] to [Auto Reset] (p. 116) or format the memory card (p. 52).

### **Communication error**

- Images could not be transferred to the computer or printed due to the large amount of images (approx. 1000) stored on the memory card. Use a commercially available USB card reader to transfer the images. Insert the memory card into the printer's card slot to print.

### **Lens error, restart camera**

- A lens error was detected. Press the power button to turn the camera off and back on (p. 42). If this error message continues to appear, contact your Canon Customer Support Help Desk as there may be a problem with the lens.
- This error can occur if you hold the lens while it is in motion or when using it in a location with excessive dust or sand in the air.

### **Exx (xx: number)**

- A camera error was detected. Press the power button to turn the camera off and back on (p. 42).
- If an error code appears directly after taking a picture, the shot may not have been recorded. Check image in Playback mode.
- If this error code reappears, note the number and contact your Canon Customer Support Help Desk as there may be a problem with the camera.

# Handling Precautions

## Equipment

- This camera is a high-precision electronic device. Do not drop it or subject it to strong impacts.
- Never place the camera close to magnets or motors that generate strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.
- If water droplets have fallen onto, or dirt is stuck on the camera or LCD monitor, wipe with a dry soft cloth or eyeglass wiper. Do not rub or apply force.
- Never use cleaners containing organic solvents to wipe the camera or LCD monitor.
- Use a commercially available blower brush to remove dust from the lens. For stubborn dirt contact the closest Canon Customer Support Help Desk as listed on the customer support leaflet supplied with your camera.
- When you move the camera rapidly from cold to hot temperatures, condensation may form on the internal or external surfaces of the camera. To avoid condensation, put the camera in an airtight, resealable plastic bag and let it adjust to temperature changes slowly before removing it from the bag.
- If condensation has formed, stop using the camera immediately. Continued use may damage the camera. Remove the battery and memory card, and wait until the moisture has completely evaporated before resuming use.

## Memory Cards

- A memory card is a high-precision electronic device. Do not bend, apply force or subject it to strong impacts. Doing so may corrupt image data recorded on the memory card.
- Do not spill liquids on the memory card. Do not touch the memory card's terminals with your hands or metallic objects.
- Do not store memory cards near a TV, speakers or other devices that generate magnetic fields or static electricity. Doing so may corrupt image data recorded on the memory card.
- Do not store memory cards in hot, humid or dusty locations.

# Functions Available in Each Shooting Mode

Function	Shooting modes	M	Av	Tv	P	AUTO
		ISO Speed (p. 70)	ISO AUTO ISO 80 ISO 100 ISO 200 ISO 400 ISO 800 ISO 1600	—	○	○
Flash (pp. 23, 29, 66, 86)*1		—	—	—	○	○
		○	○	○	○	—
		—	○	—	○	—
		○	○	○	○	○
Focusing Zone (pp. 67, 83)	All Range	—	—	—	—	○
		○	○	○	○	—
	MF	○	○	○	○	—
Self-Timer (pp. 63, 64, 74, 75)		○	○	○	○	○
		○	○	○	○	○
		○	○	○	○	○
		○	○	○	○	○
Exposure Compensation (p. 67)/Exposure Shift (p. 97)		—	○	○	○	—
AF Lock (p. 80)		○	○	○	○	—
AE Lock (pp. 84, 97)/FE Lock (p. 85)		—	○	○	○	—
Face Selection (p. 81)		○	○	○	○	○
Information Display (p. 44)	On	○	○	○	○	○
	Off	○	○	○	○	○

Func. Menu		M	Av	Tv	P	AUTO
White Balance (p. 71)	AWB	○	○	○	○	○
		○	○	○	○	—
My Colors (p. 73)		○	○	○	○	—
Flash Exposure Compensation (p. 92)/Flash Output (p. 93)		*5	○	○	*6	—
Light Metering (p. 82)		○	○	○	○	○
	[ ]	○	○	○	○	—
Drive Mode (p. 72)		○	○	○	○	—
Recording Pixels (pp. 68, 96)	L M1 M2 M3 S	○	○	○	○	○
	1640 1920 3200	—	—	—	—	—
Compression Ratio (Image Quality) (p. 68)		○	○	○	○	○

\*1 Fixed to when the flash is lowered, otherwise selectable when the flash is raised.

\*2 when flash fires. \*3 Possible settings: 0 – 30 seconds in [Delay], and 1 – 10 shots in [Shots].

\*4 FE lock not available. \*5 Flash exposure compensation not available.

\*6 Flash output not available. \*7 ISO 3200 is set by default.

## Functions Available in Each Shooting Mode

						SCN								
○	○	○	○	○	○	○	○	○	○	○	○	○	*7	○
—	—	—	—	—	—	—	—	—	—	—	—	—	*7	—
○	○	*2	*2	○	○	*2	*2	—	○	—	○	○	—	—
—	○	*2	*2	○	○	*2	*2	—	○	○	○	○	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	—
○	—	—	—	—	—	—	—	—	—	—	—	—	—	—
—	○	—	○	—	○	—	○	—	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	*4
—	○	○	○	○	○	○	○	—	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Func. Menu														
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
—	○	○	○	○	○	○	○	*9	○	○	○	○	○	—
*10	○	○	○	○	○	○	○	○	○	○	○	○	*11	—
—	—	—	—	—	—	—	—	—	—	—	—	—	—	○
*12	○	○	○	○	○	○	○	○	○	○	○	○	○	—

\*8 is selectable when **MF** is selected. \*9 not selectable

\*10 Fixed to **L**. \*11 **M3** is set by default. \*12 Fixed to .

○ Selectable, or set automatically. — Not selectable

# Menus

## 📷 Shooting Menu

Function		Shooting modes				M	Av	Tv	P	AUTO
AF Frame (p. 78)	Face Detect		○	○	○	○	○	○	*1	
	Center		○	○	○	○	○	○	—	
AF Frame Size (p. 78)	Normal/Small		○	○	○	○	○	○	—	
Digital Zoom (p. 60)	Standard/Off		○	○	○	○	○	○	○	
	Digital Tele-converter (1.4x/2.3x)		○	○	○	○	○	○	○	
AF-Point Zoom (p. 79)	On/Off		○	○	○	○	○	○	○	
Continuous AF (p. 119)	On/Off		○	○	○	○	○	○	*2	
AF-assist Beam (p. 119)	On/Off		○	○	○	○	○	○	○	
MF-Point Zoom (p. 83)	On/Off		○	○	○	○	○	○	—	
Safety MF (p. 83)	On/Off		○	○	○	○	○	○	—	
Flash Settings (pp. 91, 92, 93, 120)	Flash Mode	Auto/Manual	*4	○	○	—	—	—	—	
	Flash Exp. Comp	-2 to +2	—	○	○	○	○	○	—	
	Flash Output	Minimum/ Medium/ Maximum	○	○	○	—	—	—	—	
	Red-Eye Corr.	On/Off	○	○	○	○	○	○	○	
	Red-Eye Lamp	On/Off	○	○	○	○	○	○	○	
	Safety FE	On/Off	—	*5	*5	○	○	○	—	
i-Contrast (p. 90)	Auto/Off		○	○	○	○	○	○	*6	
Safety Shift (p. 88)	On/Off		—	○	○	—	—	—	—	
Review (p. 120)	Off/2 – 10 sec./Hold		○	○	○	○	○	○	○	
Review Info (p. 120)	Off/Detailed/Focus Check		○	○	○	○	○	○	○	
Disp. Overlay (p. 121)	Off/Grid Lines		○	○	○	○	○	○	○	
	3:2 Guide/Both		○	○	○	○	○	○	○	
IS Mode (p. 121)	Continuous/Off		○	○	○	○	○	○	*2	
	Shoot Only/Panning		○	○	○	○	○	○	—	
Date Stamp (p. 62)	Off/Date/Date & Time		○	○	○	○	○	○	○	

\*1 9 points when a face is not detected. \*2 Always [On]. \*3 Available when  is chosen.

\*4 Fixed to [Manual]. \*5 Selectable when [Flash Mode] is set to [Auto]. \*6 Fixed to [Auto].

\*7 Fixed to [2 sec.].

							SCN								
*1	○	○	○	○	○	○	○	—	○	○	○	○	○	—	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
*2	○	○	○	○	○	○	○	○	○	○	○	○	—	○	
—	○	○	○	○	○	○	○	○	○	○	○	○	—	—	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	—	
*2	○	○	○	—	○	○	○	—	○	○	○	○	○	—	
*2	○	○	○	○	○	○	○	—	○	*3	○	○	○	○	
—	○	○	○	○	○	○	○	—	○	○	○	○	○	—	
—	○	○	○	○	○	○	○	—	○	○	○	○	○	○	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	○	○	○	○	○	○	○	—	○	○	○	○	—	—	
*2	○	○	○	○	○	○	○	—	○	○	○	○	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
*6	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
*7	○	○	○	○	○	○	○	○	○	○	○	○	○	—	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	—	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	—	
*2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
—	○	○	○	○	○	○	○	○	○	○	○	○	○	—	
—	○	○	○	○	○	○	○	○	○	○	○	○	—	—	

○ Selectable, or set automatically. — Not selectable

## †† Set up Menu

Item	Options/Summary	Ref. Page
Mute	On/Off*	p. 49
Volume	Set all operation sounds (5 levels).	p. 49
LCD Brightness	Set within a range of $\pm 2$ .	p. 50
Start-up Image	Add an image as start-up image.	p. 116
Format	Formats memory card, erasing all data	p. 52
File Numbering	Continuous*/Auto Reset	p. 116
Create Folder	Monthly*/Daily	p. 117
Lens Retract	1 min.*0 sec.	p. 117
Power Saving	Auto Power Down: On*/Off Display Off: 10, 20 or 30 sec./1*, 2 or 3 min.	pp. 54, 117
Date/Time	Date and time settings	p. 19
Distance Units	m/cm* ft/in	p. 118
Video System	NTSC/PAL	p. 105
Language	Choose display language.	p. 20
Reset All	Returns camera to default settings.	p. 51

\* Default setting



## Playback Menu

Item	Options/Summary	Ref. Page
Slideshow	Plays back images automatically.	p. 102
Erase all	Erases images.	p. 107
Protect	Protects images.	p. 106
Rotate	Rotates images.	p. 108
i-Contrast	Corrects dark portions and contrast in still images.	p. 110
Red-Eye Correction	Corrects red eyes in still images.	p. 111
Resize	Resizes and saves still images.	p. 109
Resume	Last seen*/Last shot	p. 122
Transition	Fade*/Slide/Off	p. 104

\* Default setting

## Print Menu

Item	Options/Summary	Ref. Page
Print	Displays printing screen.	p. 27
Select Images & Qty.	Chooses individual images for printing.	p. 113
Select All Images	Chooses all images for printing.	p. 114
Clear All Selections	Cancel all settings for printing.	p. 114
Print Settings	Sets the printing style.	p. 112

# Specifications

Camera Effective Pixels	Approx. 10.0 million
Image Sensor	1/2.5-inch type CCD (Total number of pixels: Approx. 10.3 million)
Lens	6.0 (W) – 60.0 (T) mm 35mm film equivalent: 36 (W) – 360 (T) mm f/2.8 (W) – f/4.3 (T)
Digital Zoom	Approx. 4.0x (Up to approx. 40x in combination with the optical zoom)
LCD Monitor	3.0-inch type TFT LCD color monitor Approx. 230,000 dots, Picture coverage 100%
AF Frame Mode	Face Detect/Center
Focusing Range (from end of lens)	Auto, Easy: 5 cm (2.0 in.) – infinity (W)/ 1 m (3.3 ft.) – infinity (T) Normal: 50 cm (1.6 ft.) – infinity (W)/ 1 m (3.3 ft.) – infinity (T) Macro: 1 – 50 cm (0.4 in. – 1.6 ft.) (W) Manual Focus: 1 cm (0.4 in.) – infinity (W)/ 1 m (3.3 ft.) – infinity (T) Kids&Pets: 1 m (3.3 ft.) – infinity
Shutter	Mechanical shutter and electronic shutter
Shutter Speed	1 – 1/2500 sec. 15 – 1/2500 sec. (Total shutter speed range)
Image Stabilization	Lens-shift type
Metering System	Evaluative, Center-weighted average or Spot
Exposure Compensation	±2 stops in 1/3-stop increments
ISO speed	Auto, ISO 80/100/200/400/800/1600
(Standard Output Sensitivity, Recommended Exposure Index)	
White Balance	Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom
Built-in Flash	Auto, On, Slow Synchro, Off * Flash exposure compensation/Flash output/Red-eye reduction/Red-eye correction/FE lock/Safety FE settings available
Built-in Flash Range	50 cm – 4.0 m (1.6 – 13 ft.) (W)/ 1.0 – 2.5 m (3.3 – 8.2 ft.) (T)
Shooting Modes	M, Av, Tv, P, Auto, Easy, Portrait, Landscape, Night Snapshot, Kids&Pets, Indoor, SCN*, Movie *Sunset, Night Scene, Fireworks, Beach, Aquarium, Foliage, Snow, ISO 3200
Continuous Shooting	Continuous: Approx. 1.3 images/sec. Continuous Shooting AF: Approx. 0.9 images/sec. Continuous Shooting LV: Approx. 0.9 images/sec.
Self-timer	Approx. 10-sec./Approx. 2-sec. delay, FaceSelf-Timer, Custom Timer
i-Contrast	Auto/Off
Recording Media	SD memory card, SDHC memory card, MultiMediaCard, MMCplus card, HC MMCplus card
File Format	Design rule for Camera File system and DPOF compliant

Data Type	Still images: Exif 2.2 (JPEG) Movies: AVI (Image data: Motion JPEG, Audio data: WAVE (Mono))
Compression	Fine, Normal
Number of Recording Pixels (Still images)	Large: 3648 x 2736 pixels Medium 1: 2816 x 2112 pixels Medium 2: 2272 x 1704 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Widescreen: 3648 x 2048 pixels
(Movies)	640 x 480 pixels (30 frames/sec.) 640 x 480 pixels (30 frames/sec. LP) 320 x 240 pixels (30 frames/sec.)
Number of Possible Shots	Approx. 130 images (Based on CIPA standardized measurement)
Playback Function	Single Image, Easy, Movie, Index, Jump, Magnified Focus, Magnified, Slideshow
Editing Function	Erase, Protect, Rotate, Resize, i-Contrast, Red-Eye Correction
Direct Print Type	PictBridge capable
Interface	Hi-Speed USB (Dedicated connector with unified type of digital, audio and video*) * mini-B compatible Video/Audio output (NTSC and PAL capable, mono audio)
Communication Settings	MTP, PTP
Power	2 AA-size alkaline batteries 2 AA-size NiMH batteries (NB-3AH sold separately) AC adapter kit ACK-800 (sold separately)
Operating Temperatures	0 – 40 °C (32 – 104 °F)
Operating Humidity	10 – 90%
Dimensions (excluding protrusions)	110.6 x 70.4 x 44.7 mm (4.35 x 2.77 x 1.76 in.)
Weight (camera body only)	Approx. 245 g (8.64 oz.)

- All data is based on tests by Canon.
- Camera specifications or appearance are subject to change without notice.

## Numerics

3:2 Guide ..... 44, 121

## A

AC Adapter Kit ..... 40, 125  
Accessories ..... 2, 38  
AE Lock ..... 84, 97  
AF → Focus  
AF Frame ..... 23  
AF Lock ..... 80  
Aquarium (Scene Mode) ..... 58  
AV Cable ..... 2, 105

## B

Battery  
Battery and Charger Kit ..... 38, 40  
Charge Indicator ..... 16  
Date/Time Battery ..... 124  
Power Saving ..... 54, 117, 118  
Beach (Scene Mode) ..... 58  
Black and White Images ..... 73

## C

Camera Shake ..... 121  
Center ..... 78  
Components Guide ..... 42  
Compression → Image Quality  
Continuous AF ..... 119  
Continuous Shooting ..... 72  
AF ..... 72  
LV ..... 72  
Control Dial ..... 8, 43

## D

Date and Time  
Adding to Image ..... 62  
Changing ..... 19  
Date/Time Battery ..... 124  
Settings ..... 18  
Date and Time → Date/Time  
Default Settings ..... 51  
Deleting → Erasing  
DIGITAL CAMERA Solution Disk ..... 2, 34  
Digital Tele-Converter ..... 61

Digital Zoom ..... 60  
Display Language ..... 20  
Display Overlay ..... 121  
DPOF ..... 112

## E

Easy mode ..... 29, 30  
Editing  
i-Contrast ..... 110  
Red-Eye Correction ..... 111  
Resizing (Making Images Smaller) ..... 109  
Rotating Images ..... 108  
Equipment  
Default Settings ..... 51  
Holding the Camera ..... 13  
Erasing All Images ..... 107  
Erasing Images ..... 26, 107  
Error Messages ..... 129  
Exposure  
AE Lock ..... 84, 97  
Compensation ..... 67, 92  
Correction ..... 67  
FE Lock ..... 85  
Shift ..... 97

## F

Face Detect ..... 78  
Face Selection ..... 81  
Face Self-Timer ..... 64  
Factory Settings → Default Settings  
FE Lock ..... 85  
File Number ..... 116  
Fireworks (Scene Mode) ..... 58  
Flash  
On ..... 66  
Slow Synchro ..... 86  
Supplementary Flash ..... 40  
Flash Output ..... 93  
Focus  
AF Frame ..... 23  
AF Frame Mode ..... 78  
AF Lock ..... 80  
AF-Point Zoom ..... 79  
Face Selection ..... 81

- Focus Check ..... 103  
 Focus Lock ..... 76  
 Format → Memory Card, Formatting  
 Formatting (Memory Card) ..... 52  
 FUNC. Menu  
   Basic Operations ..... 47  
   List ..... 132
- G**
- Green Leaves/Autumn Foliage  
 (Scene Mode) ..... 59  
 Grid Lines ..... 121
- H**
- High Speed (ISO) ..... 59, 70  
 High-Power Flash ..... 40  
 Histogram ..... 46  
 Household Power ..... 125
- I**
- i-Contrast ..... 90, 110  
 Image Quality (Compression Ratio) ..... 68  
 Images  
   Display Time ..... 120  
   Editing → Editing  
   Erasing Images ..... 26, 107  
   Playback → View  
   Protect ..... 106  
 Indoor (Scene Mode) ..... 57  
 Interface Cable ..... 2, 27, 34  
 ISO 3200 (Scene Mode) ..... 59  
 ISO Speed ..... 70
- K**
- Kids&Pets (Scene Mode) ..... 56
- L**
- Lamp ..... 42, 63, 120  
 Landscape (Scene Mode) ..... 56  
 LCD monitor → Screen
- M**
- Magnified Display ..... 104  
 Manual  
   Flash Settings ..... 93  
   Focus ..... 83  
   Mode ..... 89  
   White Balance ..... 71  
 Memory Cards ..... 17  
   Available Shots ..... 17, 69  
   Formatting ..... 52  
 Menu  
   Basic Operations ..... 48  
   List ..... 134  
 Metering Mode ..... 82  
 MF-Point Zoom ..... 83  
 Mode Dial ..... 42  
 Movie  
   Image Quality (Frame Rate) ..... 96  
   Recording Pixels ..... 96  
   Shooting Time ..... 32, 96  
   Viewing (Playback) ..... 33, 98  
 MultiMediaCard/MMCplus/HC MMCplus  
 Memory Card → Memory Card  
 My Colors ..... 73
- N**
- Night Scene (Scene Mode) ..... 58  
 Night Snapshot (Scene Mode) ..... 56  
 Number of Shots ..... 16, 69
- P**
- Package Contents → Accessories  
 Personal Printing Guide ..... 2  
 PictBridge ..... 27  
 Playback → View  
 Playback Button ..... 25, 43  
 Playback With Transition Effects ..... 104  
 Portrait (Scene Mode) ..... 56  
 Postcard Size ..... 69  
 Power Button ..... 42  
 Power Saving ..... 54, 117, 118  
 Print Settings (DPOF) ..... 112  
 Printer ..... 27  
 Printing ..... 27  
 Program AE ..... 66  
 Program Shift ..... 84  
 Protect ..... 106

**R**

Recording Pixels (Image Size) .....	68
Red-Eye	
Auto Correction .....	91
Correction .....	111
Reduction .....	120
Resizing (Making Images Smaller) .....	109
Rotating Images .....	108

**S**

Safety FE .....	92
Safety MF .....	83
Safety Shift .....	88
SCN (Scene Mode) .....	57
Screen	
Display Language .....	20
Information Displayed .....	44, 45
Switching the Display .....	44, 45
SD/SDHC Memory Card → Memory Card	
Self-Timer	
10 second Self-Timer .....	63
Changing Delay and	
Number of Shots .....	75
Face Self-Timer .....	64
Two Second Self-Timer .....	74
Sepia Tones .....	73
Shooting Date and Time → Date/Time	
Shooting Using a TV .....	76
Shooting With Macro .....	67
Shutter Button .....	21
Slideshow .....	102
Snow (Scene Mode) .....	59
Software	
DIGITAL CAMERA Solution Disk .....	2, 34
Software Guide .....	2
Transferring Images to a Computer .....	34
Sound Settings .....	49
Strap .....	2, 13
Sunset (Scene Mode) .....	58
Supplementary Flash .....	40

**T**

Terminal .....	27, 35, 105, 125
Tone (White Balance) .....	71
Troubleshooting .....	126

**V**

Video → Movies	
Viewing (Playback)	
Images on a TV .....	105
Index Display .....	100
Magnified Display .....	104
Single Image Playback .....	25
Slideshow .....	102
Viewing Images on a TV .....	105

**W**

White Balance .....	71
Wide (Recording Pixels) .....	68, 69
Wrist Strap → Strap	

**Z**

Zoom .....	22, 31, 60
------------	------------


# MEMO

## Trademark Acknowledgments

- The SDHC logo is a trademark.

## Disclaimer

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- Every effort has been made to ensure that the information contained in this guide is accurate and complete. However, if you notice any errors or omissions, please contact the Canon customer service center indicated on the customer support list included with the product.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.

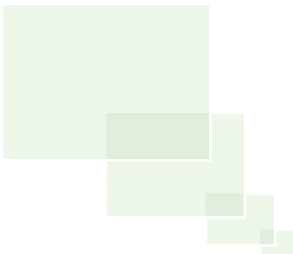



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>