

Instruction for Canon Pixma ip4200 CISS

I CISS Components:

- | | | |
|------------------|------------------------|----------------------|
| 1) CISS 1 set | 2) air filter 5 pcs | 3) support arm 1 set |
| 4) Syringe 5 pcs | 5) CD instruction 1 pc | |



II How to Install:

Step 1:



1. Put the CISS at the right side of the printer



2. Pull out the rubber plug from the Air Hole.



3. Insert the Air Filter.

Step 2: Install Chips



1. Take out the original cartridge, and find the chip.



2. Use knife to cut the 2 points that fix the chip. And then remove the chip. Pls be careful when doing this.



3. Then the chip is removed.



4. Put glue at the same position of the CISS cartridge (at the 2 sides)




5. Stick the chips on the CISS cartridge (Pls note that the color should be correct. Do Not misuse the chips).



6. Repeat this with other cartridges.

Step 3: Install Cartridges

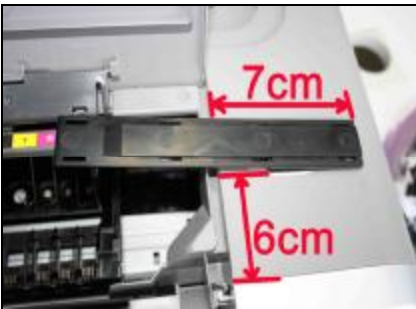

1. Fix the support arm on the printer.



2. Put the cartridges in the printer carriage.

Step 4: Fix the Tube



1. Fix the tube on the support arm with the tube clip.



2. The installation is finished.

Step 5: Adjust the Tube



1. Adjust the length of the tube, and move the printer carriage.



2. Leave enough length for the tube so that the carriage can reach the fastest place.



3. Make sure that the tube will not make trouble to the carriage moving during working.

Improper Situation:



1. Too long Tube



2. Twisted Tube

Proper Situation:



Step 6: Check the Nozzle

Broken lines may be caused by the air inside the nozzle. After repeating cleaning printer head, if there is still broken lines, especially when the individual color has only 1 broken line, then there is no need of continuous cleaning. Just leave the printer stay there for about 1 hour, and this problem may be solved. If the nozzle check is still not OK, then pls contact us.

III Refill Ink



1. Pls note the left ink in the ink tank. If the left ink is less than 1 cm, pls add ink in time.



2. Pull out the Rubber Plug carefully.



3. Refill ink according to the colors. After filling, pls recover the rubber plug in the ink filling hole.

Pls keep the ink tanks and the printer on the same level.

Notice:

1. During normal use, pls do not take out the inner cartridges freely.
2. During printing, pls do not invert the ink tanks. Pls keep the ink tanks on the same level with the printer.
3. Use the CISS in 15°C-35°C environment.
4. When refill ink, suggesting using our ink, in order to ensure the printing quality.

5. When you intend not to use the CISS for long time, pls take off the Air Filter, and recover the Rubber Plug in the Air Hole.

Warning:

1. Do not drink. Leave it at the place unavailable by children.
2. Avoid the sunshine. Do not keep the CISS in too high or too low temperature.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>