



Excalibur Vibrating Pinball



OPERATING MANUAL

www.ExcaliburElectronics.com

Model No. 159

Download from Www.Somanuals.com. All Manuals Search And Download.

Congratulations on your purchase of Excalibur Electronics' Vibrating Pinball! To get the most fun from your new game, please read this operating manual thoroughly, paying special attention to safety and care instructions.

Installing Batteries

Your game requires 2 AA batteries (not included). To install the batteries, carefully turn the game over so that the top side is face-down on a soft surface. Use a small Phillips screwdriver to remove the screw. Lift off the battery compartment lid. Install the 2 AA batteries, making sure to match the polarity (+ and -) with the diagram inside the battery

compartment. Place the battery compartment lid's tabs in their slots and snap the compartment door back on. Replace the screw and gently tighten it.



2

Layout of Vibrating Pinball

Your Vibrating Pinball buttons are easy to use.

LEFT FLIPPER Press to activate your left flipper when playing pinball. Also press this button to select Game 1 or Game 2.

RIGHT FLIPPER Press this to activate your right flipper when playing pinball. Also, press and hold it to eject a ball, or press to select a level before starting a game.

PLUNGER Pull and release to put a ball in play.


START Press to start a game.

ON Press to turn your game on.

RESET Press to reset your game.

PAUSE Press to pause during a game, or to resume a game.

SOUND Press to turn the sound on or off.

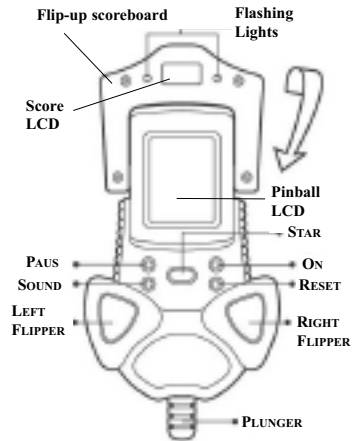

3

Playing Vibrating Pinball

Getting started

To begin playing, flip up the automatic scoreboard so that you can see the score LCD at the top of the unit. Then press **ON** to turn on the game. Next press **LEFT FLIPPER** to select either Game 1 or Game 2. The game selection will be displayed on the upper right of the pinball LCD.

Choosing levels

Press **RIGHT FLIPPER** to choose one of six levels, ranging in difficulty from Level 1, the easiest, to Level 6, the most difficult. The level selected will be displayed

on the score LCD. After you have made your selection, press **START** to begin your game.

Putting the ball in play

You can launch a ball either by pulling and then releasing the **PLUNGER**, or by pressing and holding **RIGHT FLIPPER**. Once the ball is released, use your flippers to keep the ball in play.

Playing the game

You'll be challenged by three balls per game. To score points, you need to knock the bricks and hit the bubbles with each pinball.

If no button is pushed for a few minutes, your Vibrating Pinball game will switch off to save your batteries.

Computers can sometimes “lock up” due to static discharge or other electrical disturbances. If this should happen, reset the game by pressing RESET.

You get extra points for knocking the pinball inside the spinning wheel.

Pausing during a game

If you'd like to pause during the game, simply press **PAUSE**. Press again to resume your game.

Sound on/off

Press the **SOUND** button if you'd like to switch the pinball arcade

sounds off. Press again if you'd like to turn the sound back on.

Your Excalibur Pinball will provide you hours of fun. Please review the safety, care and battery instructions on the following page. And please remember to close the flip-up scoreboard display when not in use to avoid damaging it.

SPECIAL CARE & HANDLING

- Avoid rough handling such as bumping or dropping.
- Avoid moisture and extreme temperatures. For best results, use between the temperatures of 39°F and 100°F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.

BATTERY INFORMATION

- CAUTION: Batteries should be removed and replaced by adults only.
- Turn unit off when installing batteries.
- Your Pinball game uses 2 AA batteries, not included.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.
- Install batteries so that the polarity (+ and -) matches the diagram in the battery compartment.
- Use only batteries of the same type and equivalency.

Due to continuing improvements, actual product may differ slightly from the product described herein.

LIMITED 90-DAY WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties,

including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516

Play games live at:
www.ExcaliburElectronics.com

Ship the unit carefully packed, prefer-

ably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton.

If your warranty has expired and you want an estimated fee for service,

write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND
YOUR UNIT WITHOUT
RECEIVING AN ESTIMATE FOR
SERVICING. WE CANNOT
STORE YOUR UNIT!

We make you think.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>