


ad from Www.Somanuals.com. All Manuals Search And Download.

HOW TO USE

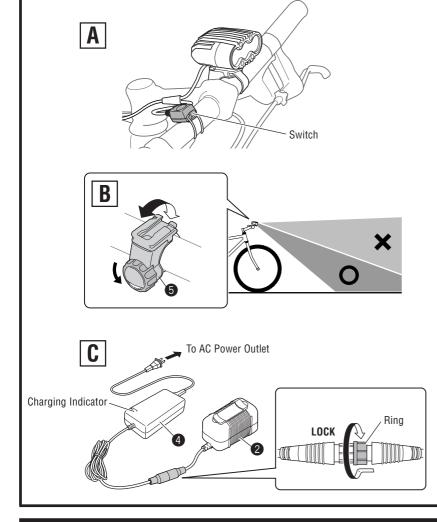


SPECIFICATIONS

Light source	Three High-Power White LEDs
Battery unit	Rechargeable lithium-ion battery/7.4V, 4600mAh
Battery charger	CHR-2300/4600mAh Li-ion (AC100V-240V 50/60Hz)
Operating time	Approx. 2.5 hours (in the case of Hi)
	Approx. 5 hours (in the case of Low)
Standard charging time	Approx. 5 hours
Temperature range	Charging: 41°F – 104°F(5°C – 40°C)
	Operating: 5°F – 113°F (-15°C – 45°C)
Becharge/discharge number of times	About 300 times (until the rated capacity drops to 70%)

* The specifications and design are subject to change without notice.

SPARE PARTS

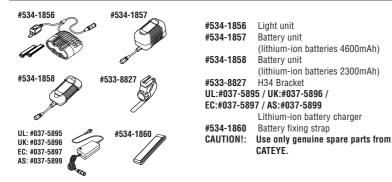

LIMITED WARRANTY

2-year Warranty: Light Unit, Battery Unit, Battery Charger (Excluding degradation of the battery unit)

CatEye products are warranted to be free of defects from materials and workmanship for a period of 2 years from original purchase. If the product fails to work due to normal use, CatEye will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer. To return the product, pack it carefully and enclose the warranty certificate (proof or purchase) with instruction for repair. Please write or type your name and address clearly on the warranty certificate. Insurance, handling and transportation charges to CatEye shall be borne by person desiring service.

For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase. This does not affect your statutory rights.
CATEYE co..trp.
Service & Research Address for USA

2-8-25,	Kuwazu, Higashi Sumiyoshi-ku, Osaka	
546-00	41 Japan	
Attn: CATEYE Customer Service Section		
Phone	: (06)6719-6863	
Fax	: (06)6719-6033	
E-mail	: support@cateye.co.jp	
URL	: http://www.cateve.co.ip	

Service & Research Address for USA CATEYE Service and Research Center 1705 14th St. 115 Boulder, CO 80302 Phone : 303.443.4595 Toll Free: 800.5CATEYE Fax : 303.473.0006 E-mail : service@cateye.com UBL : bttp://www.cateye.com

A Switching on/off

Use the switch to switch between Hi and Low beams.

NOTE: The switch becomes hot while using the light unit. This is normal.

Switch	Run time
	Approx. 2.5 hours (Hi mode)
Long pross. runn on	* The run time varies with the environment or conditions in which it is used.

B How to Adjust Beam Angle

Adjust the beam angle to avoid dazzling oncoming traffic by slightly loosening the dial of the bracket.

- **NOTE:** Do not loosen the dial too much, or the bracket strap may come off. Loosen the dial just enough to allow the bracket to move slightly. Securely tighten the dial after adjusting the strap.
 - It can also be adjusted 10 degrees to the left and right.

Remaining Battery

The color of the battery indicator built into the switch shows how much battery is left. **NOTE:** When the battery indication becomes red, charge the batteries as soon as possible.

Guigeline for the battery indicator

- Green : More than 50% left
- Yellow : 50 to 20% left

Red : Less than 20%. Charge the battery unit. * The battery indicator is only an estimation of the remaining battery run-time, and

varies with the environment or conditions of use.

C How to Charge Battery unit

Important!

- If the battery unit is wet, wipe dry with a dry cloth before charging the batteries.
- Be sure to use only the supplied battery charger. This charger can accept 100-240 volts.
- If the charging indicator flashes green, there is a short somewhere in the circuit. Unplug the charger and remove the cause.
- If the charging indicator turns green a few minutes after charging begins or if the indicator continues a fast green flashing, stop charging, unplug the charger from the outlet, and do steps 1 and 2.
 - If the same result occurs repeatedly, the batteries may be deteriorated.
- The standard charging time and run time are guideline values and depend on the operating environment.
- If the battery unit repeatedly does not meet the proper run time even though it is fully charged, it might be at the end of its operating life. Replace the old battery unit with a new one. The used battery unit should be disposed of properly according to local regulations.
- 1. Plug the battery charger to an AC outlet.
 - NOTE: Check that the charging indicator flashes red three times as the power lamp turns red.
- 2. Connect the plug of the battery charger to the plug of the battery unit.
 - NOTE: Charge the batteries with the plug locked.
 - When charging is complete, the indicator light changes from flashing red to green.
- 3. After charging is complete, make sure to unplug the charger from the AC outlet.

Charging indicator state		Standard charging time
Red light / Blinking green ligh Red light / Red light Red light / Green light	t : Charge error : Charging : Charging is completed	Approx. 5 hours

⚠ FOR SAFE OPERATION

- Never short-circuit the terminals of the battery unit or the battery charger. It
 may cause the unit to overheat, resulting in fire or damage to the component.
- The battery unit uses lithium batteries. If liquid leaks from the batteries, do not touch them with bare hands and do not bring them close to fire.
- Securely connect the plug and fasten the strap. Otherwise, they may come off while riding, causing the light to turn off, or you could topple over if the cord gets caught in the wheel.
- Never use damaged components (e.g., cables, etc.). Send any damaged components to our customer service department for repair.
- Do not stare at the light when it is on. Doing so may damage your eyesight.
 The light unit, including the switch, becomes very hot when on or immediately after being turned off. Please use with caution to avoid burns.
- Do not place it within children's reach.
- Never disassemble the light unit, battery unit, or battery charger.
- If the lamp body or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap. Never apply paint thinner, benzine or alcohol; damage will result.
- If the connecting plug is dirty, clean it with the plug locked.
- This product is water-resistant under normal daily use and can be used in the rain. However, do not intentionally submerge it in water.
- We recommend carrying a flashlight or spare battery unit with you in case the main battery dies.
- Place the swich at least 20 cm away from any wireless meter, as transmitting and receiving performance may be adversely affected.

Before Initial Use

The battery is shipped with a small charge, that is used to test the unit at the factory. It is necessary to charge the battery before initial use. (Refer to the "How to Charge" section in this manual.)

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com