

■ Contents

English

| | |
|--------------------------------|----|
| 1. PRECAUTIONS..... | 2 |
| 2. CONTROLS..... | 3 |
| 3. BUTTON TERMINOLOGY..... | 4 |
| 4. FEATURES..... | 5 |
| 5. HANDLING COMPACT DISCS..... | 6 |
| 6. OPERATION..... | 7 |
| 7. TROUBLESHOOTING..... | 11 |
| 8. ERROR DISPLAYS..... | 12 |
| 9. SPECIFICATIONS..... | 13 |

■ Table des matières

Français

| | |
|---|----|
| 1. PRÉCAUTIONS..... | 15 |
| 2. COMMANDES..... | 3 |
| 3. NOMENCLATURE DES TOUCHES..... | 16 |
| 4. CARACTÉRISTIQUES..... | 17 |
| 5. MANIPULATION DES DISQUES COMPACTS..... | 18 |
| 6. FONCTIONNEMENT..... | 19 |
| 7. DÉPISTAGE DES PANNES..... | 23 |
| 8. AFFICHAGE DES ERREURS..... | 24 |
| 9. SPÉCIFICATIONS..... | 25 |


■ Índice

Español

| | |
|--|----|
| 1. PRECAUCIONES..... | 27 |
| 2. CONTROLES..... | 3 |
| 3. NOMENCLATURA DE LOS BOTONES..... | 28 |
| 4. CARACTERÍSTICAS..... | 29 |
| 5. MANEJO DE LOS DISCOS COMPACTOS..... | 30 |
| 6. OPERACIÓN..... | 31 |
| 7. SOLUCIÓN DE PROBLEMAS..... | 35 |
| 8. INDICACIONES DE ERROR..... | 36 |
| 9. ESPECIFICACIONES..... | 37 |

DB125

 AM/FM CD PLAYER
·
RADIO AM/FM-LECTEUR CD
·
RADIO AM/FM Y REPRODUCTOR CD



Clarion Co., Ltd.

All Rights Reserved. Copyright © 2001: Clarion Co., Ltd.
Printed in Malaysia / Imprimé à Malaisie / Impreso en Malasia

PE-2504B
280-7757-01

 
1. PRECAUTIONS

- When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour and the condensation will disappear naturally to allow normal operation.
- Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

⚠ CAUTION

USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

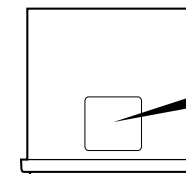

Bottom View of Source Unit

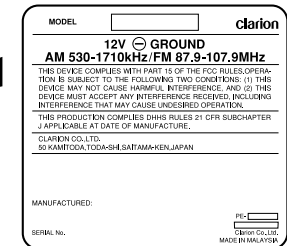 

INFORMATION FOR USERS:

CHANGES OR MODIFICATIONS TO THIS PRODUCT WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.

Be sure to unfold and read the next page.
Veuillez déployer et vous référer à la page suivante.
Cerciórese de desplegar y de leer la página siguiente.

 
2. CONTROLS / COMMANDES / CONTROLES

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.

Remarque: Veuillez déployer cette page et vous référer aux schémas quand vous lisez chaque chapitre.

Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

SOURCE UNIT / APPAREIL PILOTE / UNIDAD FUENTE

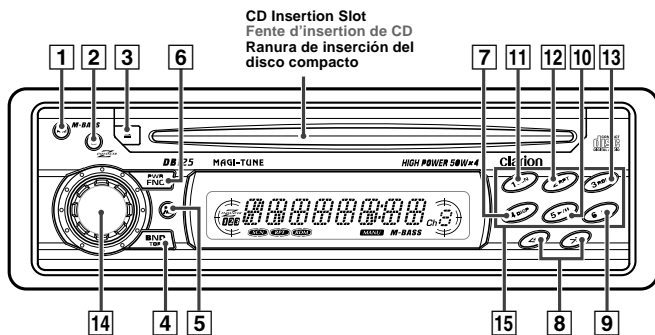

DISPLAY AFFICHEUR VISUALIZADOR



Note: The above illustration shows the front panel of the model DB125.

Remarque: L'illustration ci-dessous montre le panneau avant du modèle DB125.

Nota: La ilustración de arriba muestra el panel frontal del modelo DB125.

3. BUTTON TERMINOLOGY

Note:

• Be sure to read this chapter referring to the front diagrams of chapter 2. CONTROLS on page 3 (unfold).

- 1 A-M (Audio Mode)/M-BASS Button
- 2 Z-EHCR (Z-enhancer) Button
- 3 Eject (▲) Button
- 4 BND (Band)/TOP Button
- 5 PS (Preset Scan)/AS (Auto Store) Button
- 6 POWER/FNC (Function) Button
- 7 DISP (Display) Button
- 8 SRCH (Search) Up and Down (↗ and ↘) Buttons
- 9 SS (SCREEN Saver) Button
- 10 Play/Pause (▶/||) Button
- 11 SCN (Scan) Button
- 12 RPT (Repeat) Button
- 13 RDM (Random) Button
- 14 Rotary knob/Volume Knob
- 15 Preset Buttons (1 to 6)

English

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>