

Installation


1. Find a suitable location for the On/Off switch
Be sure that it is within easy reach of the driver and can be operated safely from the seated position.

NOTE: The On/Off switch requires a flat surface at least 3/4" in diameter for mounting, with 1" rear clearance. The switch is provided with 36" of wire - take this into account when selecting a location, or you will have to extend the switch wires.

2. Connect the RCA inputs to the audio source.
3. Connect the Black wire to chassis ground.
4. Connect the Red wire to accessory +12V.

NOTE: Connecting to accessory +12V will ensure that the FM modulator turns off when the ignition is turned off. Connecting this wire to +12V Constant may cause battery drain issues, and is not recommended.

5. Plug in the On/Off switch.

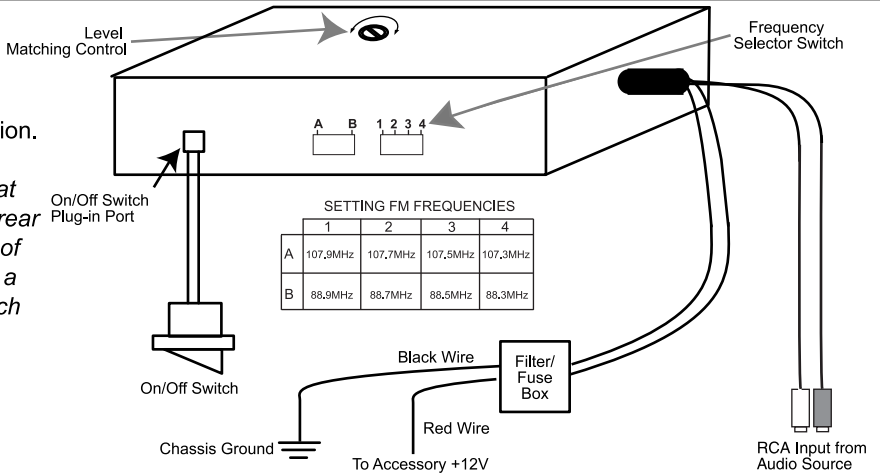


Set-up and Testing

1. Set the Frequency Selector Switch to the desired frequency. If a local radio station uses the first frequency selected, use the other frequency.
2. Switch the On / Off switch to On (the "I" position).
3. Turn on the car radio and tune to the frequency selected in Step 1.
4. Turn on the audio source connected to the FM Transmitter. This audio source should now be heard over the vehicle speakers.
5. Set the level matching control so that the volume level over the speakers is the same as when listening to radio stations. If loud passages sound distorted, lower the Level Matching Control setting.

The Clarion FM700W is a two-channel stereo wireless FM transmitter with selectable FM frequencies, variable gain, and a remote on/off switch. It allows the addition of auxiliary audio sources to any FM radio (even those lacking auxiliary inputs). It can be used with DVD players, videocassette players, MP3 players, and more.

To use the FM700W:

- 1) Turn the On/Off switch to the On position
(This is the position with the "I" icon).
- 2) Turn on the radio and select the FM band.
Tune in the selected operating frequency (your installer can advise you which frequency setting is being used in your installation).
Once you determine the correct frequency, it is a good idea to store the frequency using one of your radio's preset keys.
- 3) Turn on the auxiliary audio source (VCR, DVD, MP3 player, etc.) and begin playback. The sound from the source unit should now be audible over your speakers.
- 4) To return to standard radio use, turn the On/Off switch to the Off position (this is the position with the "O" icon).

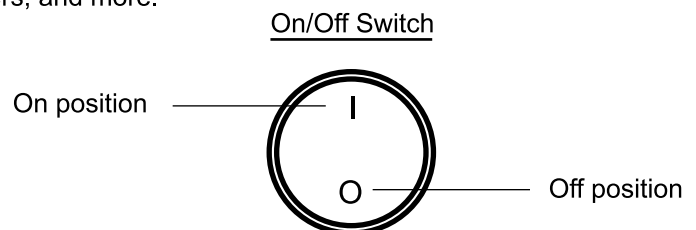

Specifications:

| | |
|--------------------------|---|
| Operating Voltage: | 14.4V DC Nom. (Operating Range 10.8 to 15.6V DC) |
| Max Current Consumption: | 120mA |
| Operating Frequencies: | 88.3,88.5,88.7,88.9 107.3,107.5,107.7 107.9 |

Fuse rating (in Fuse/Filter box): 2A AGC

Parts List:

- (1) FM Modulator Main Unit with integrated harness.
- (1) On/Off Switch with integrated harness.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>