

[ THE SCIENCE OF SECURITY ]

**CLIFFORD**<sup>®</sup>

*Security system and convenience*



[ USER GUIDE ]

CLIFFORD  
**11CX**  
980074 series



# [ Limited Consumer Warranty ]

For a period of one calendar year from the date of purchase of this auto-security device, Directed Electronics, Inc. promises to the ORIGINAL PURCHASER to repair or replace (with a comparable reconditioned model), free of cost, any electronic control module which proves to be defective in workmanship or material under normal use, SO LONG AS THE SYSTEM WAS SOLD, INSTALLED, AND SERVICED BY A PROFESSIONAL AUTO INSTALLER, AND REMAINS IN THE CAR IN WHICH THE SYSTEM WAS ORIGINALLY INSTALLED. If warranty service is necessary you must have a clear copy of your sales receipt containing all of the information shown on the following page.

After the first calendar year, from the date of purchase of this auto-security device, Directed Electronics, Inc., promises to the ORIGINAL PURCHASER to repair or replace (with a comparable reconditioned model) any electronic control module which proves to be defective in workmanship or material under normal use **FOR A CHARGE OF \$45.00**, SO LONG AS THE SYSTEM WAS SOLD, INSTALLED, AND SERVICED BY A PROFESSIONAL AUTO INSTALLER, AND REMAINS IN THE CAR IN WHICH THE SYSTEM WAS ORIGINALLY INSTALLED. If warranty service is necessary you must have a clear copy of your sales receipt containing all of the information shown on the following page.

This warranty contains the entire agreement relating to warranty and supersedes all previous and contemporaneous representations or understandings, whether written or oral. IN ANY EVENT, DEI IS NOT LIABLE FOR THE THEFT OF THE VEHICLE AND/OR ITS CONTENTS.

This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper service or other causes not arising out of defects in materials or construction. This warranty is nontransferable and does not apply to any unit that has been modified or used in a manner contrary to its intended purpose and does not cover batteries. The unit in question must be returned to the manufacturer, postage prepaid. This warranty does not cover labor costs for the removal, diagnosis, troubleshooting or reinstallation of the unit. For service on an out-of-warranty product a flat rate fee by model is charged. Contact your authorized dealer to obtain the service charge for your unit.

These systems are a deterrent against possible theft. Directed Electronics, Inc. is not offering a guarantee or insuring against the theft of the automobile or its contents and disclaims any liability for the theft of the vehicle and/or its contents. Directed Electronics does not authorize any person to create for it any other obligation or liability in connection with this security system.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH. THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OF PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OR ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, TOWING, REPAIR, REPLACEMENT, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE. Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Make sure you have all of the following information from your dealer:

A clear copy of the sales receipt, showing the following:

- Date of purchase
- Your full name and address
- Authorized dealer's company name and address
- Type of alarm installed
- Year, make, model and color of the automobile
- Automobile license number
- Vehicle identification number
- All security options installed on automobile
- Installation receipts



# Table of Contents

<b>Limited Consumer Warranty</b> .....	i
<b>What Is Included</b> .....	3
<b>Important Information</b> .....	3
System Maintenance .....	3
Your Warranty .....	4
FCC/ID Notice .....	4
<b>Transmitter functions</b> .....	5
Standard configuration .....	5
<b>Using Your System</b> .....	6
Arming .....	6
Disarming .....	7
Disarming Without a Transmitter .....	8
Panic Mode .....	8
Remote-Controlled Silent Arm/Disarm .....	9
Valet Mode .....	9
Remote-Controlled Valet .....	10
<b>Diagnostics</b> .....	10
Arming Diagnostics .....	10
Disarming Diagnostics .....	11
Table of Zones .....	11
<b>Stealth Coding™ Technology</b> .....	12
<b>High Frequency</b> .....	13
<b>Programming Options</b> .....	13
<b>Installation Options</b> .....	14
<b>Glossary Of Terms</b> .....	15
<b>Quick Reference Guide (Removable)</b> .....	17



# What is Included

- A control module
- Two 3-button remote transmitters
- A high-powered siren
- A fault-proof starter interrupt on-board the control module
- An LED Blue system status indicator
- A push-button Valet® switch

# Important Information

Congratulations on the purchase of your state-of-the-art vehicle security system. This system has been designed to provide years of trouble-free operation. By carefully reading this guide prior to using your system, you will maximize the use of this product and its features.

## System Maintenance

---

Your vehicle security system has no specific maintenance requirements. The remote transmitter is powered by a lightweight 3-volt lithium battery that will last approximately one year under normal use. When the battery begins to weaken, the LED on the remote transmitter will dim and you will notice reduced operating range when using the remote transmitter. To access the battery for



replacement, remove the rear cover of the remote with a small, flat-blade screwdriver.

### Your Warranty

---

Your warranty card must be returned and the barcode serial number must not be removed. If the warranty card is not returned, no warranty will be honored on your unit. It is also necessary to keep your proof of purchase, which reflects that the product was installed by an authorized dealer. Make sure you receive the warranty card from your dealer.

### FCC/ID Notice

---

This device complies with Part 15 of FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.


# [ Transmitter Functions ]

This system is programmable, making it possible to assign any transmitter button to any specific receiver function. The remote initially comes programmed with Standard Configuration, but may also be customized by an authorized dealer. The buttons in all of the instructions in this manual correspond to a Standard Configuration remote.



## Standard Configuration

---

### Button

The arm/disarm/panic functions are usually controlled by .

### Button


An optional accessory function (such as trunk release), remote-controlled silent arm/disarm, and remote-controlled Valet® are usually controlled by . (Silent arm/disarm and remote-controlled Valet work by pressing  for less than one second.

# Using Your System

The transmitter buttons indicated in this manual correspond to a standard configuration transmitter, unless otherwise specified.

## Arming

---

You can arm the security system by pressing  for one second. When the system arms, you will hear a short siren sound (chirp) and the parking lights (optional) will flash once. If the power door locks are controlled by the system, the doors will also lock. Once armed, the LED system status indicator will flash once per second to indicate that the system is actively protecting your vehicle. If you hear a second chirp after arming and notice that the LED system status indicator is flashing in a grouped pattern, this signals Bypass Notification. Bypass Notification is described in detail in the Diagnostics section of this manual.

Your security system can also be programmed for Passive Arming. With Passive Arming, the system automatically arms itself 30 seconds after the ignition has been turned off and the last door has been closed. During the 30-second Passive Arming countdown, the LED system status indicator will flash twice as fast as it does when the system is armed. If the system is programmed for Passive Arming, care must be taken to prevent the keys from being locked in the vehicle.


**NOTE:** If any protected entry point, such as a door, ignition is open, Passive Arming will not engage. Additionally, each time a sensor is triggered during the Passive Arming countdown, the countdown starts over.

Arming your security system protects your vehicle to the following degrees:

- If a door is opened, the siren immediately starts chirping and the parking lights (optional) start flashing to provide an instant response. Three seconds later, the siren output changes to a continuous blast. This two-stage **progressive response** allows you time to disarm the security system with your remote transmitter, in case the door is inadvertently opened while the system is armed.
- Turning on the ignition key triggers the same two-stage progressive response as opening a door.
- The fault-proof starter interrupt prevents the vehicle's starter from cranking.


## Disarming

---


Press  to disarm the security system when it is already armed. If the power locks are controlled by the system, the doors will also unlock. Disarming is confirmed when the parking lights (optional) flash twice and the siren emits two chirps. The LED system status indicator will also stop flashing. The siren chirping four times when disarming indicates Tamper Alert, which is described in the Diagnostics section of this guide.

## Disarming Without a Transmitter

If your transmitter is lost or damaged, you can manually disarm your vehicle security system. To disarm the system without a transmitter, you must have the vehicle's ignition key and know where the Valet switch is located. Be sure to check with your installer at the time of installation for the location of the Valet switch.

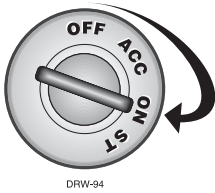



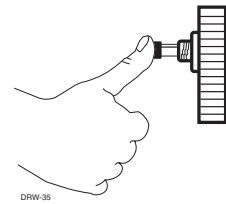

To disarm the security system, turn the ignition key on and press the Valet switch within 15 seconds. The system should




now disarm. If the system does not disarm, you may have waited too long to press the Valet switch; turn the ignition off and repeat the process.

## Location of Valet Switch

## Panic Mode

If you are threatened in or near your vehicle, you can press   for 1.5 seconds to trigger Panic Mode on your security system and attract attention. The siren will sound and the parking lights (optional) will flash for 30 seconds. To stop the Panic Mode at any time, press   again.

## Remote-Controlled Silent Arm/Disarm


Use remote-controlled silent arm/disarm to temporarily turn off the arm or disarm chirps by briefly pressing  before either arming or disarming. The confirmation chirp(s) will then be eliminated for that one operation only. To permanently turn off the arm and disarm chirps, contact your installation dealer.

**NOTE:** This ensures that the siren does not chirp in an environment where you do not want chirps to be emitted. The system is still capable of being triggered by heavier impacts; only the warn-away response generated by light impacts is bypassed.


## Valet Mode

Valet Mode prevents your security system from arming and triggering either automatically or with the remote transmitter. In Valet Mode, the system will not arm, but all convenience functions (door locks, trunk release, etc.) remain operational. This feature is useful when washing or servicing your vehicle. You can access Valet Mode either manually or from the remote transmitter.

To enter or exit Valet Mode with the Valet switch:

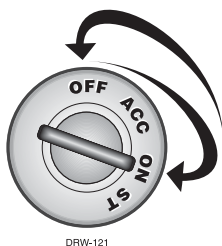

1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the Valet switch within 10 seconds.

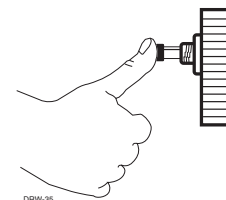




The LED system status indicator will light solidly if you are entering Valet Mode and will turn off if you are exiting Valet Mode.

## Remote-Controlled Valet

---

You can also enter or exit Valet Mode by using the remote transmitter:

1. Open any vehicle door.
2. Press .
3. Press .
4. Press  again.

The LED system status indicator will light solidly if you have entered Valet Mode and will turn off if you have exited Valet Mode.

# [ Diagnostics ]

The microprocessor at the heart of your system has the ability to constantly monitor all of the switches and sensors connected to it. It can detect any faulty switches or sensors and prevent them from disabling the entire system. It can also record and report any triggers that occur when you are away from your vehicle.

## Arming Diagnostics

---

If the system is armed at the same time that an input is active (door opening, ignition, etc.), you will hear one chirp to indicate arming and a second chirp a few seconds later to indicate Bypass Notification. A Bypass Notification chirp means that the system

ignores the input that was active when the system was armed, until that input ceases. Three seconds after that input ceases, the system will resume normal monitoring. For example, if your vehicle has an interior light exit delay and you arm the system before the light turns off, you may hear a Bypass Notification chirp. Three seconds after the light turns off, however, normal monitoring resumes.

**NOTE:** Bypass Notification does not occur when the system is in remote-controlled silent arm/disarm mode or if the chirps have been programmed not to sound.

## Disarming Diagnostics

---

Your system has a Tamper Alert feature that notifies you of system triggers that occur while you are away from your vehicle. If you hear four chirps when you disarm, this indicates that the system was triggered in your absence. In both cases, the pattern of the flashing LED system status indicator indicates which zone was triggered (see Table of Zones). The LED does not, however, report when warn-away responses have activated; it only reports triggered sequences. The system retains this information in its memory and will continue to chirp four each time the system is disarmed, until the next time the ignition is turned on.

## Table of Zones

---



A zone is represented by the number of LED flashes used by the system to identify a particular type of input. Standard input assignments are listed in the following table, along with spaces to write in any optional sensors or switches that you have had installed.



<b>ZONE</b> (Number of LED Flashes)	<b>DESCRIPTION</b>	<b>DEALER-INSTALLED OPTIONS</b>
<b>1</b>	CX22 only	
<b>2</b>	CX22 only	
<b>3</b>	Door switch trigger	
<b>5</b>	Ignition trigger	

**NOTE:** The LED does not report when the warn-away response has been activated; it only reports triggered sequences.

## [ **Stealth Coding™ Technology** ]

The receiver and transmitter use mathematical formulas called algorithms to change their codes each time the transmitter is used. This Stealth Coding™ Technology has been developed to increase the security of the unit. By following this set code sequence, the receiver and transmitter stay synchronized, even if the transmitter is used out of range of the vehicle. If, however, the transmitter is pressed many times out of range, or the battery is removed, the transmitter may get temporarily out of sync and fail to operate the system. To resynchronize the transmitter, simply press   several times within range of the vehicle. The system will automatically resynchronize and the transmitter will respond normally.

# [ High Frequency ]

Your system transmits and receives at 434 MHz. This provides a cleaner spectrum with less interference and a more stable signal. Enjoy a phenomenal increase in range, even in areas with high radio interference.

# [ Programming Options ]

Programming options control your system's normal, operational set-up. Most options do not require additional parts, but some may require installation labor.

This system's programming options are listed below, with the factory default settings in **bold**:

- **Active arming** (only with the transmitter) or passive arming (automatic arming 30 seconds after the last vehicle door is closed).
- Arming and disarming confirmation siren chirps can be programmed **on** or off.

# [ Installation Options ]

Installation options may require additional parts or labor. Please consult your dealer.

**Interior Light Illumination:** The interior domelight can be configured to illuminate for 30 seconds after the alarm is disarmed. If the system is rearmed during that 30-second period, the interior light illumination will terminate until the alarm is disarmed again. This option may require a relay to be added to some vehicles.

# [ Glossary of Terms ]

**Control Module:** The "brain" of your security system. Usually hidden underneath the dash area of the vehicle. It houses the microprocessor that monitors your vehicle and controls all of the security system's functions.

**Fault-Proof Starter Interrupt:** Located on-board the control module, this is an automatic switch controlled by the security system that prevents the starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet Mode, or if the starter interrupt fails.

**Input:** Any physical connection to the security system. An input can be provided through a sensor, pinswitch or by existing systems in the vehicle, such as ignition or courtesy lights.

**LED:** A red light mounted inside the vehicle, at a location determined by the installer. The LED indicates the status of your system and also reports triggers and faults in the system or sensors.

**Siren:** A noise generating device, usually installed in the engine compartment of the vehicle. The siren generates the chirps and tones heard when the system is triggered.

**Transmitter:** A hand-held, remote control that operates the various functions of the security system.

**Trigger or Triggered Sequence:** The "setting off" or "tripping" of the alarm. A triggered sequence consists of the siren sounding and the parking lights flashing for 30 seconds.

**Valet Switch:** A small, push-button switch mounted inside the vehicle, at a location determined by the installer. This switch is used to override the alarm when a transmitter is lost or damaged, or can be used to put the system into Valet Mode.

**Zone:** A zone is a separate input that the alarm recognizes as unique. Each input to the system is connected to a particular zone. Two or more inputs may share the same zone.




# QUICK REFERENCE GUIDE


Cut along dotted line and fold for a quick and easy reference to keep in your purse or wallet.



## To arm using your remote:

- Press  on your transmitter for one second. When the system arms, you will hear a short siren sound, or chirp, and see the parking lights (optional) flash once. If the vehicle's power door locks are controlled by the system, the doors will lock.


## Disarming:

- Press  again. You will hear two chirps, and the parking lights (optional) will flash twice. If the power door locks are controlled by the system, the doors will unlock.



## Disarming without a transmitter:

- Turn on the ignition. Press the Valet switch within 15 seconds. The system should now disarm. If it does not disarm, you may have waited too long to press the Valet switch; turn the ignition off and on and try again.

## Remote-controlled silent arm/disarm:

- Press  briefly before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only.




## Panic Mode:

- Press  for 1.5 seconds, and you will enter Panic Mode. The siren will sound and the parking lights (optional) will flash for 30 seconds. To stop Panic Mode at any time, press  on the transmitter again.

## To enter or exit Valet Mode with the Valet switch:

- Turn the ignition to the ON position, then turn to the OFF position. Press and release the Valet switch within 10 seconds.

## Remote-controlled Valet:

- You can also enter or exit Valet Mode by using the remote transmitter. First, open any vehicle door. Then press . Press . Press  again. The LED system status indicator will light solidly if you have entered Valet Mode and will turn off if you have exited Valet Mode.

## The company behind this system is Directed Electronics, Inc.

Since its inception, DEI® has had one purpose, to provide consumers with the finest vehicle security and car stereo products and accessories available. The recipient of nearly 100 patents and Innovations Awards in the field of advanced electronic technology, DEI is ISO 9001 registered.

Quality Directed Electronics products are sold and serviced throughout North America and around the world.

Call **(800) 361-7271** for more information about our products and services.



DEI is an ISO 9001 registered company.

DEI is committed to delivering world class quality products and services that excite and delight our customers.

*driven to excel*  
***Directed***<sup>®</sup>  
ELECTRONICS, INC.

Delson, Qc, Canada

[www.directed.ca](http://www.directed.ca)

© 2004 Directed Electronics, Inc. - All rights reserved

CX11 G980074 09/04

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>