

86 in 1 Wireless



USER'S GUIDE

Package Contents:

- 1 Main Controller
- 1 Receiver
- 1 Receiver Pack
- User's manual

86 in 1 Instructions:

1. The main controller requires 3 "AA" batteries. Remove the battery lid using a flat-head screwdriver and place the batteries inside. Replace the battery lid.
2. The receiver pack requires 4 "AA" batteries. Remove the battery lid and place the batteries inside. Replace the battery lid.
3. Connect the receiver to the receiver pack.
4. Plug the Audio cable (white) into your video displays audio input and plug the video cable (yellow) into your video displays video input.
5. Power on the 86 in 1 controller by switching the power switch to the "on" position.
6. Power on the receiver by switching the power switch to the "on" position.
7. Confirm your video display is set to the proper video input (for example, if you plug the 86 in 1 into your video displays input 1, switch your video display to the corresponding input).
8. Choose game and press the "start" button to begin game play. Pressing "start" during game play will pause your game, pressing "start" again will un-pause your game.

Infrared Technology:

1. The 86 in 1 uses Infrared technology. To avoid latency, always make sure the main gaming unit is directly in front of where you are playing.

Sleep Mode:

The 86 in 1 controller will go into sleep mode after 5 minutes of non-use. When the controller is in sleep mode the TV screen will change colors and eventually become solid black. To wake the controller, simply turn the 86 in 1 controllers power switch off and then on again and your ready to play.

note: when you power on the 86 in 1 controller the LED will not turn on, this is normal. The LED only illuminates when buttons are used on the controller.

Trouble Shooting:

Problem: 86 in 1 will not power on?

Solution: Confirm batteries in the main gaming unit are inserted correctly.

Solution: Batteries may be drained, so try replacing the batteries with new ones.

Problem: 86 in 1 is not accurate and/or there is latency when playing?

Solution: Confirm batteries in controller/receiver pack are inserted correctly.

Solution: Batteries may be drained, so try replacing the batteries with new ones.

note: to save battery life always switch the power on the controller and receiver to the off position when not in use.

CUSTOMER SUPPORT 1-877-999-3732

dreamGEAR®
P.O. Box 478
Torrance, CA 90508
www.dreamgear.net

86 in 1 Wireless



dreamGEAR®
P.O. Box 478
Torrance, CA 90508
www.dreamgear.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>