 


1L Mini Jug Kettle

Instruction Manual & Guarantee

Dualit®
Since 1945

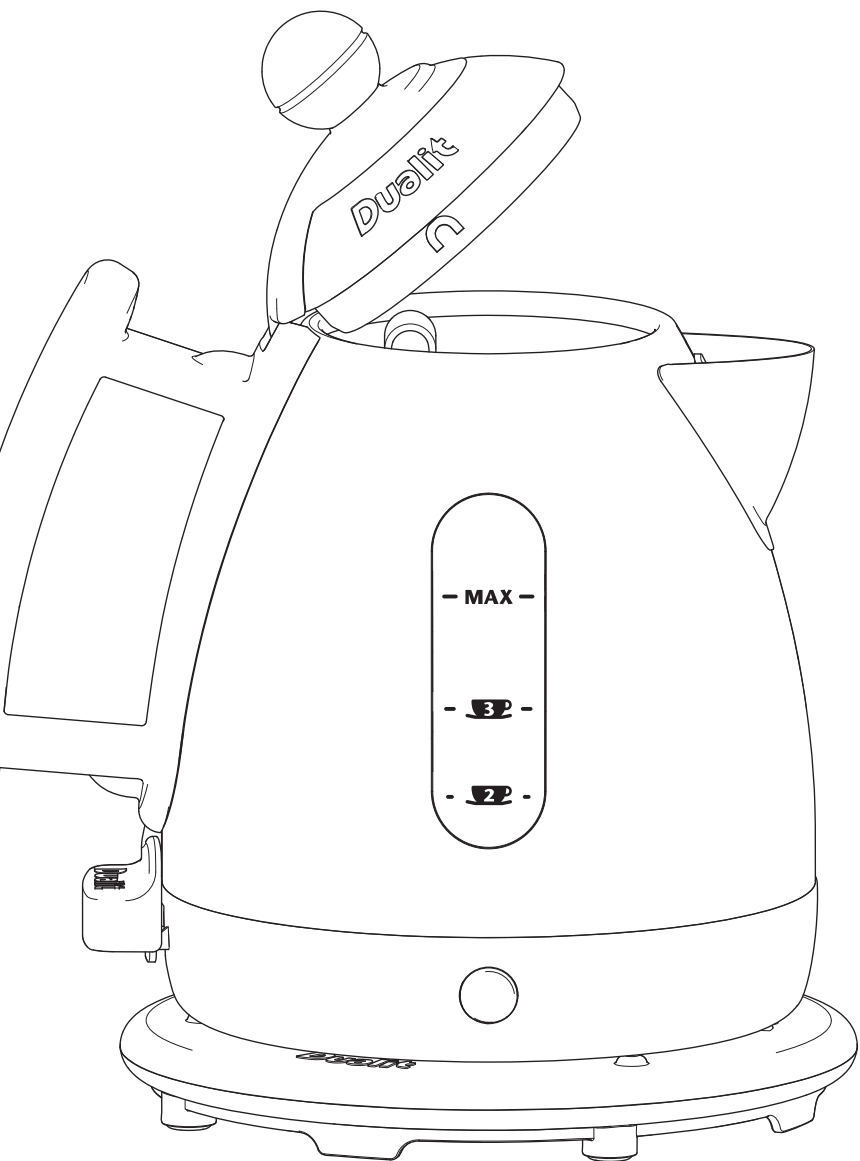

CONTENTS

Safety precautions	4
Important - Before using	5
Knowing your kettle	6
Positioning	8
Opening the lid	8
Filling	9
Switching on	9
Pouring	10
Boil-dry device	10
Care & cleaning	11
Water filter	11
Descaling	12
Minimising scale build up	12
After sales service	13
Guarantee	14

SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

- To be protected against electrical hazards, do not immerse the mains lead, plug, power base or kettle in water or any other liquid
- Do not use in bathroom or outdoors
- Use handles or knobs – do not touch hot surfaces
- When boiling, hot steam will be emitted from the kettle. Scalding may occur if you are within 400mm of the spout.
- Scalding may occur if the lid is opened during the boiling cycle and the body of the kettle will get hot.
- Take care when pouring – pour slowly and do not over-tilt the kettle
- Water will remain hot for a considerable time after boiling and can present a scald hazard. Keep the kettle, power base and the mains lead away from the edge of worktops and out of the reach of children
- Do not leave appliance unattended when in use - **this is an attended appliance**
- Do not operate the kettle on an inclined plane
- Do not move the kettle while it is switched on
- Do not remove or open the lid while the water is boiling
- Remove the kettle from its power base before filling or pouring
- Allow the kettle to cool down completely before cleaning and storing
- **CAUTION: to prevent damage to the appliance, do not use alkaline cleaning agents. When cleaning, use a soft cloth and a mild detergent**
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Unplug the power base from the wall socket when not in use, or before moving and cleaning. See: Page 11 Care & Cleaning section

- Do not use the kettle for any purpose other than heating water
- **Do not operate the kettle unless the water filter is correctly in position**
- Do not operate the kettle unless it contains at least 250ml of water and the floor of the kettle is covered
- This kettle is for household use only
- To disconnect, turn any control to off, then remove plug from wall outlet
- Use the kettle only with the power base supplied and vice versa
- The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons
- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord
- Longer extension cords may be used if care is exercised in their use
- If a long extension cord is used,
 1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance,
 2. The appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged in any manner. If the mains lead is damaged, it must be replaced by a special cord set available from Dualit's Customer Helpline on +44 (0) 1293 652 500

SAVE THESE INSTRUCTIONS IMPORTANT - BEFORE USING

Remove all packaging from the kettle and its power base. Before using the kettle for the first time, or if it has been out of use for a long time, fill to the 'max' mark and boil, then discard the boiled water and rinse the kettle out with fresh cold water.

Connecting to the mains supply

- Check that the voltage marked on the appliance corresponds with the supply voltage
- **NOTE: any plug cut from the power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous**
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original. Replacement fuses are available and should be ASTA approved to BS 1362

- **NOTE:** when you lift the kettle from the base, you will see drops of moisture on the surface of the power base. This is the steam used to switch the kettle off automatically, which then condenses and escapes through vents in the underside of the kettle. This is perfectly normal, and should not be cause for alarm or returning the kettle

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



KNOW YOUR KETTLE

Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied remove any tags from the kettle and recycle the packaging appropriately.

SPOUT

Easy-pour non drip spout

WATER FILTER

Reduces limescale particles going into the cup

VIEWING WINDOW

Easy to read cup level indicators

POWER NEON

Illuminates when heating

STEAM TUBE

Max mark indicator

HINGED LID

Ball knob and finger guard

 
HANDLE

Easy grip handle with knuckle guard

ON/OFF SWITCH

POWER BASE


Cord tidy

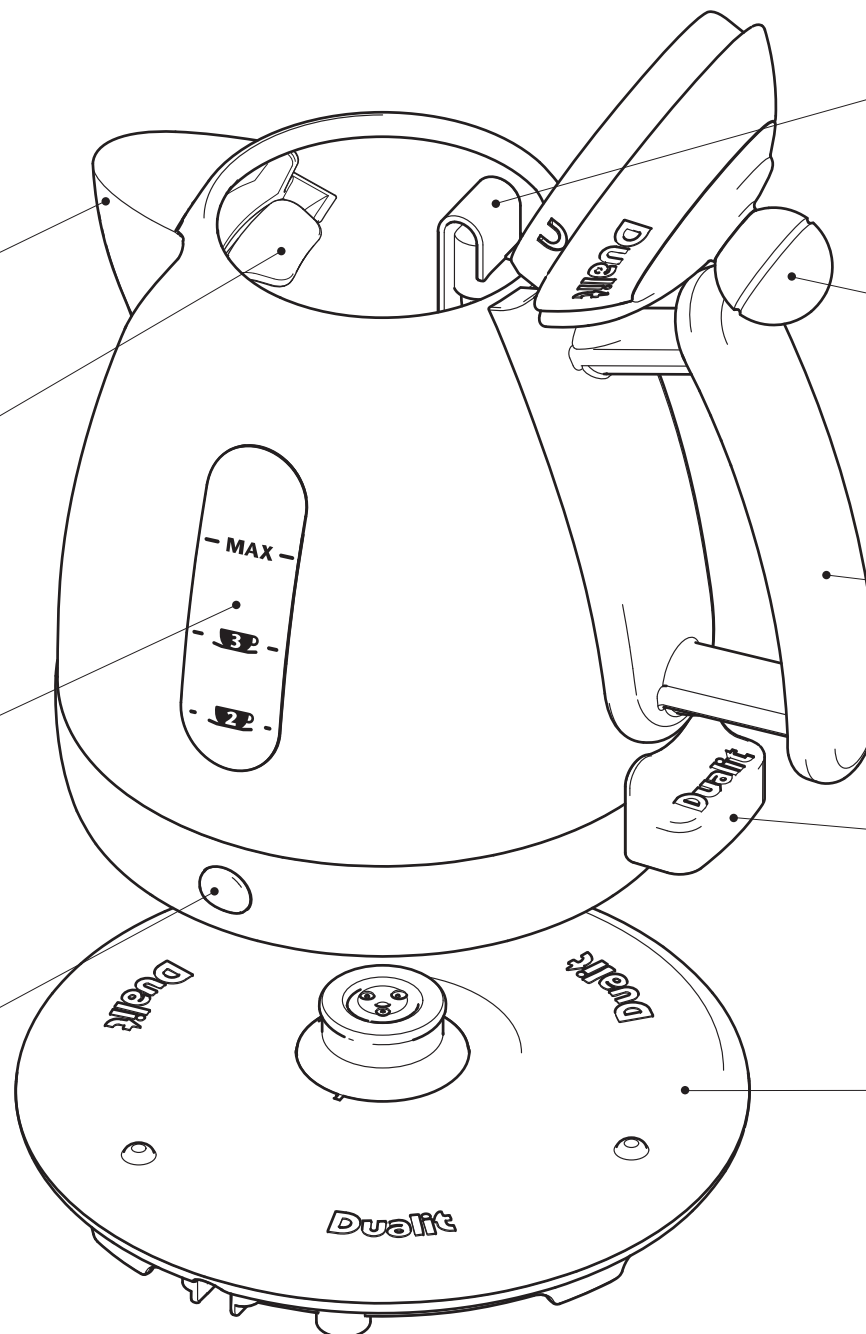

POSITIONING

Place the kettle as close to the wall socket as possible, use the cable tidy under the power base to shorten the mains lead.

 - Position the power base as close to a wall socket as possible. Locate the mains cable so that it does not overhang the work surface, and cannot be caught accidentally
- Shorten the mains lead by winding it around the cord storage area under the power base, and bring it out of the cord exit in the base.

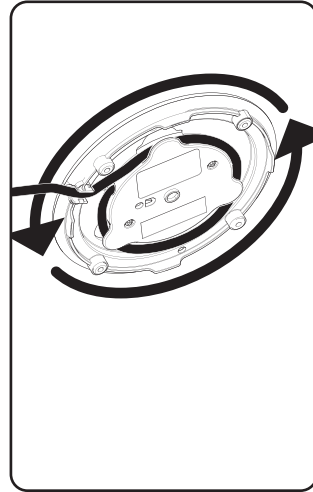


OPENING THE LID

The lid is hinged for easy opening and closing.

- Remove the kettle from the power base. If the switch has been pushed down inadvertently, it will spring up into the 'off' position
- Hold the handle of the kettle firmly with one hand, hold the knob on the lid with the other, pull the knob up and towards the handle to open.

 
WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.

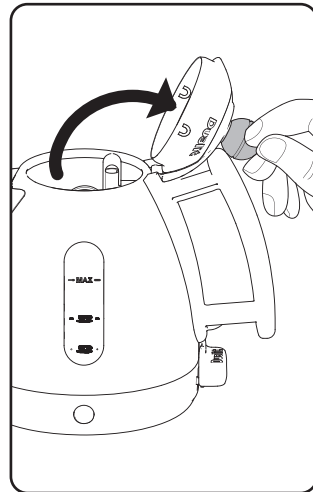

FILLING

Fill the kettle through the lid opening, not through the spout. Only boil what you require.

 
- Observe the water level when filling. Use the indicators on the window as a guide. Two cups is 500ml which is approximately two large cups or two mugs
- Use at least one cup of water. The water level must stay below the 'max' mark
- **Save energy, time and money boil only what you require**
- Do not overfill the kettle – there is a risk that boiling water may be ejected from the spout or lid
- Close the lid and check it is firmly in place, otherwise the kettle may not switch off when boiling.

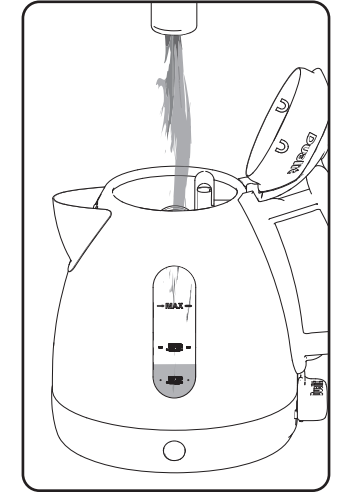

SWITCHING ON

Easy to use one button operation.

 - Check that the switch is in the 'off' position (lift the kettle from the power base and set it down again, taking care not to spill any water). The switch will only operate when the kettle is correctly seated on the power base
- Plug the power base into the wall socket. If necessary, switch on the wall socket
- Press the switch down. The neon light will go on and the kettle will start to heat up
- When the water has boiled, the kettle will automatically switch off, the switch will return to the 'off' position and the neon light will go out.

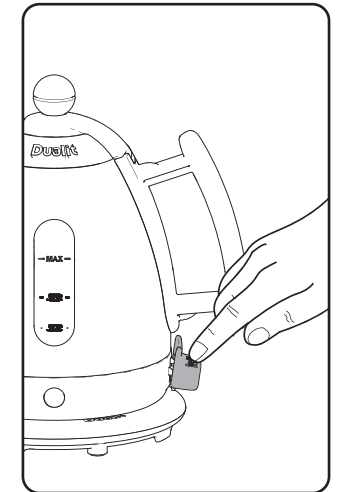


POURING

The kettle features an oversized non-drip smooth flow spout.

- Remove the kettle from the power base before pouring
- When filling or carrying the kettle, do not tilt it backwards, as this may allow water to pass through the steam tube onto the control area. Should this happen, the kettle must be allowed to dry before re-using
- To avoid the risk of splashing, **once the kettle has boiled wait 10 seconds then pour slowly.** Do not over-tilt the kettle.

 
WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.

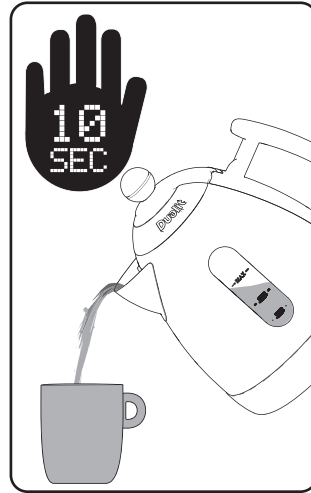

BOIL-DRY

If the kettle is accidentally switched on with no water inside, the boil-dry device will switch off the heating element to prevent damage to the kettle.

 
- Do not switch the kettle on unless it contains at least one cup of water. Misuse of this kind will shorten the life of the kettle
- If the kettle is accidentally switched on when it does not contain sufficient water, a boil-dry device will automatically switch it off
- Wait until the kettle has cooled down before refilling. The lid may be hot and the water may spit as it touches the kettle base.

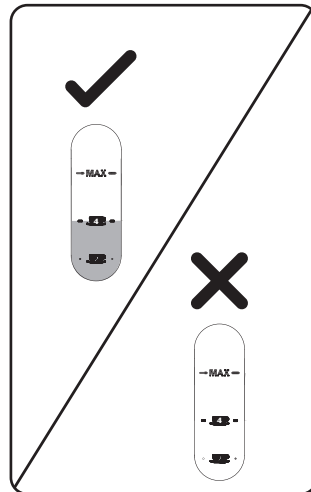

CARE & CLEANING

Regular cleaning & care will keep your kettle looking newer for longer and help prolong the life of the kettle.

 
- Switch the kettle off, lift it from the power base, unplug the power base from the wall socket and **LET THE KETTLE COOL DOWN COMPLETELY BEFORE CLEANING.** Wipe the outside and inside surfaces of the kettle with a damp cloth
- If necessary, you may use a mild household detergent. To clean the filter, see 'water filter' section below
- If you use detergent inside the kettle, rinse thoroughly afterwards to remove all traces
- Ensure that all connectors and sockets are kept dry
- Do not immerse the kettle or power base in water or any other liquid
- Do not use harsh or abrasive cleaners or solvents.

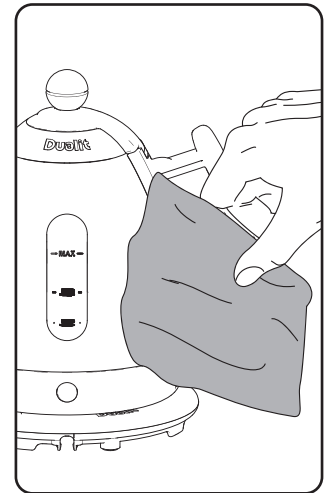

WATER FILTER

DO NOT OPERATE THE KETTLE UNLESS THE WATER FILTER IS CORRECTLY IN POSITION.

 
- Make sure hands are clean and free from hand cream, soap or similar, which might leave a slight taint to the water
- Remove the kettle from the power base and ensure kettle is cold
- Open the lid. Hold the top of the filter, pull up and out of the kettle. Rinse under a tap while carefully brushing it with a soft brush. Rinse the kettle out with fresh water
- To replace, align the filter with the grooves in the filter holder, insert and push back into place.

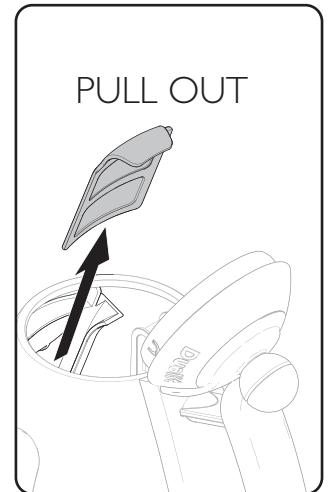

DESCALING

Regular descaling is essential to keep your kettle in good working order.

 - Use descaling products suitable for kitchen appliances, these are readily available online or from most supermarkets or department stores. Use as per instructions on the packet.
- Follow these few simple steps to minimise scale build up in your kettle: Empty the kettle after each use; do not allow water to stand in the kettle overnight. Use filtered water instead of tap water. Descale the kettle regularly, at least once a month. If you live in a hard water area you may need to descale more often. When descaling has finished, empty the kettle and rinse it out a minimum of 3 times with fresh water, then refill with fresh water, boil, then discard boiled water. Failure to do so can cause injury. **DO NOT BOIL KETTLE WITH DESCALING SOLUTION IN IT.**

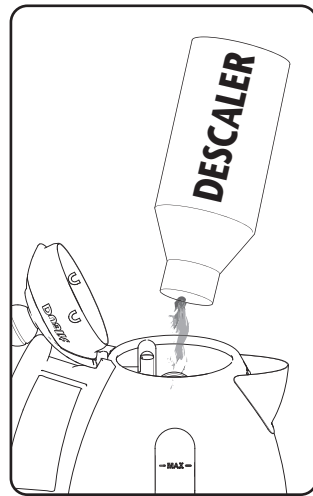

MINIMISING SCALE BUILD UP

Follow these few simple steps to minimise scale build up in your kettle.

- Empty the kettle after each use; do not allow water to stand in the kettle overnight
- Use filtered water instead of tap water
- Descale the kettle regularly, at least once a month, using a proprietary brand of descaler. In areas of very hard water, descaling may be necessary more often
- When descaling has finished, empty the kettle and rinse it out numerous times with fresh water, then refill with fresh water, boil, then discard boiled water.



AFTER SALES SERVICE

Check the following if your kettle is not working before contacting place of purchase or Dualit Ltd.

If the kettle is not working correctly, check that:

- You have followed the instructions correctly
- The plug fuse has not blown
- The mains supply/fuse/circuit breaker has not blown/tripped
- If the powercord is damaged it must be replaced by a special cord set available from Dualit. This part should only be refitted by a competent electrician.



GUARANTEE

This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant Guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.

This Guarantee covers both parts and labour. Carriage is not included.

Your Guarantee period is as follows:

- 1 year

This Guarantee provides benefits which are additional to, and do not affect, your statutory rights. This Guarantee does not cover the cost of returning the product to the dealer from whom it was purchased or to ourselves. This Guarantee applies only to products sold and located in mainland Great Britain. It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to:

- Failure to use or maintain product in accordance with Dualit's instructions.
- The product being connected to an unsuitable electricity supply.
- Accidental damage to or abuse or misuse of the product.
- The product has not been modified except by Dualit or approved agent.
- Dismantling of or interference with the product.
- Theft or attempted theft of the product.

Before returning any product under this Guarantee, please check that:

- You have followed the product instructions correctly.

- Your mains electricity supply is functional.
- The defect is not due to a blown fuse.

If you wish to claim under this Guarantee you should:

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct.
- Ensure that the product is clean and packed carefully (preferably in its original carton).
- Enclose details of your name, address and telephone number and when and where the product was purchased, together with proof of purchase (e.g. a till receipt).
- Give exact details of the nature of the defect.

This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee.

For further advice contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday).

Alternatively, email Dualit at info@dualit.com or visit www.dualit.com.

Dualit®



Dualit Limited County Oak Way Crawley West Sussex RH11 7ST
Telephone: +44 (0) 1293 652 500 Facsimile: +44 (0) 1293 652 555
Email: info@dualit.com Web: www.dualit.com

GB-G

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>