


## TV, DVD, CD & Spa Remote

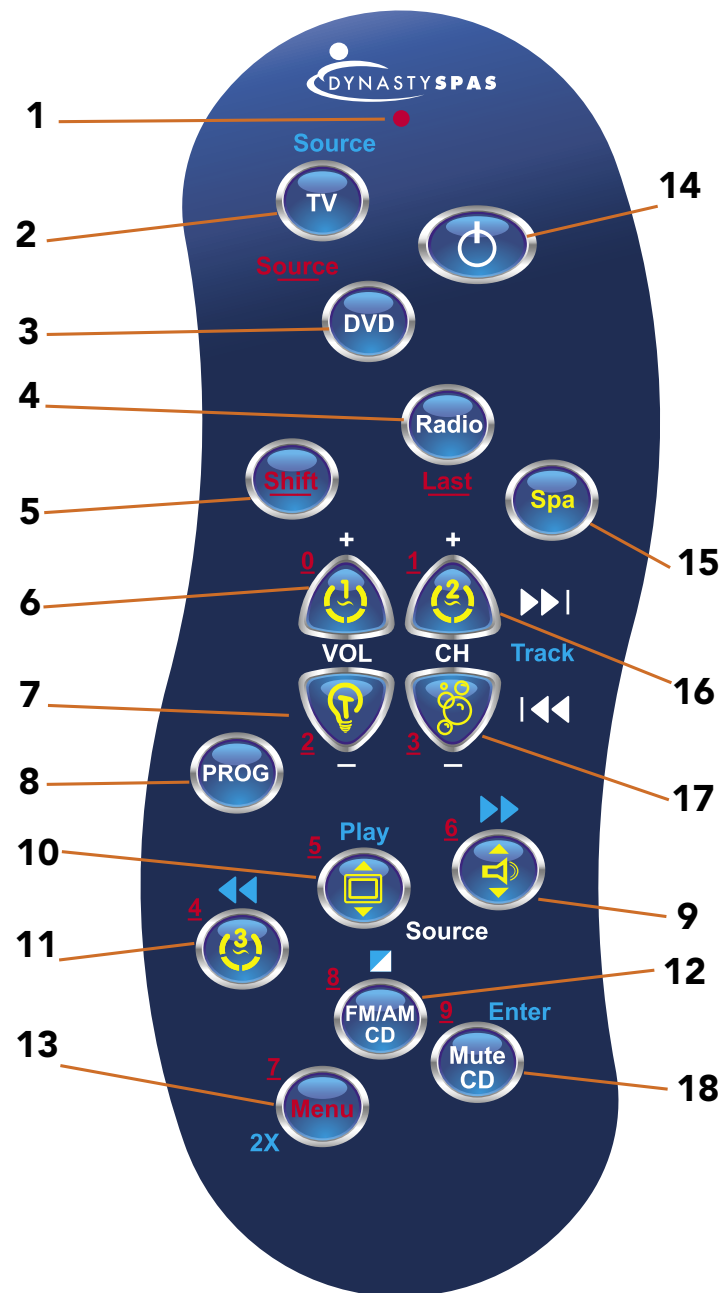

Choose the source you would like to operate by pressing one of the four buttons marked TV, DVD, CD or SPA

Codes  
 TV - 0180  
 DVD - 0037  
 CD - 0101



	TV	DVD	Radio	SPA
1	LED Indicator Light insures remote is working properly			
2	Press for TV Control Shift + TV selects inputs*	Source selection AM/FM-DVD/AUX-CD	Source selection AM/FM-DVD/AUX-CD	
3				
4				
5	Controls Underlined Functions			
6	Volume UP	Volume UP	Volume UP	Pump 1 Lo-Hi-Off
7	Volume Down	Volume Down	Volume Down	LED Lights On/Off
8	Remote Setup / Programming Function			
9		Next Chaptor	Next Track	Speaker Lift UP/ Down
10		Play / Pause		TV Lift UP/ Down
11		Previous Chaptor	Previous Track	Pump 3 Hi-Off
12		Stop	CD Stop AM/FM Band	
13	Menu	Press 2x for DVD Menu		
14	Power On/Off	Power On/Off	Power On/Off	
15				Press for SPA Functions
16	Channel UP	Chapter UP Hold - FF		Pump 2 Lo-Hi-Off
17	Channel Down	Chapter Down Hold -Review		
18		Select Menu Option Menu selection	Mute CD	
	Shift + TV selects inputs (TV/CATV-VIDEO-S VIDEO-Y,Cb,Cr-PC) To manually Enter channels Press <u>Shift</u> then number key			

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>