

# DYNEX™

## DX-MP3MT

### Bicycle and car mount for MP3 devices

#### Package contents

- Bike mount
- Car mount
- Holder
- *Quick Setup Guide*

**Caution:** Do not adjust your Dynex bike and car mount while riding a bike or driving a car.

#### Features

Your Dynex bike and car mount securely holds most MP3 players or smart phones to your bike frame, handlebars, or car window. Make sure that your electronic device is securely fastened to the mount before you begin your trip.

**Caution:** This mount is **not** intended for extreme off-road use. Excessive bumping and jarring may result in damage to your device.

#### Holder (closed)



#### Holder (open)




#### Attaching an MP3 device to the holder

- 1 Repeatedly press the release button on the side of the holder. The clamps open.
- 2 Unfold the feet on the bottom of the holder.
- 3 Adjust the clamps to fit the height of your device.
- 4 Insert your device on the holder and close the clamps by squeezing them together tightly until your device is secure.

#### Attaching to a bike


##### Bike mount

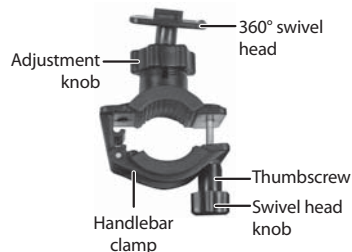

- 1 Insert the swivel head into the swivel head slot on the back of the holder and slide it into place until it is secure.



- 2 Remove the thumbscrew on the bike mount and set it aside.
- 3 Adjust the handlebar clamp to a size that best fits your bike frame or handlebars, then insert and securely tighten the thumbscrew removed earlier.

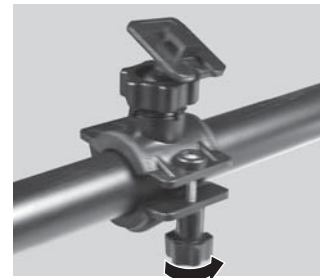


- 4 Loosen the adjustment or swivel head knobs to adjust the viewing angle, then retighten.

## Attaching to a car window

### Car window mount



- 1 Clean the window with a clean cloth.
- 2 Insert the swivel head into the swivel head slot on the back of the holder and slide it into place until it is secure.

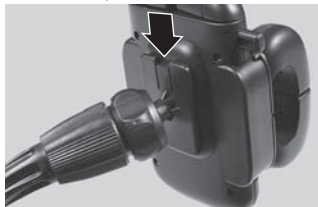

- 3 Remove the clear film from the suction cup.
- 4 Push the release button on the car window mount, press the suction cup to the desired location on the clean window, then press the suction lever down.

The mount adheres to the window.



- 5 Loosen the adjustment knob, adjust the viewing angle, then fully tighten the knob.  
**Caution:** Always loosen the adjustment knob before changing the viewing angle.
- 6 Bend the flexible arm to further adjust the viewing angle.
- 7 To remove the mount, press the suction release button, then pull the suction cup tab.

### Removing your device from the holder

- 1 Hold your device and repeatedly press the release button on the bottom of the holder. The clamps open.
- 2 Remove your device.

## One-year limited warranty

For complete warranty, visit [www.dynexproducts.com](http://www.dynexproducts.com).

### Contact Dynex:

For customer service call 1-800-305-2204  
[www.dynexproducts.com](http://www.dynexproducts.com)

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN 55423-3645 USA

© 2011 BBY Solutions, Inc. All Rights Reserved. DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>