

DYNE X

DX-CLTR01 Travel Clock Radio




Package contents

- Travel clock radio with digital FM radio
- AAA batteries (3)
- Quick Setup Guide


Features

Front view

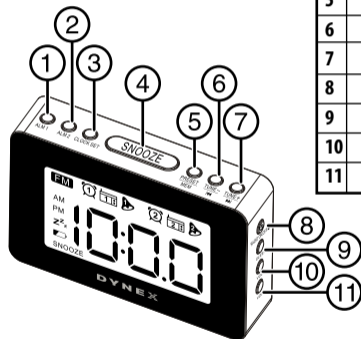

1	ALM 1
2	ALM 2
3	CLOCK SET
4	SNOOZE
5	PRESET/MEM
6	TUNE - / <<
7	TUNE + / >>
8	RADIO/ON/OFF/⏻
9	SLEEP
10	VOL -
11	VOL +

Back view

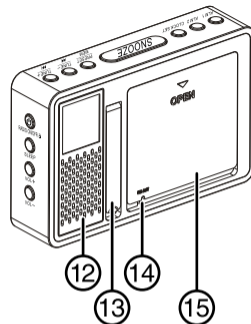

12	Speaker
13	Stand
14	FM antenna*
15	Battery compartment cover

*The FM antenna is located in the battery compartment, which you need to open to deploy the antenna.

Installing the batteries

- 1 Slide the battery compartment cover down and remove it.
- 2 Insert three AAA batteries (included) into the compartment. Make sure that the + and - symbols on the batteries align with the + and - symbols in the battery compartment.
- 3 Replace the cover.

Setting the time

- 1 Press and hold the **CLOCK SET** button for approximately three seconds. The hour digit will flash on the display.
- 2 Press the **TUNE+** or **TUNE-** button to set the current hour.
- 3 Press the **CLOCK SET** button to save the hour setting. The minute digit will flash on the display.
- 4 Press the **TUNE+** or **TUNE-** button to set the minutes.
- 5 Press the **CLOCK SET** button again to save the minute setting.

Using your clock radio

- 1 Press and hold the **RADIO/ON/OFF/⏻** button more than two seconds to turn your clock radio on.
- 2 Press the **RADIO/ON/OFF/⏻** button more than two seconds again to put your clock radio into standby mode.
- 3 Press the **RADIO/ON/OFF/⏻** button twice within 0.5 second to lock your clock radio's buttons.

To set the alarm:

- 1 Press and hold either the **ALM 1** or **ALM 2** button for approximately two seconds. The hour digit will flash.
- 2 Press the **TUNE+** or **TUNE-** button to set the hour, then press the **ALM 1** or **ALM 2** button to save your setting. The minutes digits will flash.
- 3 Press the **TUNE+** or **TUNE-** button to set the minutes, then press the **ALM 1** or **ALM 2** button to save your setting.
- 4 Press the **ALM 1** or **ALM 2** button again to confirm the setting. When the alarm time is reached, the alarm sounds.
- 5 To use the snooze feature, press the **SNOOZE** button. The alarm turns off for nine minutes, then turns on again.
- 6 To turn the alarm completely off, press any button except the **SNOOZE** button.

To wake to radio or alarm:

- 1 Confirm the Clock time setting by quickly pressing and releasing the **ALM1** or **ALM 2** button. The alarm time and source are displayed on the display.
- 2 To switch between the buzzer and radio alarm, quickly press **ALM1** or **ALM 2** repeatedly, until the alarm source you want is displayed on the display.

To use the radio:

- 1 Press and hold the **RADIO/ON/OFF/⏻** button more than two seconds to turn your clock radio on.
- 2 Press the **TUNE+** or **TUNE-** button to tune to the radio station you want.

- 3 Press and hold **TUNE+** or **TUNE-** button more than two seconds, then release the button to start the FM radio station scan.

To preset radio stations:

- 1 Tune to the station you want to preset.
- 2 Press and hold the **PRESET/MEM** button for over two seconds. "P01" flashes on the display.
- 3 Press **TUNE+** or **TUNE-** to select the preset number you want to assign to the station.
- 4 Press the **PRESET/MEM** button to store the setting.
- 5 Repeat the previous steps to preset additional stations. You can preset as many as 20 stations.
- 6 To tune to a preset station, quickly press and release the **PRESET/MEM** button one or more times until the preset number you want appears in the display.

To set the sleep timer:

- 1 Press the **SLEEP** button one or more times to select the amount of time you want the radio to play before it turns off. You can select **15, 30, 45, 60,** or **90** minutes. When the sleep timer is set, **zzZ** appears on the display.
- 2 To cancel the sleep timer, press the **SLEEP** button one or more times until **OFF** appears on the display.

To lock or unlock the buttons:

- Quickly press the **RADIO/ON/OFF/⏻** button twice. The presses must be within one second of each other. When the buttons are locked (disabled), **LOC** is displayed on the display. When the buttons are unlocked (enabled), **LOC** disappears from the display.

Safety information

WARNING: Batteries should not be exposed to excessive heat such as sunshine, fire, or the like. RISK OF EXPLOSION IF BATTERIES ARE REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

WARNING: To avoid dangerous radiation exposure, do not try to perform any operations not covered in these instructions.

WARNING: To prevent fire or shock hazard, do not expose the the clock radio to rain or moisture. Do not expose the apparatus to dripping or splashing. Do not place objects filled with liquid, such as vases, on the apparatus.

WARNING: To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

90 days limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex

For customer service, call 800-305-2204

www.dynexproducts.com

© 2011 BBY Solutions, Inc. All Rights Reserved.

DYNEX is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>