


Keyboard features

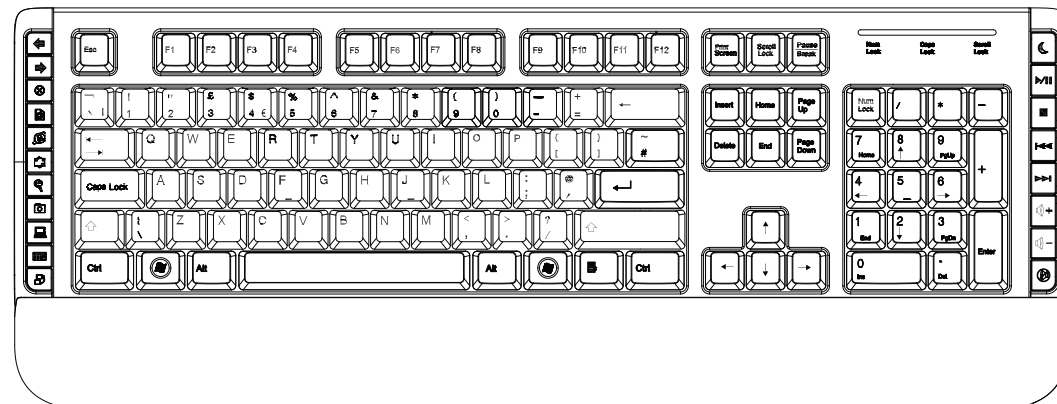

Internet hot keys

Icon	Function	Description
	Back	Press to go back to the previously viewed page in your Web browser.
	Forward	Press to go forward to the next previously viewed page in your Web browser.
	Stop	Press to stop loading a Web page.
	My Favorite	Press to display your list of website Favorites.
	Search	Press to open the Internet Explorer Search window.
	WWW	Press to start your default Web browser. If your browser is already open, it opens your Home page.
	E-mail	Press to start your default email program.
	Refresh	Press to update the current page in your Web browser.


Multimedia hot keys

Icon	Function	Description
	Play/Pause	Press to play or pause music or video. Press again to resume.
	Stop	Press to stop playing music or video.
	Volume up	Press to increase the volume. Hold down to increase the volume more quickly.
	Volume down	Press to decrease the volume. Hold down to decrease the volume more quickly.
	Mute	Press to turn off the sound. Press again to turn the sound back on.
	Previous track	Press to change to the previous media track. Press once for each preceding track.
	Next track	Press to change to the next media track. Press once for each subsequent track.

Application hot keys

Icon	Function	Description
	Task switch	Press to change between open windows on your computer.
	Sleep	Press to put the system into sleep mode if the computer supports power management and has it enabled.
	My Computer	Press to open My Computer, which shows the contents of all drives. Here you can also search for and open files and folders.
	Calculator	Press to open the calculator. If your computer uses Windows 2000, a special driver is required for this key to work correctly.

Mouse features

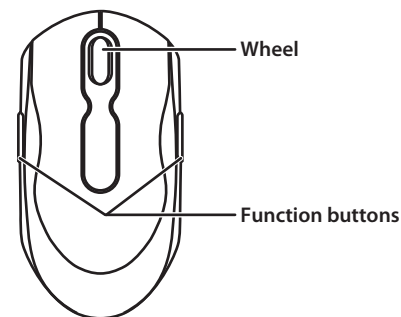

Function	Description
Left button	For left clicking
Right button	For right clicking
Wheel	For scrolling
Left side button	For going back to a previously viewed item in programs that support the "Back" command, such as Web browsers.
Right side button	For going to the next item in programs that support the "Forward" command, such as Web browsers

This Product is distributed and sold by Best Buy UK Distributions Limited. Freephone number for Dynex: 0800 917 1130

© 2009 Dynex. DYNEX and the DYNEX logo are trademarks of BBY Solutions, Inc. Other brands and product names are trademarks or registered trademarks of their respective holders. Specifications and features are subject to change without notice or obligation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>