
QUICK SETUP GUIDE

32" LCD TV DX-32L200NA14

Thank you

for purchasing this state-of-the-art Dynex television. We hope you enjoy the quality and reliability of this television for years to come.

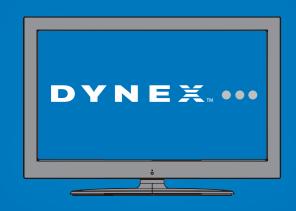

FIND YOUR USER GUIDE ONLINE!

We are going green so a copy of your *User Guide* is not provided in the box but is available online.

Go to <u>www.dynexproducts.com</u>, click **Support & Service**, enter your model number in the box under **Manual**,

Firmware, Drivers & Product Information, then click Search.



1 ST

START HERE

How do I attach the stand to my TV? (not for wall mounting)

You'll need: Phillips screwdriver and a soft surface to lay the TV on.


- **A** Lay the TV down on a soft surface.
- **B** Find the front of the stand. Attach it to the TV by hooking the slot in the stand onto the tab on the stand column, then push the stand into place.
- **C** Secure the stand to the TV with the six screws provided.





How do I prepare my TV for wall mounting?


(not for use with a TV stand)

- **A** Lay the TV down on a soft surface, then remove the four screws from the stand column.
- **B** Remove the stand column.

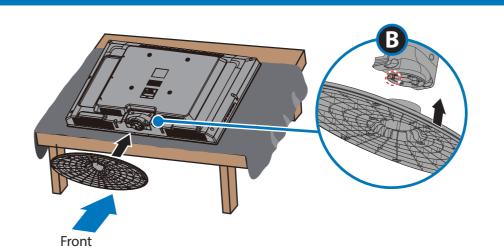

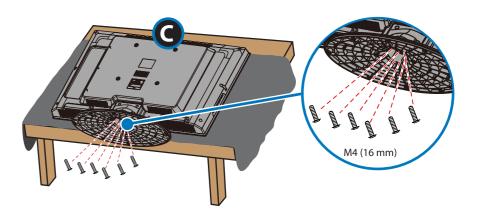

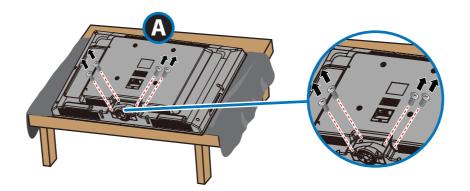

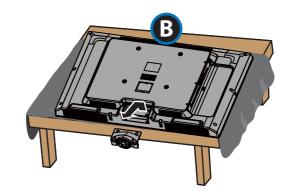

STOP!

Do not plug your power cable in until all other devices have been connected.

Included accessories



Remote control and two AAA batteries







Which cables do you have?

Your TV has several different jacks for connecting devices. For the best video quality, use the best available connection. Use the cables that came with your devices.

VIDEO QUALITY	PORT TYPE	CABLE CONNECTOR
BEST	HDMI video/audio	
BETTER	Component video and analog audio	
GOOD	Composite video and analog audio	
GOOD	Coaxial video/audio	

Note: You can use the HDMI 1/DVI jack to connect a DVI device to your TV. Attach an HDMI-to-DVI adapter to the end of the HDMI cable. The adapter connects to the DVI device's jack. See your online *User Guide* for more information about different types of HDMI

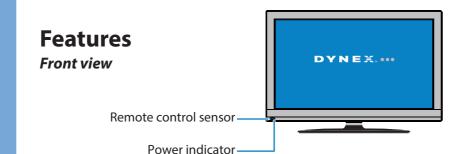


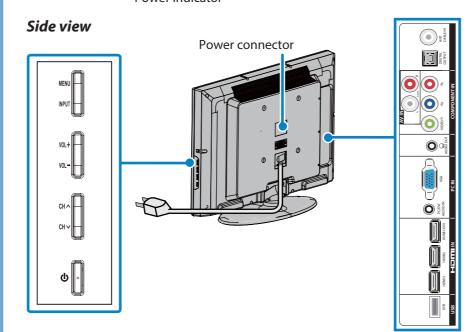


Note: Images do not necessarily represent the exact design of your television.


2 MAKING CONNECTIONS

How do I watch TV (cable or satellite receiver) and/or connect a device such as a DVD or Blu-Ray Disc player, game station, or camcorder?

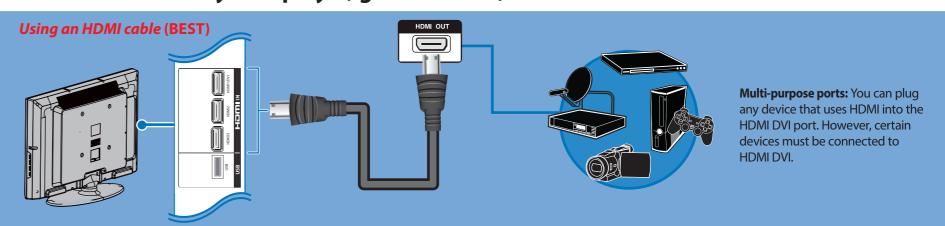

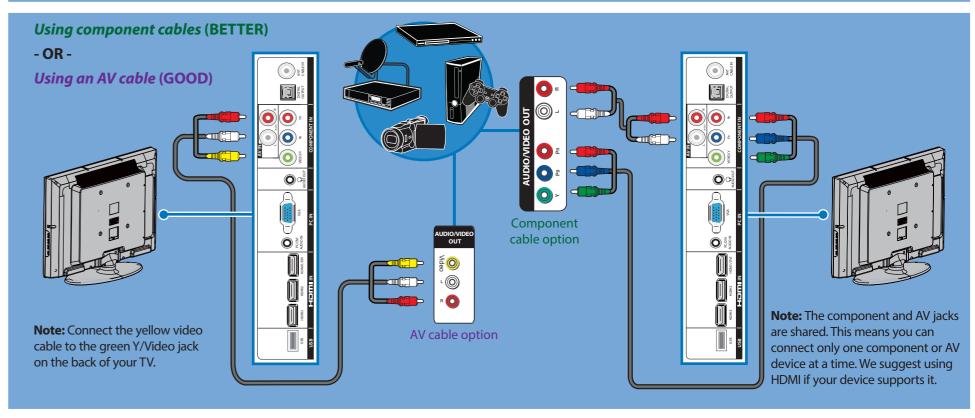


How do I connect my TV to an antenna or cable wall jack?

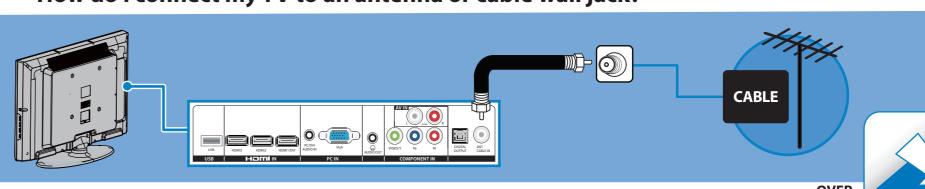


3 CONNECTING AUDIO DEVICES


How do I connect my TV to external speakers?

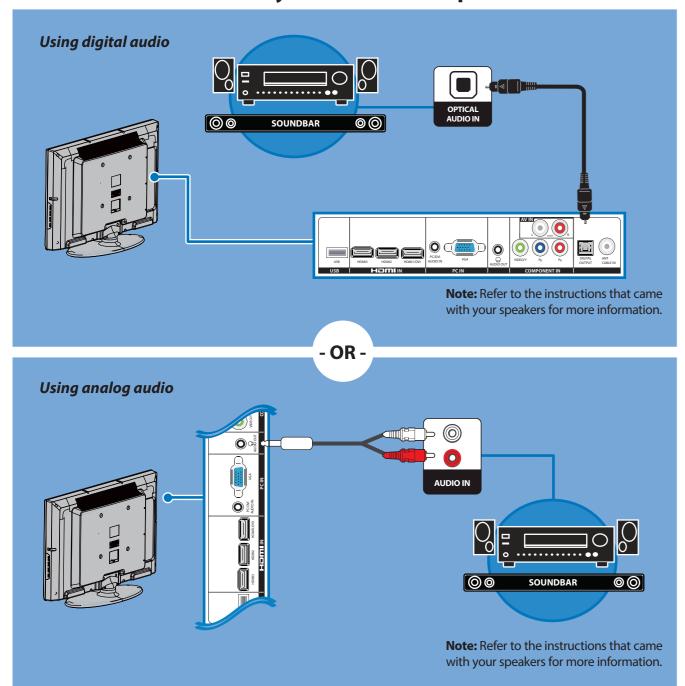

TURNING ON MY TV When can I turn on my TV?

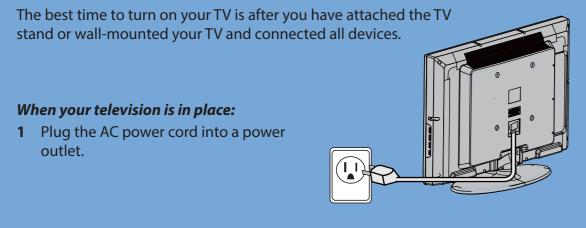


2 Install the remote control batteries.

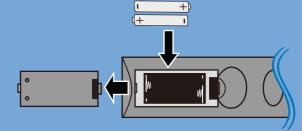

- 3 Press (b) (power) on your remote
- **4** Follow the on-screen instructions.



Using your remote control

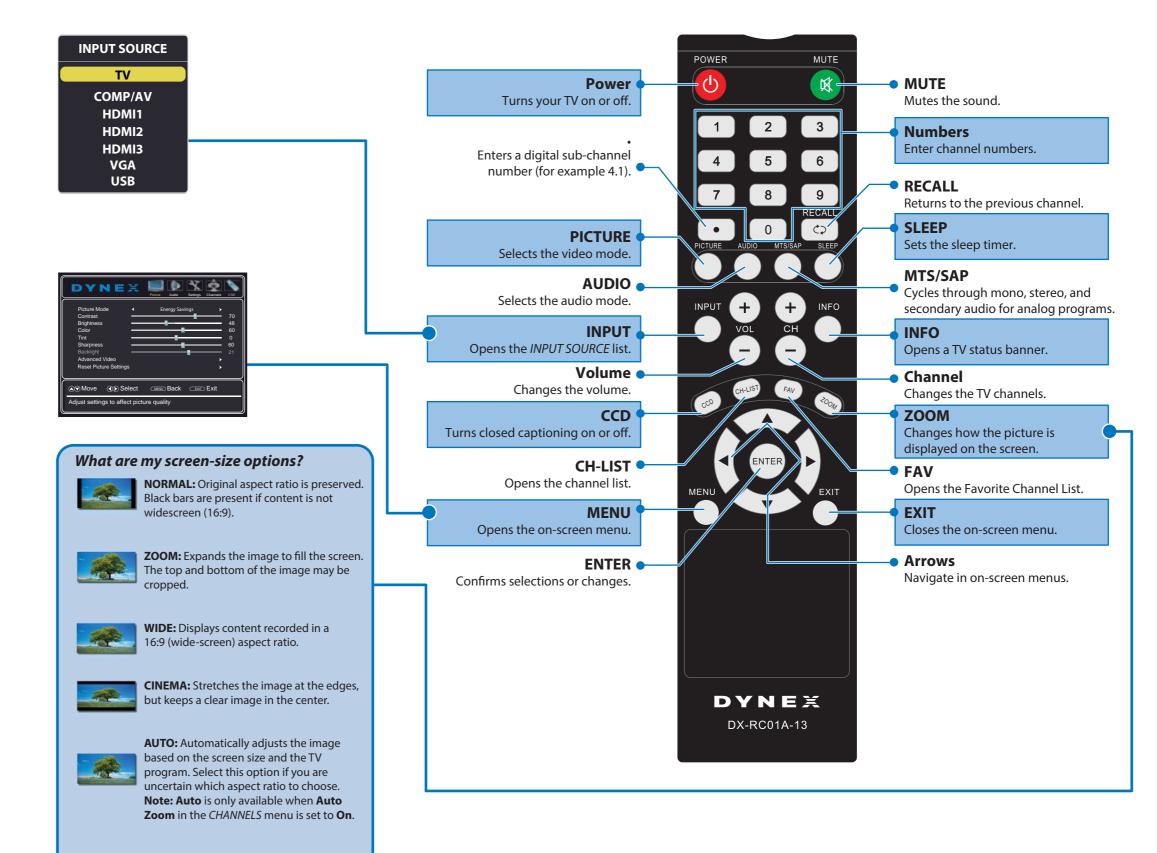

DYNEX

One-year limited warranty

Visit <u>www.dynexproducts.com</u> for details.

Need additional help?

See your online *User Guide!* This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.dynexproducts.com, click Support & Service, enter your model number in the box under Manual, Firmware, Drivers & Product Information, then click Service, enter your model number in the box under Manual, Firmware, Drivers & Product Information, then click Search.

Check out our **online community forum** at www.dynexproducts.com for helpful information from other Dynex TV owners.

We're here for you

www.dynexproducts.com
For customer service, call:
800-305-2204
(U.S./Canada markets)

DYNEX is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2013 BBY Solutions, Inc. All Rights Reserved 1-800-305-2204 www.dynexproducts.com

For an up-to-date list of codes for other cable providers and universal remote brands,

www.dynexproducts.com/remotecodes.

scan this **QR code** or visit

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Dynex remote control, see the table for common codes.

	UNIVERSAL REMOTE TV CODES	
	CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX	
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026	
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586	
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002	
Cox	1326, 1463	
Direct TV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002	
Dish Network	720	
Time Warner	400, 450, 461, 456, 10463, 1463, 0463	
Tivo	0091	
Verizon	0198, 0490	
	UNIVERSAL REMOTE CONTROLS	
One for All	0054	
Philips	0198, 0490	
RCA	135	
Sony	068, 069, 078, 096	

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com