


(Mute) Press MUTE button to select mute on or mute off. ZOOM PLAYING DVD Press the ZOOM button repeatedly and the TV screen will display: $ZOOMx2 \rightarrow ZOOMx4 \rightarrow ZOOMx1$ PLAYING JPEG Press the ZOOM button repeatedly and the TV screen will display: $25\% \rightarrow 50\% \rightarrow 100\% \rightarrow 150\% \rightarrow 200\%$ While at 100%, press the direction button to rotate the picture. While at 150% or 200%, press the direction button to move the picture position. NOTE: The picture quality decreases as the picture size increases. (search) Go to a desired section. (A desired Title, chapter, Time or Track)

.13.

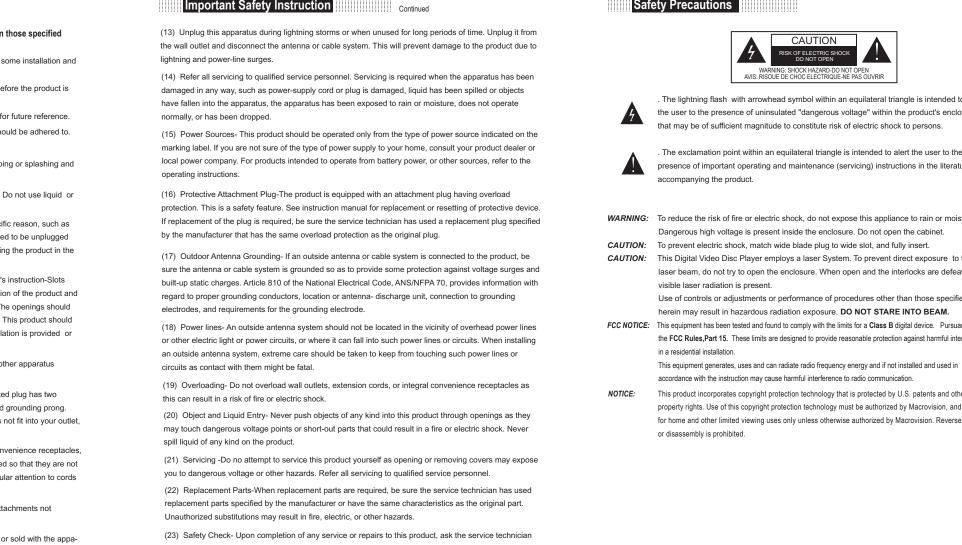

 In MP3 mode
 When the Program menu appears, press the ▲\▼ button to select the folder, use the ENTER button to confirm. RIGHT button to select it . (The tracks to be programmed playback can be in different folders. Press the LEFT button to return to the folder menu). Repeat Step a to b to select the tracks you wish to play. Press PLAY to start playing the programmed tracks. For your reference: While playing a DVD disc, press ANGLE button to view different camera angles on the disc. A DVD disc may contain up to 9 selectable camera angles. • To cancel the incorrect input information, press the Clear button. Press Program aganin to quit the program menu. Under program playing, press the Program twice to resume normal playback. (Sub) Title While playing a DVD disc, press Sub-Title button to select the language of the viewable subtitle. A DVD disc may contain up to 32 selectable subtitles. NOTE: Some discs do not allow program setting.

NOTE: Some DVD discs do not allow REPEAT function.

 Step
 Press STEP when playing, it can step frame by frame.

 Press PLAY button to quit the STEP mode.

.14.

STEP

Multi-Angle/Subtitle/Audio

.15.

▲ MP3_01 ▲ 101 ↓

MP3_01

TV System To select the TV system from: NTSC; PAL; AUTO

Instruction To select the digital output from:

Press the Direction keys to highlight the desired Audio item.

of minimizing the circuit interference.

Digital Out IN Select the ungital outperformance SPDIF/PCM; SPDIF/RAW; OFF

Contrast

Audio Setup

Item

NOTE:

NOTE:

Download from Www.Somanuals.com. All Manuals Search And Download.

Brightness To select the brightness from: Normal; Bright; Soft

To select the contrast level from:-4; -3; -2; -1; 0; 1; 2; 3; 4 0

disc player will not change the screen size for these "Format-only" discs. • The TV system for North America is NTSC. Auto should only be used if you have a Multi-System TV.

• Certain DVD discs are formatted in wide screen (16:9) or letter box (4:3) only. Adjusting the setting of the

When Digital Out is NOT in use, it is recommended to turn OFF the digital output setting, for the purpose

NTSC

NORMAL

Default setting

SPDIF/RAW

L								
	Specification					1		

Page

equipped with a Dolby F

Enter


Mute ·

Repeat....

Audio

SubTitle

Power supply	DC 9.0V 2A (AC adapter TERMINAL)
Power consumption	≤ 9.8W
Signal system	NTSC / PAL
Video output	1±0.2V (p-p), 75ohm, negative sync., 3.5 mm mini jack x1
S-video output	(Y) 0.7 ±0.14V (p-p), 75 ohm, negative sync. (C) 0.88±0.176V(p-p), 75 ohm
Audio output	1.5 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x2
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	480 X 234 pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0°c to 35°c. Operation status : Horizontal
Dimensions	194 x152x30 mm (main unit)
Weight	993g (main unit)

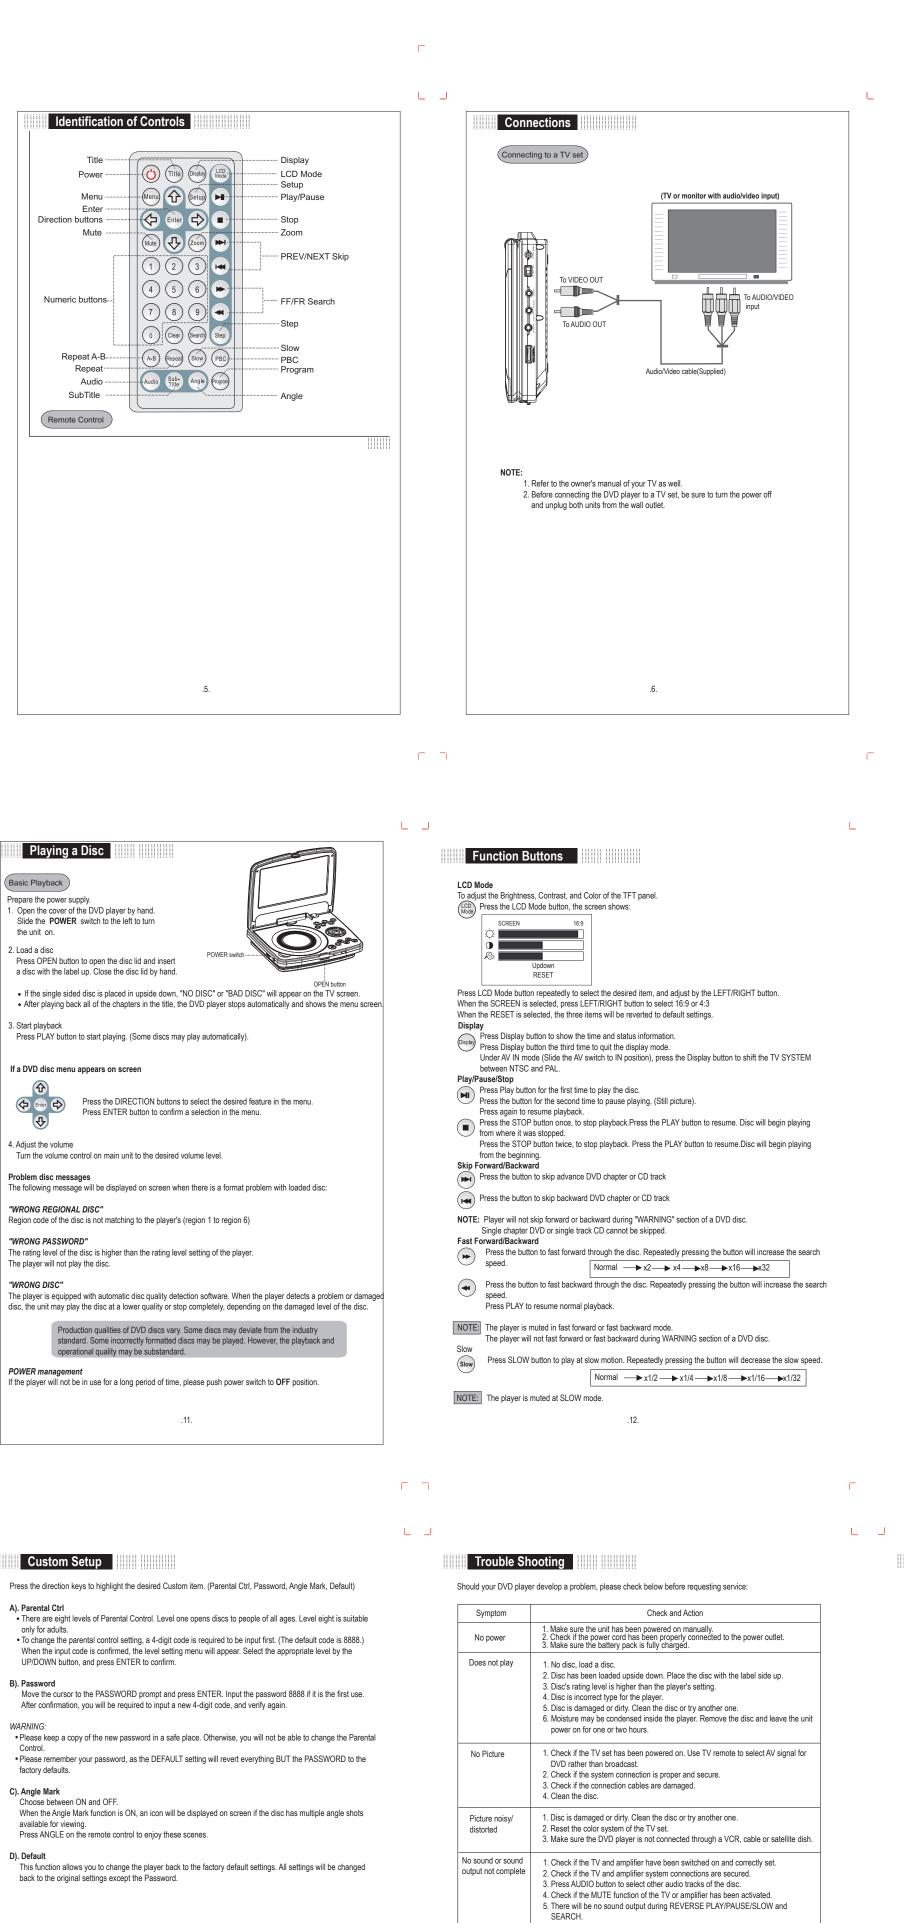

Specification

Specification	
Power supply	DC 9.0V 2A (AC adapter TERMINAL)
Power consumption	≤ 9.8W
Signal system	NTSC / PAL
Video output	1±0.2V (p-p), 75ohm, negative sync.,
	3.5 mm mini jack x1
Audio output	1.5 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x2
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	480 X 234 pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0°c to 35°c. Operation status : Horizontal
Dimensions	194 x152x30 mm (main unit)
Weight	970g (main unit)

.19.

.17.

does not work

Malfunction

Remote control 1. Make sure the POWER button on the unit has been turned on manually.

5. Replace the batteries of the remote control.

2. Remove the obstacles between the remote control and the player.

3. Point the remote control towards the remote sensor on the player.

4. Check if the batteries of the remote control have been loaded with correct

Should the player develop a malfunction, unplug the player for 30 minutes. After

that, power on the player and the restore function should reset the player.

.18.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com