


Operation Manual

DIGITAL TUNING FM/AM/TV/NOAA RADIO

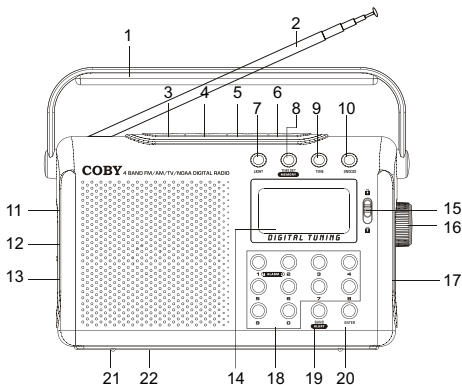

- | | |
|---------------------------|--------------------------------|
| 1. Handle Bar | 12. DX / Local Switch |
| 2. Antenna | 13. DC Jack |
| 3. Hour / Tuning Down | 14. LCD |
| 4. Minute / Tuning Up | 15. Hold Switch |
| 5. Sleep | 16. Volume Control Dial |
| 6. Power | 17. 3.5mm Earphone Jack |
| 7. Light | 18. Number Buttons |
| 8. Time Set / Memory | 19. Band / Alert Button |
| 9. Time | 20. Enter Button |
| 10. Snooze | 21. Battery Compartment (Rear) |
| 11. External Antenna Jack | 22. AC Cord Socket (Rear) |

PRECAUTIONS

1. Read these instructions carefully.
2. Keep these instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Do not expose to water or moisture.
6. Clean only with a dry cloth.
7. Keep objects away from ventilation openings. Do not block any ventilation openings at any time.
8. Do not install near any heat sources such as stoves, radiators, amplifiers or any apparatus that produce heat.
9. Do not force the power plug in the wall outlet. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Place the power cord so that it is protected from being walked on, pinched by objects, torn and exposed to liquids, especially at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended by the product manufacturer may cause hazards.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. If the set will not be used for a long time, remove all the batteries to prevent potential damage due to possible battery leakage.
15. There is a strong magnet inside the radio. Keep credit cards, recorded tapes, watches, etc. away from the radio, especially the speaker.
16. Do not drop the radio or subject it to strong impacts.
17. Do not use this apparatus near water, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
18. Refer all servicing to authorized service personnel.

For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org

POWER SOURCE

BATTERY OPERATION

1. Open the battery cover.
2. Insert 3 "D" size (UM-1 or equivalent) batteries into the battery compartment, making sure that the batteries are installed with the proper polarities ("+" and "-").

TO PREVENT POSSIBLE DAMAGE TO THIS UNIT

1. Load new batteries with their polarities ("+" and "-") aligned correctly.
2. If the radio will not be used for a long time, remove all of the batteries, and store them in a cool and dry place.
3. Remove dead batteries immediately and properly dispose of them.
4. Do not use old and new or different types of batteries (e.g., alkaline and manganese) together.

BATTERY LIFE

If the sound becomes low or distorted, replace all of the batteries with new ones.

TO USE AC HOUSE CURRENT

Plug the AC cord into the AC cord socket located on the rear of the radio, and the other end into an AC wall outlet.

RADIO OPERATION

1. Set the hold switch off (slide up).
2. Press the power button to turn on the radio.
3. Adjust the volume by turning the volume control dial.
4. Select the preferred frequency band (AM/FM/TV/NOAA) by pressing the BAND / ALERT button. The selected band will appear on the display.
5. Press the light button to turn the backlight on for about 8 seconds.
6. Use the TUNING DOWN / UP buttons or the NUMBER buttons to tune to a station. The frequency will be displayed on the LCD. Please see page 4 (TUNING) for more information.
7. Press and hold the TIME button to switch from FM stereo mode to FM mono mode.
8. Press the TIME button once to show the time. Press it again to display the time for alarm 1. Press it again to display the time for alarm 2. Press it again to display the frequency. The radio will automatically return to displaying the frequency after 5 seconds.
9. Adjust the antenna. See page 5.
10. Press the power button to off the radio.
11. Before turning the radio off, set the NOAA band to your local NOAA frequency. When the radio is off, press the BAND / ALERT button to turn on the NOAA alert function. NOAA will be shown on the bottom right of the LCD. When there is a NOAA alert, the radio alarm will sound, the light will turn on and the radio will turn on to the NOAA band.

TUNING

AUTOMATIC TUNING

Press and hold the TUNING DOWN / UP button to tune to the previous / next station.

MANUAL TUNING

Press the TUNING DOWN / UP button to change the frequency down / up by one step.

DIRECT TUNING

Use Direct Tuning to enter a specific station frequency to tune to directly.

In the AM/FM mode, press the ENTER button to enter the direct tuning mode. Press the NUMBER buttons to enter the desired frequency, and press the ENTER button.

TUNING TO STORED STATIONS

You can store 20 radio stations: 10 for AM and 10 for FM.

HOW TO STORE A RADIO STATION

1. Select the frequency band and tune to the desired station.
2. To store the radio station, press the TIME SET / MEMORY button. "MEMO" will appear on the bottom right of the LCD and flash. Press a number button, and press the TIME SET / MEMORY button to store the radio station. The preset number will be displayed on the right of the LCD.
3. To select a stored station, select the frequency band, and press a number button. The radio will go to the stored station, and the preset number and the frequency are shown on the display.

CLOCK

SHOWING THE CLOCK

When the radio is off, the time is displayed on the LCD. When the radio is on, the frequency is displayed. Press the TIME button to display the time. Press it again to display the alarm 1 time. Press it again to display the alarm 2 time. Press once more to display the frequency.

SETTING THE TIME

When the radio is off, press the TIME SET / MEMORY button, and the time will flash. Press the HOUR and MIN. buttons to adjust the time. Ensure that the AM/PM is set correctly.

SLEEP TIMER

When the radio is on, press the SLEEP button. "90" will be displayed on the top right corner of the LCD and "SLEEP" will appear on the top of the LCD and flash. Press the SLEEP button to decrease the sleep timer by 10 minutes. The radio will automatically turn off when the sleep timer reaches 0. Press the SLEEP button to turn off the sleep timer.

ALARMS

1. Turn off the radio.
2. Press the TIME SET / MEMORY button twice. "AL1" will appear on the bottom of the LCD, and the alarm 1 time will flash. Press the HOUR and MIN. buttons to adjust the alarm 1 time. Ensure that the AM/PM is set correctly. Press the TIME SET / MEMORY button.
3. "AL2" will appear on the bottom of the LCD, and the alarm 2 time will flash. Press the HOUR and MIN. buttons to adjust the alarm 2 time. Ensure that the AM/PM is set correctly. Press the TIME SET / MEMORY button.
4. Press the ALARM 1 button once and "🕒1" will be displayed on the bottom of the LCD. The alarm 1 is now turned on, and the radio will beep at the alarm 1 time. Press the ALARM 1 button again and "🕒1" will be displayed on the bottom of the LCD. The alarm 1 is on, and the radio will turn on to the current radio station at the alarm 1 time. Press the ALARM 1 button again to turn off the alarm.
5. Press the ALARM 2 button once and "🕒2" will be displayed on the bottom of the LCD. The alarm 2 is now turned on, and the radio will beep at the alarm 2 time. Press the ALARM 2 button again and "🕒2" will be displayed on the bottom of the LCD. The alarm 2 is on, and the radio will turn on to the current radio station at the alarm 2 time. Press the ALARM 2 button again to turn off the alarm.
6. You can press the SNOOZE button when the alarm is sounding to pause the alarm for 8 minutes.

ANTENNA

FM/TV/NOAA

Pull out the telescopic antenna and adjust its length and angle for optimum reception.

AM

The sensitive ferrite core antenna inside the set will provide excellent AM reception in most areas. For optimum reception, change the position of the radio because the AM antenna is directional.

SUPPORT

If you need assistance with this product, please contact technical support.

COBY Electronics Technical Support

56-65 Rust Street
Maspeth, NY 11378

Email: techsupport@cobyusa.com

Web: www.cobyusa.com

Phone: 800-727-3592 (8:00 AM–11:00 PM EST, seven days a week)
800-681-2629 (8:00 AM–5:30 PM EST, Monday to Friday)
718-416-3197 (8:00 AM–5:30 PM EST, Monday to Friday)

SPECIFICATIONS

Power Source: 3 "D" Size/UM-1 Batteries (DC: 4.5V)

Frequency Range:

AM 520 – 1710 kHz

FM 87.5 – 108 MHz

TV CH2 – CH13

NOAA CH1 – CH7

CH1 162.550 MHz

CH2 162.400 MHz

CH3 162.475 MHz

CH4 162.425 MHz

CH5 162.450 MHz

CH6 162.500 MHz

CH7 162.525 MHz

Speaker: 8 ohm 1W

Power Output: 200mW

Output Jack: Earphone 32 ohm

WARNING: The power cord on this product contains lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handling.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>