

# SL3 Quick Start Guide

## 1. GPS Indicator / Zone 3 Indicator:

- **Flashing Red** - Establishing satellite connection
- **Green** - GPS established

## 2. AMBER LEDs: (Zone 2):

If the **amber** LEDs flash every three seconds, this indicates that the unit is within Zone 2 of an alert area.

## 3. GREEN LEDs: (Zone 1):

The **green** LEDs flash when in Zone 1 of an alert area.

## 4. MEM / DEL:


This button is used for storing or deleting user coordinates.

## 5. MUTE / DIM:

If, when approaching an alert area, you wish to stop the audible alert but still receive a visual alert, press this button.

If you want to reduce the brightness of the LEDs press this button when you are not receiving an alert on the unit. To restore the brightness, press the button again.

For more detailed information of how the unit works, please refer to the user manual included with the unit or visit us at [www.cobra.com](http://www.cobra.com).

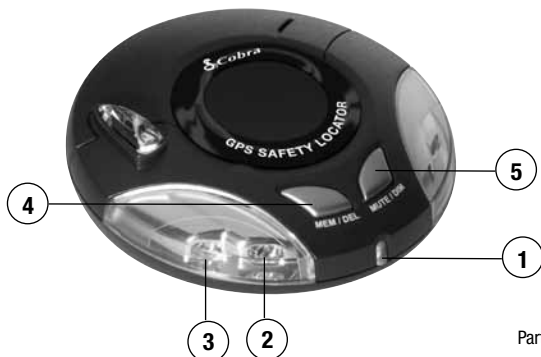

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>