

# **Cobra**<sup>®</sup> **microTALK**<sup>®</sup>

Operating Instructions for your

 **Cobra**<sup>®</sup> **microTALK**<sup>®</sup>

## 2-Way Radio

FRS 225



Nothing comes close to a Cobra<sup>™</sup>

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# Family Radio Service

# How to Use Your Cobra® *microTALK*® 2-Way Radio

## Family Radio Service

Ever wish you could talk to someone who wasn't within earshot? Like contacting ski partners back at the lodge? Or letting a friend know how to find you in a busy mall? Cobra®'s *microTALK*® FRS 225 is a great way for friends or family to have fun and be safe by staying in touch while on the go.

The FCC (Federal Communications Commission) has created 14 license free frequency bands, or channels, called Family Radio Service (FRS) frequencies. These channels are in the UHF (Ultra High Frequency) band which means great penetration through buildings, thick forests, hills, and other dense structures. They are also FM (Frequency Modulation) signals which means crystal clear reception even in crowded, noisy environments.

## FCC Warnings

Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra®, may cause a violation of the technical regulations of part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

## Included with your *microTALK*®

1. Belt Clip
2. Wrist Strap
3. Two *microTALK*® SNAP™ removable fronts

 
 
## Contents

<b>Features</b> .....	1
<b>Family Radio Service</b> .....	A1
FCC Warnings	
Included Accessories	
<b>Controls &amp; Indicators</b> .....	A2
<b>Our Thanks to You</b> .....	A3
Customer Support .....	A3
<b>Operating your <i>microTALK</i>®</b>	
Battery Installation.....	2
Turning On.....	3
Illuminating the Display .....	3
Auto Squelch .....	4
Maximum Range Extender/Auto Monitor .....	4
Select Channel .....	5
Select CTCSS Privacy Code .....	5
Calling Another Party .....	6
Talking To Another Party .....	6
Roger Beep Confirmation Tone.....	7
Listening For Another Party .....	7
Lock Function .....	8
<i>microTALK</i> ® Range.....	9
Making Life Easier And Safer .....	10
<i>microTALK</i> ® SNAP™ Removable Front.....	11
External Microphone/Speaker Jack.....	12
<b>Caring for Your <i>microTALK</i>®</b> .....	14
<b>Frequency Ranges</b> .....	16
<b><i>microTALK</i>® Specifications</b> .....	16
<b>Limited Two Year Warranty</b> .....	18
<b>Optional Accessories</b> .....	19
<b>Order Form</b> .....	20
<b>If You Think You Need Service</b> .....	Back Cover

## Features of This Product

- Two-way radio with up to a 2 mile range
- 14 channels
- 38 Privacy Codes
- Backlit LCD
- Roger beep confirmation tone
- Call feature
- SuperFlex™ antenna
- Water Resistant
- Speaker/Microphone jacks
- Belt clip
- Wrist strap
- Lock Function

1. Antenna
2. Microphone/Speaker Jack
3. On/Off Volume Switch
4. LCD Display Panel
5. Light/Max Range Button
6. Channel Select Button
7. Speaker
8. Battery Compartment
9. Talk Button
10. Call Button
11. microTALK® SNAP™ Removeable Front
12. Lock Button
13. Mode Button
14. Charge Pads

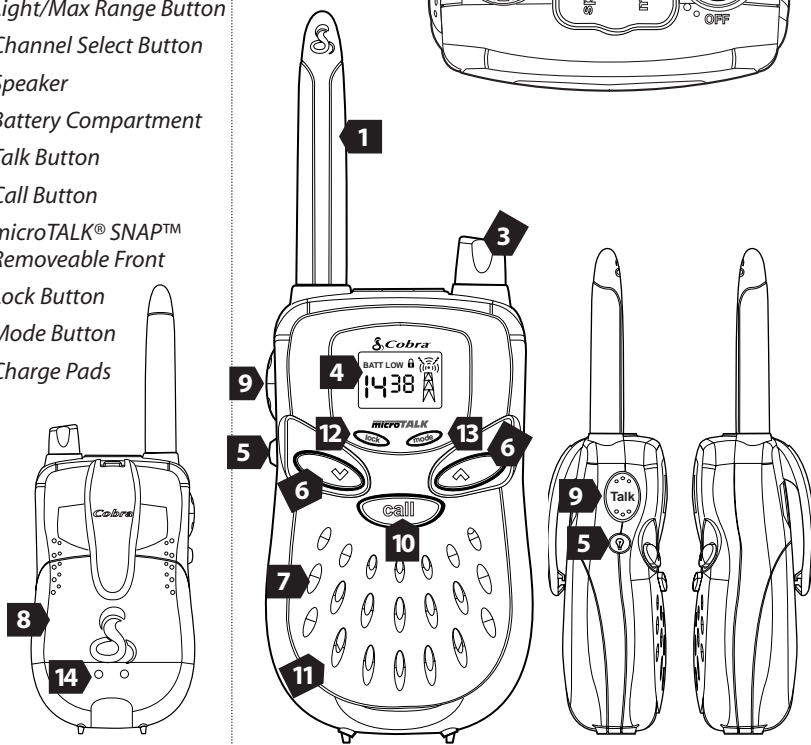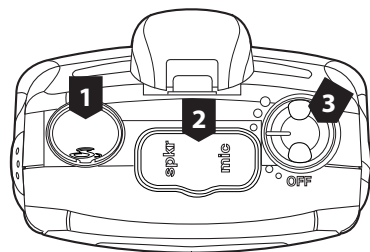

Thank you for purchasing the Cobra® FRS 225 2-Way Radio. Your microTALK® radio comes with the new microTALK® SNAP™ removable front, which allows you to customize the appearance of your radio! Several color choices are included with your purchase. For instructions on removing the microTALK® SNAP™ front, see page 11. For additional color choices available as accessories (sold separately), please see the brochure and order form included.

## Customer Support

Properly used, this Cobra® product will give you years of reliable service. Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra® Customer Service at 773.889.3087.

## Cobra® Customer Service

Live operators are available  
M-F 8:00 am - 6:00 pm CST  
at: 773.889.3087

Automated Technical  
Assistance available  
24 hours a day, seven days  
a week. E-mail questions to:  
productinfo@cobra.com

Cobra® on the World Wide  
Web: Frequently Asked  
Questions (FAQ) can be  
found on-line at:  
www.cobra.com

## Battery Installation

### Note

Batteries are not included with microTALK® 2-way radio. Always use 3 high quality AA alkaline batteries or optional battery pack (sold separately).

**Only the Cobra® NiMH battery (Part #FA-AA) pack can be recharged.**

 
### Note

When batteries are low the **BATT LOW** indicator will blink.

### Note


Visit Cobra® Electronics ([www.cobra.com](http://www.cobra.com)) for information about optional battery pack and desktop charger accessories.

## Install Batteries

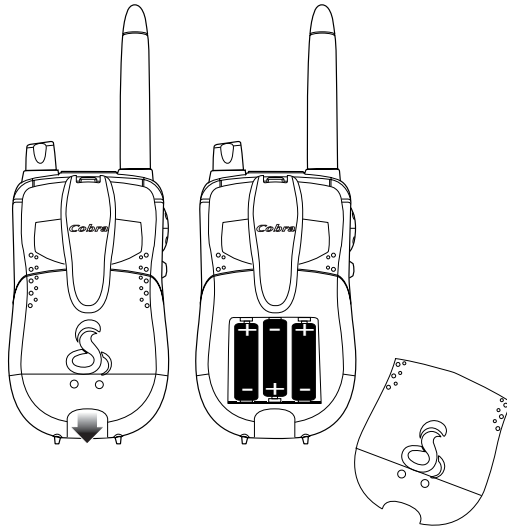

- 1 Pull lock tab down to remove battery cover.
- 2 Insert three "AA" batteries. Position batteries according to polarity markings.

## Turning On Your microTALK®

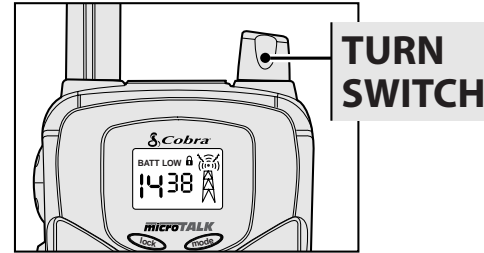 

- 1 Turn the On/Off/Volume switch. An audible "tone" will indicate the unit is on.

## Illuminating the Display



- 1 Push and release  LIGHT/MAX RANGE button to illuminate display for ten seconds.

## Turning On Your microTALK®

### Note

Whenever the unit is on you can receive communications.

## Illuminating the Display

## Auto Squelch

 
### Auto Squelch

Your microTALK® is equipped with Auto Squelch, which automatically shuts off weak transmissions and unwanted noise due to terrain conditions or if you have reached your range limit.

## Maximum Range Extender

### Maximum Range Extender

Auto Squelch can be temporarily removed to allow all signals to enter (Maximum Range Extender).

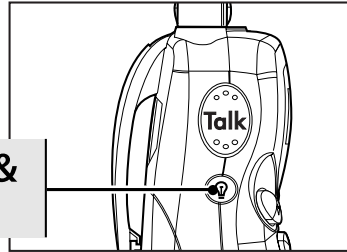

- 1 Push and hold  LIGHT/MAX RANGE button to allow all signals to enter.

### Note

To learn more about the range of your microTALK®, see page 9.

Range is dependent on battery condition and geographic terrain.

 
## Auto Monitor

### Auto Monitor

When the signal you want to hear is consistently weak, you may place the radio in Maximum Range mode without having to constantly hold the button: Press and hold the Maximum Range Extender button for five seconds. Two beeps confirm Auto Monitor is on. To return to normal operation, momentarily press the Maximum Range Extender button again or change channels.

## Select Main Channel (1-14)


- 1 Turn on the microTALK® 2-Way Radio.

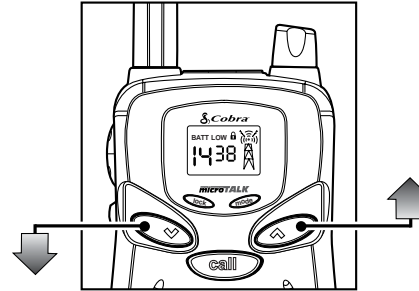

- 2 Select any of the 14 channels by pushing the channel up or down buttons.

## Select CTCSS Privacy Code (00-38)

 - 1 Press the mode button. After a short delay, small numbers will flash next to the channel display LCD indicating the privacy code.

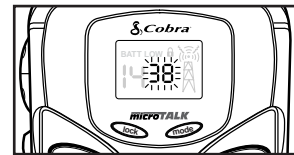

- 2 Select privacy code number by moving the channel button up or down.
- 3 When the desired code is displayed push the mode button and release. An audible tone will confirm your selection.

## Select Channel

### Note

Units must be on same channel and privacy code to communicate.

### Note

Channels 8-12 generally are less used and give better results for communications in most areas.

### Note

Push and hold the channel button for fast channel advance.

## Select CTCSS Privacy Code

### Note

Selecting a CTCSS privacy code will allow you to only hear conversations on that selection. For example, you may be with a group of friends. If all of you select channel 7 and privacy code 1, you will hear your friends but will not hear anybody else on channel 7, privacy codes 2 through 38.

## Calling Another Party

### Note

Both units must be ON and tuned to the same channel.

Your incoming "Call" signal volume is dependent on the unit volume setting.

## Talking To Another Party


### Note

While the  TALK button is depressed you cannot receive incoming calls.

 
### Calling Another Party


To alert another party that you wish to communicate:



- 1 Push and release  CALL button. The unit you are calling will hear a two second ringing tone.


### Talking To Another Party

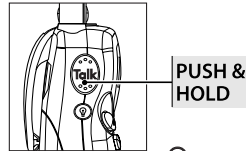


- 1 Push and hold  TALK button.



 
- 2 The TX/RX indicator will be displayed.

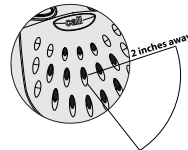

 
- 3 Hold mic about 2 inches from mouth. Speak in a normal voice.

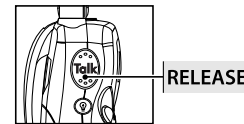

- 4 Release  TALK button and listen for response.

### Roger Beep Confirmation Tone

 



Your listener will hear an audible tone when you release the  TALK button.

This alerts the other party that you are finished talking and it's OK for them to begin talking.

### Listening For Another Party

When finished talking:

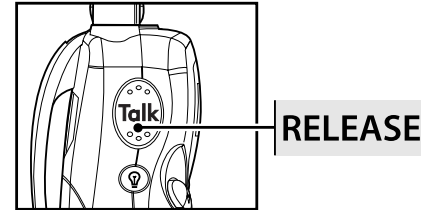

- 1 Release  TALK button to receive incoming transmissions.

Your microTALK® is always in listening mode when the  TALK button is not pressed.

- 2 Adjust volume by turning the On/Off Volume Switch

## Roger Beep Confirmation Tone

## Listening For Another Party

### Note

While the  TALK button is depressed you cannot receive incoming calls.

## Lock Function

### Note

 
Call button, Range Extender button and Talk button do not lock and are fully operational while the unit is locked.





The unit cannot lock while in function mode.

## Lock Function

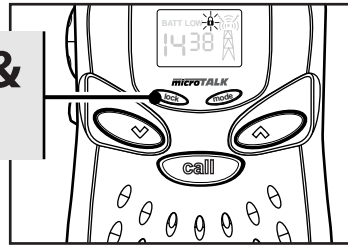The purpose of the LOCK function is to lock most buttons to avoid accidental operation. To engage the LOCK function:


**PUSH & HOLD**



 - 1 Push and hold Lock  button until  flashes. Channel up/down and Mode buttons are now locked. An audible tone will also confirm lock function.
- 2 To “unlock” push and hold Lock  button until  disappears.

## microTALK® Range

Your microTALK® Radio has a range of up to 2 miles. This effective range can be shortened under some conditions.

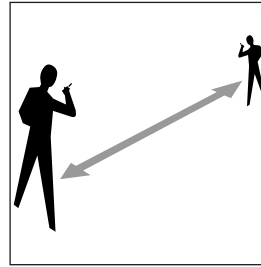

1. Under flat, open conditions you will experience the microTALK®'s maximum range.



2. Range can be reduced by buildings and foliage in the path of the signal.



3. Range will be further reduced by dense foliage and hilly terrain.

## microTALK® Range

### Note

To achieve maximum range the auto squelch can be overridden. Refer to Maximum Range Extender section on page 4.

 
# Making Life Easier and Safer

## microTALK® 2-Way Radios Can Make Life Easier and Safer


### microTALK® 2-Way Radios Can Make Life Easier and Safer

As you become familiar with your microTALK® Radio you will find many of your own uses for the unit.


Some suggestions include:

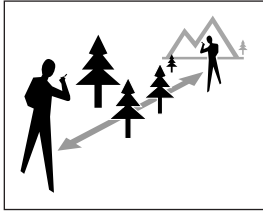

 
1. Talking with fellow hikers.

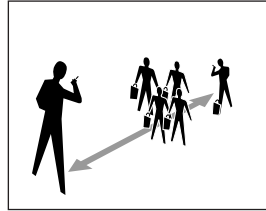

 
2. Keeping track of the kids in a shopping mall.

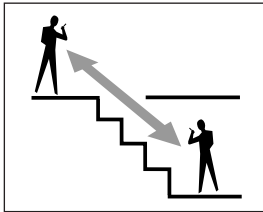

 
3. Communicating between basement and first, second or third floor.

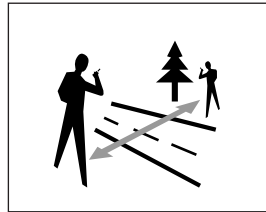

 4. Talking to a neighbor or a friend.

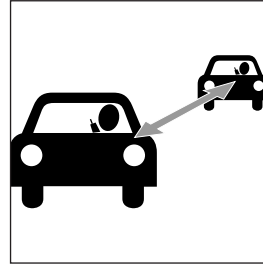

 
5. Checking on traveling companions in another car.

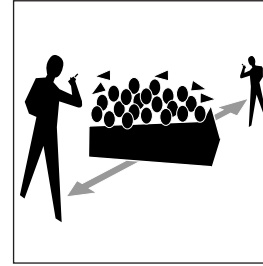


6. Agree on a meeting spot after an event.

### microTALK® SNAP™ Removable Front

 Your microTALK® Radio comes with the new microTALK® SNAP™ removeable front.

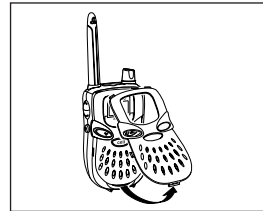

 TO REMOVE: Use the slight indentation between the SNAP™ front and bottom front of the unit to lift it off.

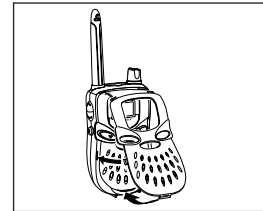

TO ATTACH: First engage the tabs into the top of the unit. Next snap in the middle tabs. Finally snap in the bottom tab.

## microTALK® SNAP™ Removable Front



## External Microphone/ Speaker Jack

 
### Note

External microphone/  
speaker is not included with  
the unit. See page 19 for  
optional accessories.


### External Microphone/Speaker Jack

Your microTALK® 2-Way Radio can be fitted with an external microphone/speaker, freeing your hands for other tasks.

To attach the external microphone/speaker:

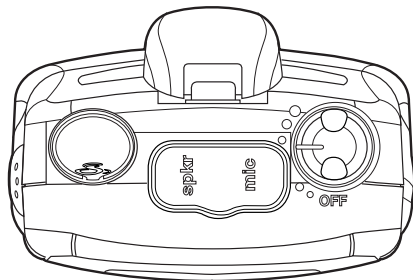

- 1 Open Spkr/Mic tab on top of unit.

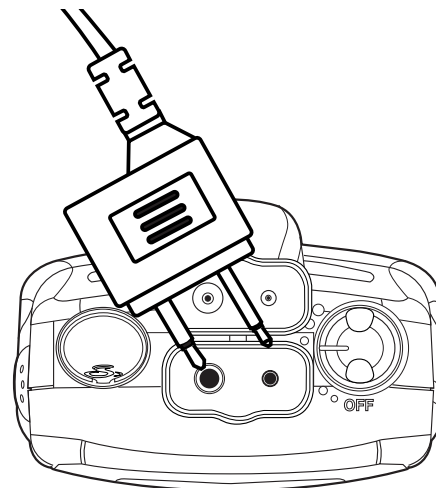 

- 2 Insert plug into the Spkr/Mic jack.

# Caring for Your **microTALK**® Radio

## Caring for Your **microTALK**® Radio

### **Note**

*Modifying or tampering with the radio's internal components can cause malfunction and will invalidate the warranty. If your radio is not performing as it should, please call Cobra® at 773.889.3087. Do not return the unit to the retailer.*

 
### **Caring for Your microTALK® Radio**

The microTALK® 2-Way Radio will give you years of service if cared for properly.

Here are some suggestions:




1. Handle unit gently.

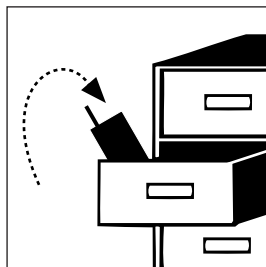

2. Keep away from dust.



 3. Never place the unit in water or in a moist place.

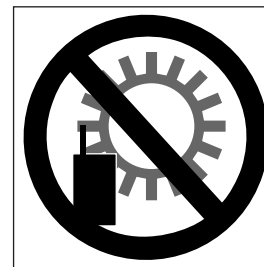

4. Avoid exposure to extreme temperatures.

## I. GENERAL SPECIFICATIONS

### A. FREQUENCIES

#### CHANNEL ASSIGNMENT

CH 1: 462.5625MHz	CH 8: 467.5625MHz
CH 2: 462.5875MHz	CH 9: 467.5875MHz
CH 3: 462.6125MHz	CH 10: 467.6125MHz
CH 4: 462.6375MHz	CH 11: 467.6375MHz
CH 5: 462.6625MHz	CH 12: 467.6625MHz
CH 6: 462.6875MHz	CH 13: 467.6875MHz
CH 7: 462.7125MHz	CH 14: 467.7125MHz

### B. RECEIVER

	UNIT	NOMINAL
1. SENSITIVITY		
FOR 12 DB SINAD	dBm	-119
FOR CALL SIG. DETECTION	dBm	-121
2. MAX. AUDIO OUTPUT @10% THD	mW	150
3. MAX. S/N RATIO @ 1mV RF INPUT	dB	45
4. SQUELCH		
a) SENSITIVITY	dB m	-121
b) ATTACK TIME	mS	150
c) CLOSING TIME	mS	200
5. AUDIO FREQUENCY RESP.		
@ 300 HZ	dB	-3
@ 2500 HZ	dB	-10
6. SIGNAL DISPLACEMENT BW	+/-KHZ	5
7. ADJACENT CH. REJECTION	dB	55
8. INTERMODULATION REJECTION	dB	55
9. SPURIOUS RESPONSE REJECTION	dB	65

## C. TRANSMITTER

	UNIT	NOMINAL
1. EFFECTIVE RADIATED POWER	mW	500
2. CARRIER FREQ. STABILITY	±Hz	500
3. MODULATION LIMITING	KHz	2.5
4. CARRIER ATTACK TIME	mS	30
5. AUDIO FREQUENCY RESPONSE		
@ 300 HZ	dB	-10
@ 2500 HZ	dB	4
6. AUDIO DISTORTION	%	3
7. HUM NOISE	dB	38
8. TRANSIENT FREQ. BEHAVIOR		
a) TX ON	mS	30
b) TX OFF	mS	5

## D. POWER SUPPLY

1. BATTERY LIFE (1:1:18 RATIO)	HR	24
2. BATTERY OPERATING RANGE	V	3.2 - 4.5

# Limited Two Year Warranty

# Optional Accessories



**Cobra® Electronics Corporation**

6500 West Cortland Street  
Chicago, Illinois 60707 USA

**COBRA® ELECTRONICS CORPORATION** warrants that its COBRA® FRS Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.

COBRA® will, without charge, repair or replace, at its option, defective FRS radios, products or component parts upon delivery to the COBRA® factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra®'s expense, if the product is repaired or replaced under warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Exclusions:** This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.

**All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA® shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.**

**Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.**



 
### **Vox Headset Mic**

*VOX (Voice Operated Transmitter) headset and microphone allows hands-free operation.*  
MA-VOX




### **Ear Bud Mic with PTT**

*Compact earbud and microphone with Push-to-Talk switch.*  
MA-EBM

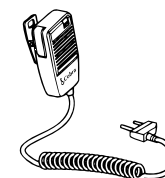


### **Lapel Speaker/Microphone**

 *Remote microphone/speaker with Push-to-Talk switch.*  
MA-SM

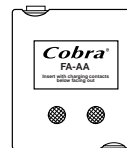

### **NiMH Rechargeable Battery Pack**

 *High performance Nickel Metal Hydride battery pack for multiple charging.*  
FA-AA

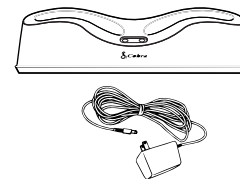

### **2 Port Desktop Charger**

*Charges two NiMH battery packs (FA-AA) or two FRS 225 radios. (Note: appearance may vary)*  
FA-CS



### **Replacement Belt Clip**

FA-BC2

**You Can Find These Fine Accessories At Your Local Cobra® Dealer**

If you wish, you can order directly from Cobra®.

### **Order by phone**

Call 773.889.3087 (Press 1 from the main menu) 8 a.m.-6 p.m. M-F CST.)

### **Order by mail or fax**

Call 773.889.3087 for pricing. Fill out order form on next page, and mail/fax directly to Cobra®.

### **Order over the Web**

[www.cobra.com](http://www.cobra.com)

# Accessory Order Form

## Shipping & Handling

Amount of Order	Shipping/Handling
\$25.00 and under	\$4.75
\$25.01 - \$40.00	\$6.95
\$40.01 - \$80.00	\$9.25
\$80.01 - \$120.00	\$10.25
\$120.01 - \$160.00	\$11.75
\$160.01 and up	\$14.50

For AK, HI and PR please add an additional \$15.00 for UPS shipments.

Item #	Description	Cost Ea.	Qty.	Amount
MA-VOX	Vox Headset Mic			
MA-EBM	Ear Bud Mic with PTT			
MA-SM	Lapel Speaker/ Microphone			
FA-AA	NiMH Rechargeable Battery Pack			
FA-CS	2 Port Desktop Charger			
FA-BC2	Replacement Belt Clip			

Prices subject to change without notice.

### Tax Table

Illinois residents add 8.75%  
Indiana residents add 5%  
Michigan residents add 6%  
Ohio residents add 5%  
Wisconsin residents add 5%

Subtotal \_\_\_\_\_  
(Tax if applicable) \_\_\_\_\_  
Shipping/handling \_\_\_\_\_  
**Total** \_\_\_\_\_

For credit card orders fill out order form and fax to: 773.622.2269 or call 773.889.3087 (Press 1 from the main menu) 8:00 am - 6:00 pm, M-F, CST.

Make check or money order (no stamps) payable to:  
Cobra® Electronics  
Attn: Accessories Dept.  
6500 West Cortland Street  
Chicago, IL 60707 USA

Please print clearly

Name \_\_\_\_\_

Address (No P.O. Box) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_

Zip \_\_\_\_\_ Telephone (\_\_\_\_) \_\_\_\_\_

Credit Card No. \_\_\_\_\_

Exp. Date \_\_\_\_\_

Customer Signature \_\_\_\_\_

Circle One: Visa    MasterCard    Discover

Allow 2-3 weeks for delivery. Offer valid in Continental U.S. only.



Cobra® Electronics Corporation  
6500 West Cortland Street  
Chicago, IL 60707 USA

The Cobra® line of quality products also includes:

- Citizens Band Radios
- microTALK® Radios
- Radar/Laser Detectors
- GPS
- SafetyAlert® Traffic Warning Systems
- Accessories
- HighGear™ Accessories

**Nothing comes close to a Cobra™**

### If You Think You Need Service

*For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra® products.*

**(773) 889-3087**

*24 hours a day, 7 days a week.*

*A Consumer Service Representative can be reached through this same number  
8:00 am - 6:00 pm, Monday through Friday, CST.*

*Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section at  
[www.cobra.com](http://www.cobra.com) or by e-mail to [productinfo@cobra.com](mailto:productinfo@cobra.com)*

***If you think you need service call 773.889.3087***

***"If your product should require factory service please call Cobra® first before sending your unit in. This will ensure the fastest turn-around time on your repair."***

You may be asked to send your unit to the Cobra® factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon of a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly printed name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail to avoid loss in transit to: Cobra® Factory Service, Cobra® Electronics Corporation, 6500 West Cortland Street, Chicago, IL 60707 USA.
6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 773.889.3087 for assistance.

© 2002 Cobra® Electronics Corporation  
Printed in China.

Part No. 480-004-P

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>