

CODE ALARM Model CATX110
Our Code is Excellence™ Programming Guide

The keychain transmitters included with the system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system.

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step.

When the 15 second time limit is allowed to expire, the system will automatically terminate the programming mode. This is indicated by a long chirp from the siren.

Additionally, the system will store codes from up to 4 different transmitters. If a 5th transmitter is programmed to any receiver channel, then the first transmitter programmed to that channel will be erased from the system's memory.

To program new or additional transmitters, the alarm must be disarmed and the valet switch must be in the OFF position:


1. Enter the vehicle, and turn the ignition key to the ON position.
2. Flip the valet switch ON then OFF 3 times
3. The dash LED will flash one time, and the sounding device will beep one time, indication the system is ready to accept programming for receiver channel 1.
4. Press and hold the Arm/Disarm Icon button until the sounding device emits a long beep, indicating the signal has been stored into memory.
5. If you have additional transmitters (up to 4) that need to be programmed, repeat step 4 for each transmitter.

CODE ALARM Model CATX110
Our Code is Excellence™ Programming Guide

Changing the Remote Control Battery

The 12-volt alkaline battery supplied in your remote transmitter should last approximately one year, depending on usage. When the battery begins to weaken, you will notice a decrease in range, or the distance from your vehicle that your remote transmitter will operate. Follow the instructions below to change the remote transmitter battery.

1. Insert the edge of a coin into the slot at the side of the remote control. Twist the coin to pry the remote control halves apart.
2. Remove the old battery and replace with a new one. Be sure to observe the (+) and (-) signs in the battery compartment.
3. Carefully snap the case halves back together, then test the remote control.

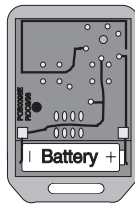

For Customer Service and Product information Call
1-800-421-3209

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>