

The keychain transmitters included with the system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system.

The system will store codes from up to 4 different transmitters. If a 5<sup>th</sup> transmitter is programmed to the system, then the first transmitter programmed to the system will be erased from the system's memory.


To program new or additional transmitters:

1. Enter the vehicle, and turn the ignition switch to the ON position.
2. Press and release the programming button switch 3 times.
3. The dash mounted LED will flash 1 time, and the parking lights will flash 1 time, indicating that the system is ready to accept programming of channel 1 which is LOCK.
4. Press and hold the lock icon button of the transmitter you wish to program for 4 seconds or until a long flash from the parking lights.
  - 4a. Repeat step 4 for any additional transmitter you wish to program.
5. Press and release the programming button switch 1 time to advance to channel 2. The parking lights will flash 2 times and the dash mounted LED will flash 2 times, indicating that the system is ready to accept programming for channel 2 which is UNLOCK.
6. Press and hold the unlock icon button of the transmitter you wish to program for 4 seconds or until a long flash from the parking lights.
  - 6a. Repeat step 6 for any additional transmitter you wish to program.
7. Press and release the programming button switch 1 time to advance to channel 3. The parking lights will flash 3 times and the dash mounted LED will flash 3 times, indicating that the system is ready to accept programming for channel 3 which is REMOTE START.
8. Press and hold both buttons simultaneously of the transmitter you wish to program for 4 seconds or until a long flash from the parking lights.
  - 8a. Repeat step 8 for any additional transmitter you wish to program.

***Changing the Remote Control Battery***

The 12-volt alkaline battery supplied in your remote transmitter should last approximately one year, depending on usage. When the battery begins to weaken, you will notice a decrease in range, or the distance from your vehicle that your remote transmitter will operate. Follow the instructions below to change the remote transmitter battery.

1. Insert the edge of a coin into the slot at the side of the remote control. Twist the coin to pry the remote control halves apart.
2. Remove the old battery and replace with a new one. Be sure to observe the (+) and (-) signs in the battery compartment.
3. Carefully snap the case halves back together, then test the remote control.

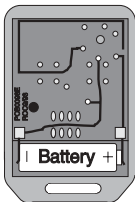

For Customer Service and Product information Call  
1-800-421-3209

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>