

CODE ALARM Model CATX1WAY Our Code is Excellence™ Programming Guide

The keychain transmitters included with the system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system.

The system will store codes from up to 8 different transmitters. If a 9th transmitter is programmed to the system, then the first transmitter programmed to the system will be erased from the system's memory.

To program new or additional transmitters, the alarm must be disarmed and out of valet mode:

1. Open the drivers door (verify that the vehicle's interior light turns on).
2. Turn the ignition key to the ON or RUN position.
3. Press and hold the emergency override button
 - 3a. After 10 seconds the horn will honk three (3) times. This indicates that the system has entered transmitter programming mode.
4. Release the emergency override button.
5. Press the LOCK icon button on the remote transmitter to be programmed.
 - 5a. The horn/siren will sound 1 time, indicating that the system has "learned" that remote transmitter.
6. Repeat step 5 for any additional remote transmitters.

Deleting Lost or Stolen Remote Controls from Your System


If one of your remote controls is lost or stolen, follow these instructions IMMEDIATELY to remove the control code from your system.

1. Have all remaining remote controls available.
2. Enter the control programming mode by following steps 1 - 5 of ***Adding Remote Controls to Your System***.
 - 3a. **If you have only one remaining remote control**, press the LOCK button on that remote control **four (4) times**, pausing at least 1 second in between each press. The horn must "honk" each time you press the LOCK button.
 - 3b. **If you have two remaining remote controls**, press the LOCK button on each remote control **two (2) times**, pausing at least 1 second in between each press. The horn must "honk" each time you press the LOCK button.
 - 3c. **If you have three remaining remote controls**, press the LOCK button on two of the remote controls **one (1) time**, then press the LOCK button on the remaining remote control **twice**. Pause at least 1 second in between each press. The horn must "honk" each time you press the LOCK button.
4. Turn the vehicle ignition off to exit the programming mode. When you are finished, the lost or stolen remote control will no longer operate your system.

Changing the Remote Control Battery

The 12-volt alkaline battery supplied in your remote transmitter should last approximately one year, depending on usage. When the battery begins to weaken, you will notice a decrease in range, or the distance from your vehicle that your remote transmitter will operate. Follow the instructions below to change the remote transmitter battery.

1. Insert the edge of a coin into the slot at the side of the remote control. Twist the coin to pry the remote control halves apart.
2. Remove the old battery and replace with a new one. Be sure to observe the (+) and (-) signs in the battery compartment.
3. Carefully snap the case halves back together, then test the remote control.

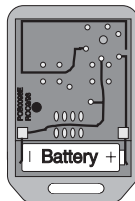

For Customer Service and Product information Call
1-800-421-3209

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>