

## Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

**⚠ WARNING: Keep clear of overhead power lines.**


- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

## Parts and Components

Description	Part Number
Main Poles, Red (2)	5010000521
Cross Poles, Silver (2)	5010000523
Vestibule Poles, Gold (2)	5010000522
Rainfly, Orange	5010000525

## To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the doors facing the desired direction. (Fig. 1)
2. Stretch corners of tent until floor is taut then hammer stakes through loops on web straps to secure. (Fig. 1A)
3. Assemble two red main poles and two silver cross poles by interlocking the shock-corded poles.
4. Insert red main poles through sleeves with red trim in top of tent forming an "X" as shown. (Fig. 1)
5. Insert silver cross poles through sleeves with silver trim in top of tent. **NOTE:** Make sure the silver poles pass through the cutouts in the red trimmed sleeves and under the red main poles. (Fig. 1 & 1B)

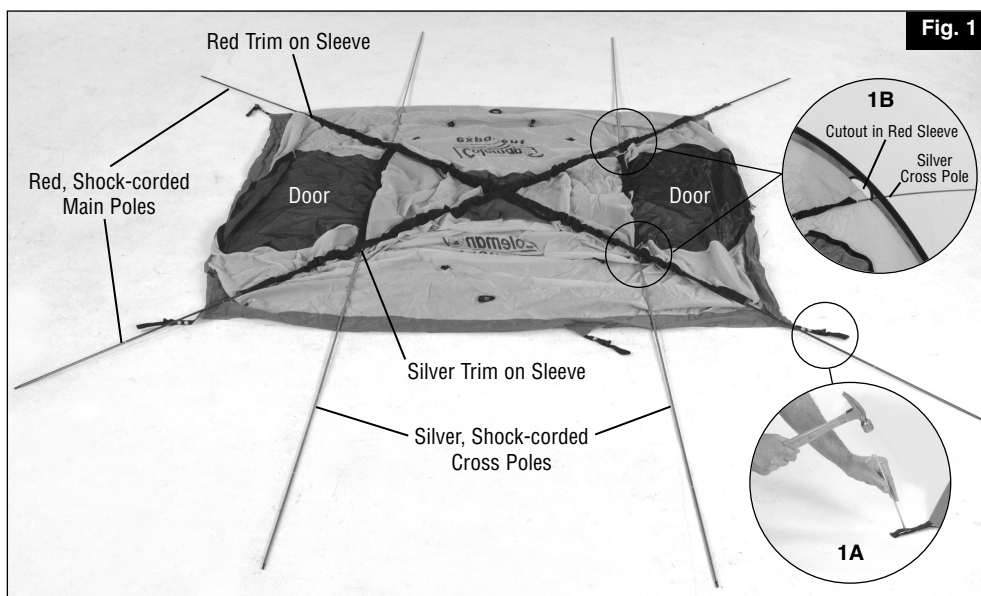

6. Insert one end of red main pole into first grommet in web straps at front corner of tent. (Fig. 2 & 2A)
7. Go to opposite end of red main pole and gradually apply pressure to the pole forming an arch. Insert the end of pole into first grommet at the back corner of tent. (Fig. 2 & 2A)
8. Repeat for second red main pole.
9. Insert one end of silver cross pole into grommet in web strap at side of tent. (Fig. 2 & 2B)
10. Go to opposite end of silver cross pole and gradually apply pressure to the pole forming an arch. Insert the end of pole into the grommet at other side of tent. (Fig. 2)
11. Repeat for second silver cross pole forming an "X". (Fig. 2)



12. Attach frame clips along edges of tent to red and silver poles. (Fig. 2 & 2B)
13. Clip plastic hooks, located on both sides of tent, to secure silver cross poles together as shown. (Fig. 2 & 2C)
14. Stretch sides of tent until floor is taut then hammer stakes through loops on web straps to secure.

(continued on other side)

## To Attach Rainfly

1. Assemble the two gold, interlocking, shock-corded vestibule poles.
2. Unfold rainfly. Locate the hook & loop fasteners on the underside of rainfly.
3. Turn rainfly over and drape over tent frame, with zipper on vestibule lining up over front and back doors.  
**NOTE:** When positioned properly, seams on rainfly will always align with poles on tent.
4. Attach hook & loop fasteners, located on seams of the underside of rainfly, around the red main poles and silver cross poles. This step is important and will secure the rainfly to the frame. (Fig. 3A)
5. Fold back rainfly above front door, locate sleeve on underside of rainfly; then insert gold vestibule pole. (Fig. 3B)
6. Insert one end of gold vestibule pole into second grommet in web strap at front corner of tent. (Fig. 3 & 3C)
7. Go to opposite end of gold vestibule pole and gradually apply pressure to the pole forming an arch. Insert the end of pole into second grommet at the opposite corner of tent. (Fig. 3 & 3C)
8. Repeat steps 5, 6, & 7 for second gold vestibule pole at back of tent.
9. Connect four rainfly clips on each side of tent to pole stake loops. (Fig. 3 & 3D)
10. Stretch rainfly vestibule taut then drive in stakes to secure.
11. Stretch guylines until taut, then secure with stakes. (Fig. 3E)



## To Store

1. All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
4. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
5. Store in a clean, dry area.

## Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

### **⚠ WARNING: Keep all flame and heat sources away from this tent fabric.**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman®, Coleman®, and exponent® are registered trademarks of The Coleman Company, Inc.  
Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>