

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components


Description	Part Number
Main Poles, Long, Black (3)	5010000367
Rainfly Awning Pole, Thin, Black (1)	5010000368
Rainfly Ridge Pole, Black w/Rubber Tips (1)	5010000369
Rainfly	5010000420

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. (Fig. 1)
2. Assemble three main tent poles by interlocking longer, black shock-corded, poles.
3. Insert three, long, black poles through sleeves in top of tent as shown. (Fig. 1)

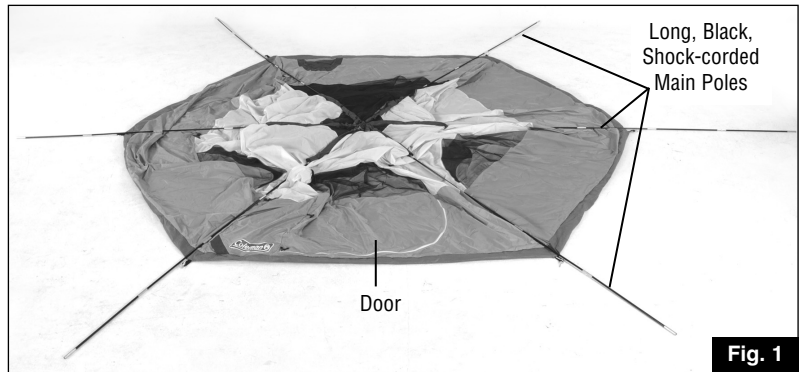


4. Insert one end of each black pole into pins in front corners and side of tent. (Fig. 2)
5. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the corners and side of tent. (Fig. 3)
6. Attach frame clips along edges and sides of tent to black main poles. (Fig. 3A)
7. Stretch corners and sides of tent until floor is taut then hammer stakes through loops to secure. (Fig. 3B)

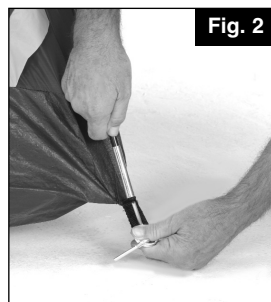

To Attach Rainfly

1. Assemble the shock-corded, long, rainfly awning pole and the rainfly ridge pole with rubber tips.
2. Unfold rainfly. Locate the sleeve, along front edge, and the web pockets, on both sides of the underside of rainfly
3. Slide the long rainfly awning pole through sleeve under front edge of rainfly. (Fig. 4)
4. Insert rubber-tipped ends of rainfly ridge pole into web pockets located on both sides of underside of the rainfly. (Fig. 4A)
5. Drape rainfly over tent with awning pole centered over the door on the front of tent (Fig 4).
6. Secure hook and loop fasteners, located above rainfly ridge pole on underside of rainfly, around the ridge pole. (Fig. 4B)

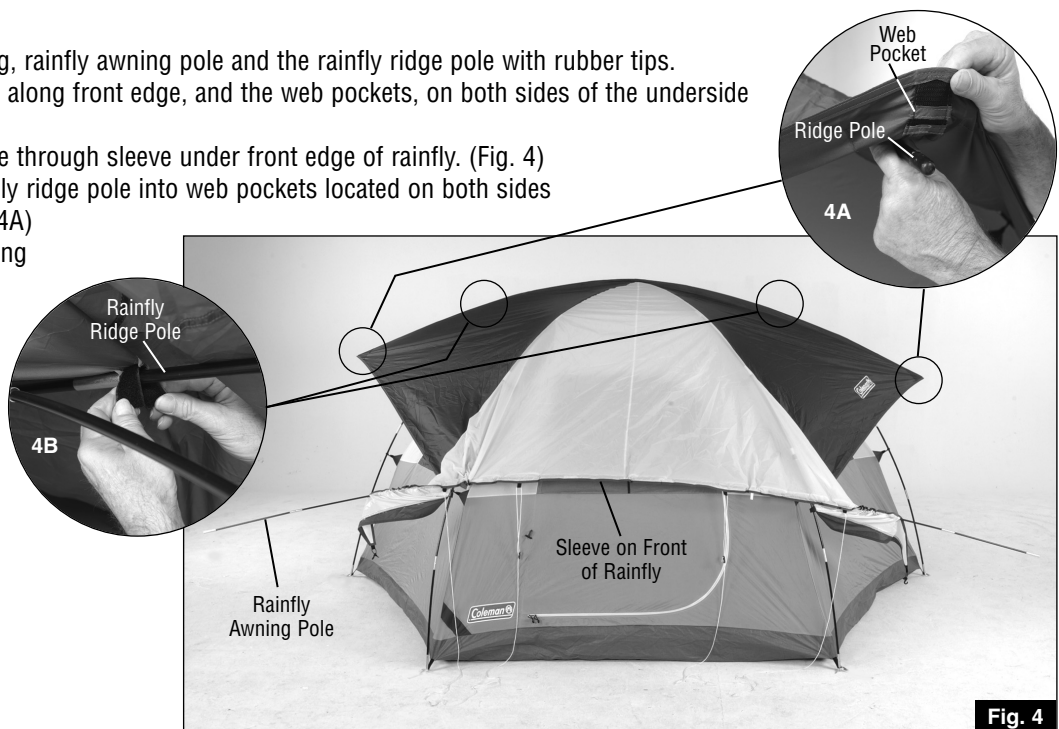

(continued on other side)

To Attach Rainfly continued

7. Insert one end of each black rainfly awning pole into remaining pin in front corner of tent (Fig. 5A). Gradually apply pressure to other end of pole to form an arch & insert into other front pin. (Fig. 5)
8. Tie guylines through loops on web straps on the rainfly. (Fig. 5B)
9. Stretch guylines until taut, then secure with stakes. (Fig. 5C)



Cooler Access

The smaller zippered opening at the rear of the tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a vent, unzip flap to expose screen. (Fig.6)
2. To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig.7)



Fig. 6



Fig. 7

Electrical Cord Access

1. Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 8)

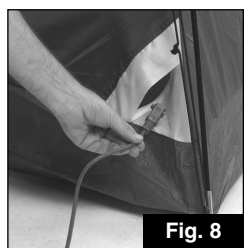


Fig. 8

To Store

1. All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
4. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
5. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.


This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman® and  are registered trademarks of The Coleman Company, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>