


Things you should know:

- The blue covering is a protective film to help prevent scratches during manufacture and shipment.
- Do not clean the plastic top and shiny aluminum surfaces with abrasive cleansers. Use only mild soapy solutions or window cleaners.

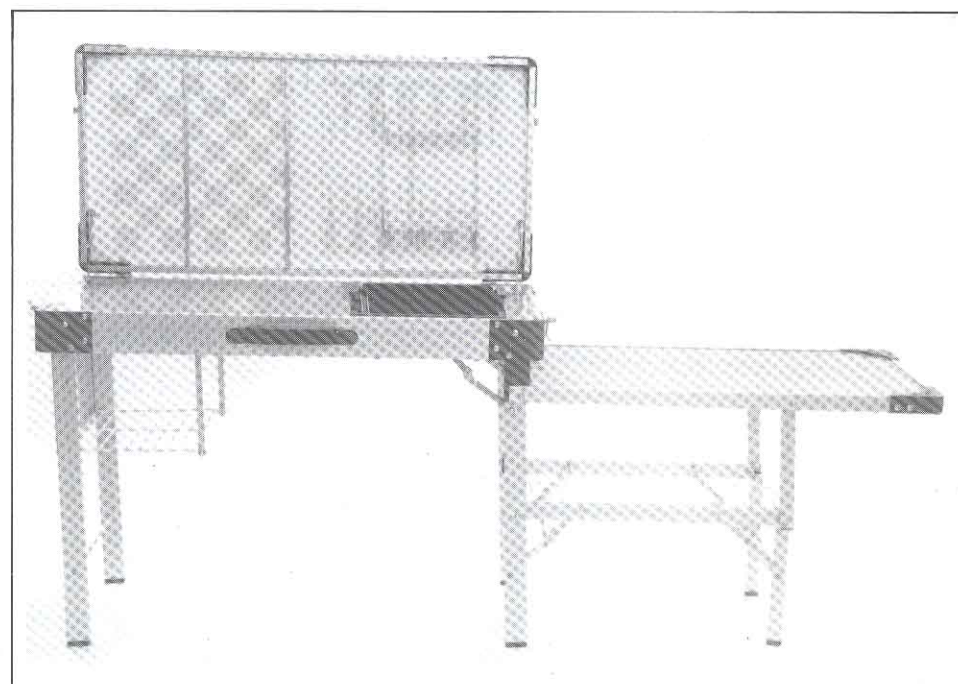

Camp Kitchen



The Coleman Company, Inc.

3600 N. Hydraulic

Wichita, Kansas 67219

1-800-835-3278 TDD: 316-832-8707

www.coleman.com

© 1999 The Coleman Company, Inc. All Rights Reserved


Model No. 2142-700

Warning:


Follow instructions and warnings to avoid personal injury or damage to product.

- Always lock legs into position and use the Coleman® kitchen on a firm, level surface.
- Never stand on this product.
- Close and latch the top in windy conditions to help prevent tip over.
- Do not operate hot appliances near the plastic top or corner pieces.
- Keep children a safe distance from the Coleman® kitchen at all times unless under proper adult supervision.


1 • Unlatch side table

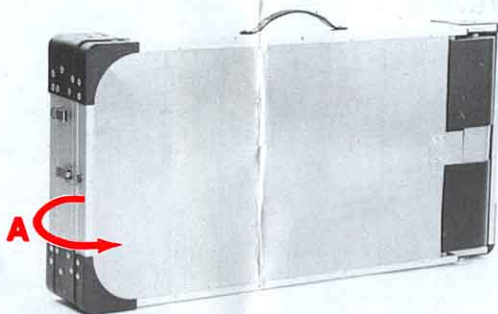


2 • Open side table fully

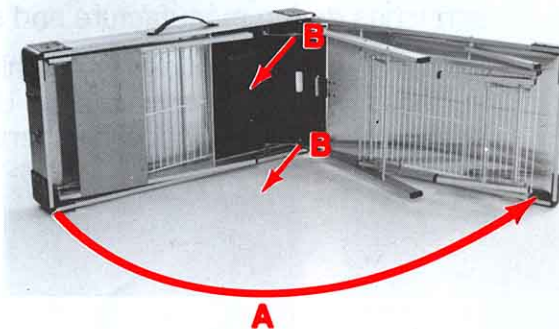


3 • Open and lock all right side legs

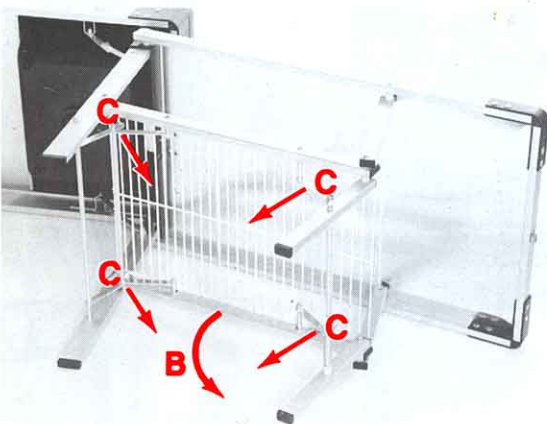

4 • Open and lock left legs

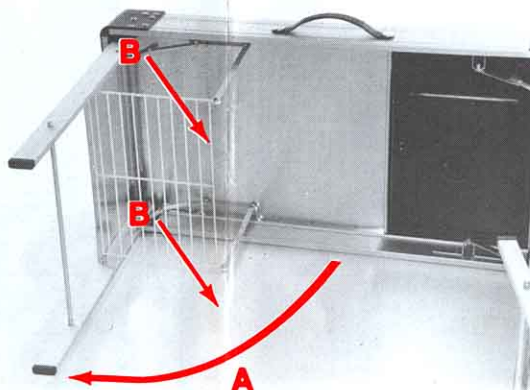


5 • Stand table up and unlatch top

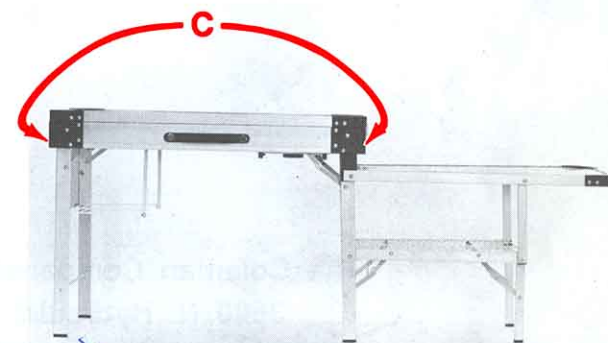


6 • Open and lock top



7 • Locate and lock hose attachment to underside of sink

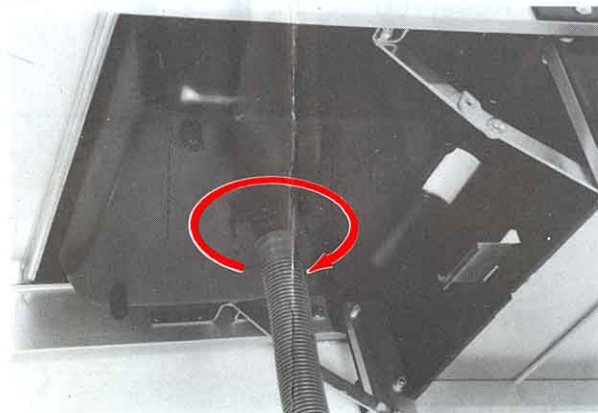

8 • Table is ready for use

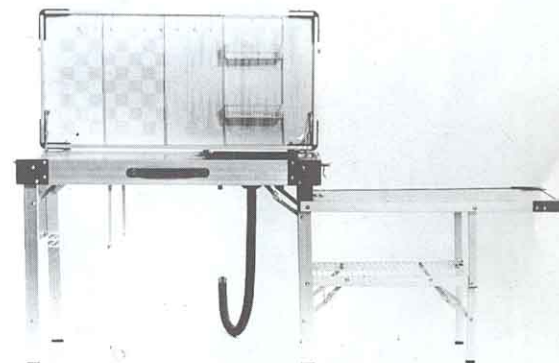

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>