



exponent™

Helios™ X2

part number 2000000435

POLE ASSEMBLY PARTS

Main Tent Poles (Silver)

Part No. 9830-1201

Side Poles (Red)


Part No. 9830-1301

Rainfly

Part No. 9830-1401


1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with doors facing desired direction. Unzip doors. (illus. 1)
- For best results in windy conditions, position door or back of tent into the wind.
- Stake down tent corners. Keep the floor taut. (illus. 2)
- Assemble Frame Poles by interlocking the shock-corded sections. This will make two long red Main Tent Poles and two long silver Side Poles.
- Insert the two Main Tent Poles through the poles sleeves with the red trim.
- Insert the silver Side Poles through the pole sleeves with the silver trim.

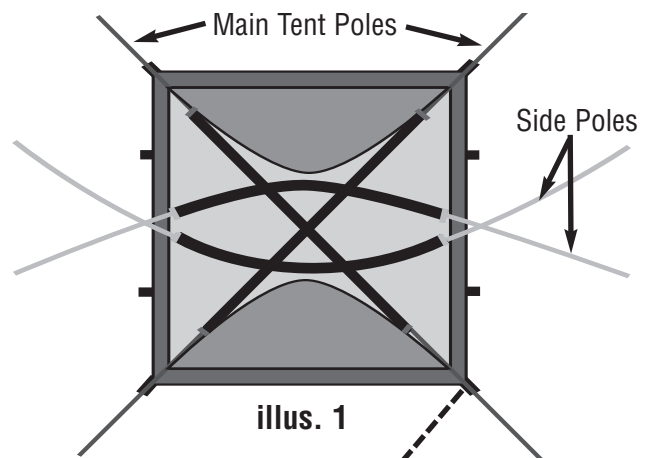

illus. 1

illus. 2
Tent stake through Loop

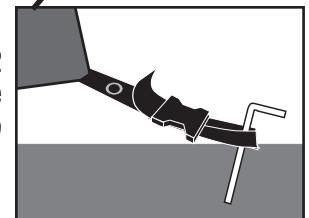

2 Assemble Frame


- Insert one end of the Main Tent Pole tips into the grommet on webbing located at the corner of the tent. (illus. 3), (illus. 4)
- Go to opposite end of the Main Tent Poles and gradually apply pressure to the pole, forming an arch, until you are able to insert the pole tip into the grommet on the corner web. (illus. 4)
- Repeat for second pole.
- Insert one end of Side Pole into grommet on the webbing at the side of tent and go to opposite end of the Side Pole and gradually apply pressure to the pole, forming an arch, until you are able to insert the pole tip into the grommet. (illus. 4)
- Repeat for second pole.

Main Tent Poles

Side Poles



illus. 4
Tent frame up


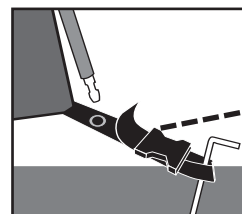


illus. 3
Insert Pole Talon on stake loop into pole.

3 Attach Rainfly

- Drape Rainfly over tent frame, with rainfly double zipper door lining up over tent front door. (illus. 5)
- Connect the six clips to the clips located at the corners and sides of the tent. (illus. 6 & illus. 7)
- Stake out rainfly doors, keep rainfly taut. (illus. 7)
- Attach Guy Lines to Guy Wings on the sides of the Rainfly and stake out (illus.7).

illus. 5
Rainfly

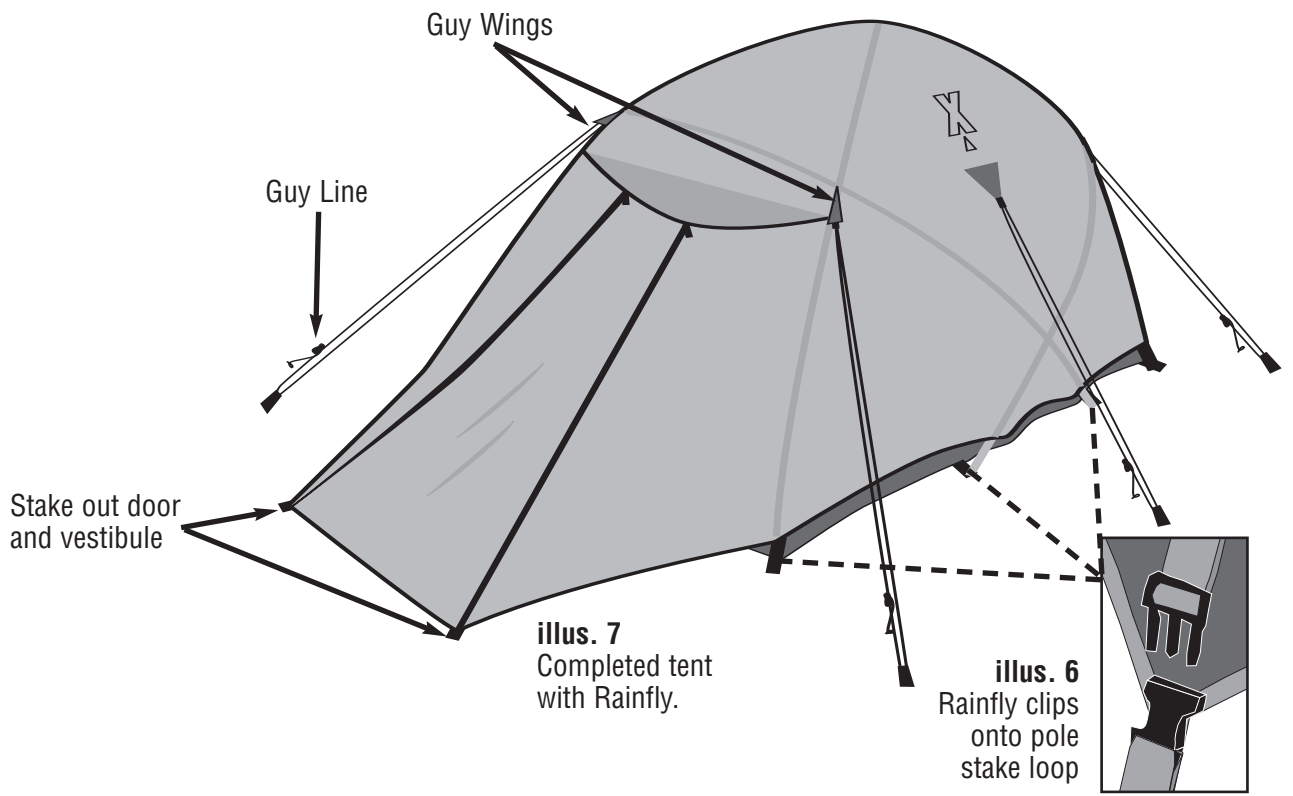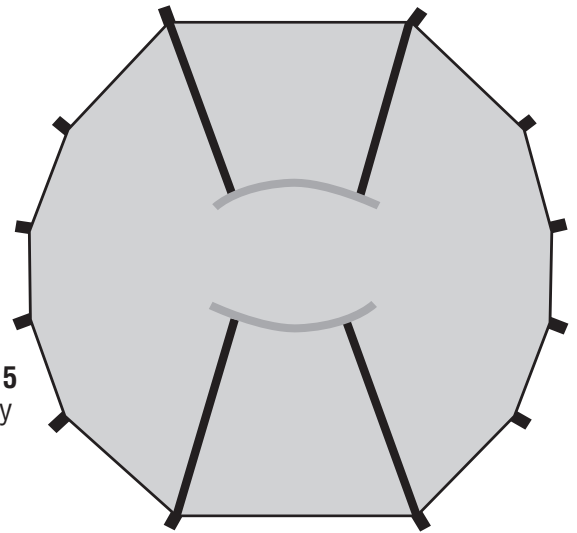

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.



exponent™

3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>