

## Before you begin

Read all instructions before set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

### ⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

## Pole Descriptions


Description	Qty.	Pole Dia.	Pole Repair Kit	Pole Replacement Kit
Main Poles, long, black	2	8.5mm	5010000541	5010000547
Ridge Pole w/rubber tips, black	1	8.5mm	5010000541	5010000547

## To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. (Fig. 1)
2. Assemble two main tent poles by interlocking the longer, black shock-corded, poles.
3. Insert both, long, black poles through sleeves in top of tent as shown. (Fig. 1)

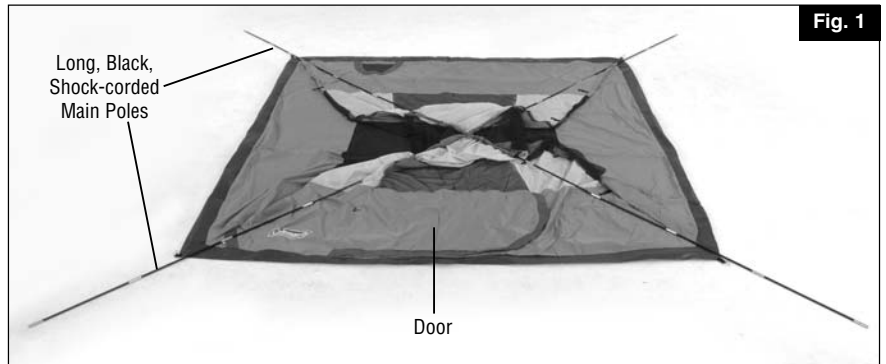



4. Insert one end of each black pole into pins in front corners of tent. (Fig. 2)
5. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the corners of tent. (Fig. 3)
6. Attach frame clips along edges of tent to black main poles. (Fig. 3A)
7. Stretch corners and sides of tent until floor is taut then hammer stakes through loops to secure. (Fig. 3B)

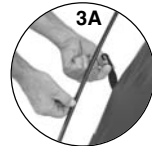

STITCH LINE

## To Attach Rainfly

1. Assemble the black interlocking shock-corded ridge pole with rubber tips.
2. Unfold rainfly. Locate the web pockets on front and back of rainfly, and the hook & loop fasteners on the underside of rainfly.
3. Insert rubber-tipped ends of ridge pole into web pockets located on both sides of underside of the rainfly. (Fig. 4)
4. Locate hook & loop fasteners on the rainfly and wrap around black ridge pole to secure. (Fig. 4A)

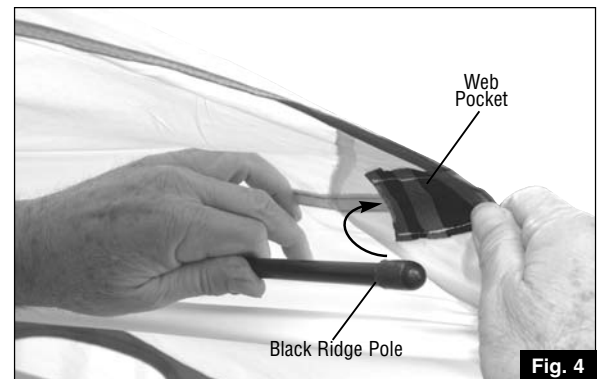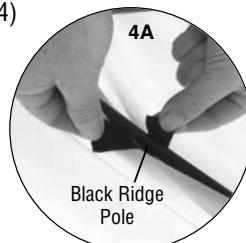

(continued on other side)

## To Attach Rainfly continued



- Turn rainfly over and drape over tent making sure ridge pole is centered over the door. (Fig. 5)  
**NOTE:** When positioned properly, seams on rainfly will always align with poles on tent.
- Attach hook & loop fasteners, located on seams of the underside of rainfly, around the black main poles, to secure. (Fig. 5A)
- Clip hooks on elastic cords, on the front and back corners of rainfly, onto metal loops at front and back corners of tent. (Fig. 5B)
- Tie guylines through loops on web straps on the rainfly. (Fig. 5C)
- Stretch guylines until taut, then secure with stakes. (Fig. 5D)



## Cooler Access

The smaller zippered opening at the rear of the tent is designed for added ventilation and easy access to your beverage cooler.

- To use as a vent, unzip flap to expose screen. (Fig. 6)
- To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig. 7)

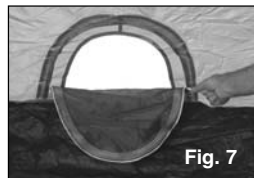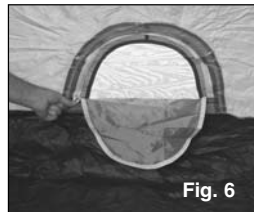

## Electrical Cord Access

- Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 8)



## To Store

- All poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
- Make sure tent is clean and dry before placing in carry case.
- Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
- Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
- Store in a clean, dry area.

## Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

### **⚠ WARNING: Keep all flame and heat sources away from this tent fabric.**



This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2008 The Coleman Company, Inc.

Coleman®, , , and Sundome® are registered trademarks of The Coleman Company, Inc.

4010004007 (20081112)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>