



## USER'S GUIDE

### ATTENTION

- Never try to open the case or remove its back cover, except for battery change.
- Do not operate buttons underwater.
- Should moisture appear inside the watch, have it checked immediately by your dealer. Moisture can cause erosion of the metal parts of the watch.
- The watch is designed to withstand normal use. Avoid dropping or otherwise abusing the watch.
- Avoid exposing the watch to extreme temperatures.
- Wipe the watch with dry, soft cloth only. Avoid direct contact with chemicals that can cause deterioration of the plastic parts of the watch.
- Avoid wearing the watch in close proximity to strong magnetic field or static charge.

### BUTTONS


■ Button operations are indicated using the letters as shown in the illustration:



- "A" - EL Backlight
- "B" - Mode
- "C" - Reset
- "D" - Start
- "E" - Watch crown

### DIGITAL DISPLAY

■ The screen shown in display layout:

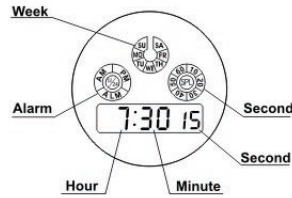

### BACKLIGHT

■ EL (electro-luminescent) backlight provides a glow for easy reading in the dark.

#### To Use EL Backlight

■ In the normal mode, press "A" to illuminate the display, light stays on for about 3 seconds.



### MODE SELECTION

■ Press "B" to change modes in the following sequence:

1. Normal Mode



2. Chronograph Mode



3. Alarm Mode



4. Real Time Setting Mode



Back to the normal mode.

### STOPWATCH

#### Lap Time

1. To use stopwatch mode, Press "B".



2. Press "D" to start.



3. Press "D" to stop.



4. To reset timer to zero, press "C".



5. To exit stopwatch mode, press "B".

#### Split Time

1. Once in stopwatch mode, press "D" to start.



2. Press "C" to display the split time, stopwatch timing continues internally.



3. Press "C" to clear the split time and to continue stopwatch time measurement.



4. Repeat steps 2 and 3 to measure the multi-split time.

5. Press "D" to stop.

REF AD32387-CR-EN

**ALARM SETTING**

- To enter alarm mode, press "B" two times.
- Press "C" to select the "Hour" or "Minutes".
- Press "D" to adjust desired time.
- Press "B" to exit alarm mode.

**Snooze Setting**

- While the alarm sounds, press "C" key to stop the alarm;
- Press "D" key to activate snooze. It will sound again in 5 minutes, and stop after a minute.

**REAL TIME SETTING**

- To enter time setting mode. Press "B" three times until the seconds flash.
- Press "D" to reset to zero.
- Press "C" to select the "Hour", "Minutes", "Seconds", "Date", "Month" and "Day".
- Press "D" to adjust desired time.
- Press "B" to exit time setting mode.

**Select 12/24 H Format**

- Go to the adjust "Hour" step of "REAL TIME SETTING" (Step 2 above).
- The following steps may change depending on the hour that the watch is currently set on. When A is displayed indicating AM, press "D" to scroll through numbers 1-12. The display will change to P for PM.
- Press "D" to scroll through numbers 1-12. The display will change to H for 24 hour mode.
- Press "D" to scroll through numbers 1-24. The display will return to A for AM, in 12 hour mode.
- Press "B" at any time to set the desired hour, then continue through time setting steps for Day and Month.

**HOURLY CHIME SETTING**

■ In normal mode:

Press and hold "C", then press "B" to turn the hourly chime "ON" or "OFF".

Chime is "ON" when the day of the week display is lit.

Chime is "OFF" when the day of the week display is not lit.

**ANALOG TIME SETTING**

PULL crown out until it "Clicks".  
TURN crown to adjust time as required.  
PUSH crown back into place to restart watch.

**BATTERY CHANGE**

The analog and digital features of this watch function independently of each other. Periodic adjustment of analog/digital time may be necessary to keep the two in-synch.

The digital and analog features of this watch are operated by separate batteries.

- For digital battery replacement, remove case back, and remove the 3V Lithium Battery (CR2016). Battery type required: CR2016
- For analog battery replacement, first lift the 3V Lithium Battery, and you will see the silver oxide battery (SR626SW) underneath. Battery type required: SR626SW

**TWO YEAR LIMITED WARRANTY**

The inner components of this watch are warranted to be free from defects in materials and manufacturer's workmanship for two years from the original date of purchase. Receipt required for proof of purchase date. This warranty does not apply to normal wear and tear or abuse, and excludes the battery, crystal, strap or bracelet. It does not cover costs, parts, labor, defects or damage caused by any source other than Golden State International. Warranty will be void if there is evidence that the case back has been tampered with. Within this warranty period, if you return your watch due to a manufacturer's defect, there are no shipping and handling charges. If the warranty period has expired, shipping and repair charges will apply. The prices of these charges may vary. Please contact the manufacturer for more detailed information.

**Water Resistance-** Exposure to moisture may result in rust and failure of the metal and/or mechanical portions of the watch. Only watches with the words "Water Resistant" engraved on their backs may be safely submerged in water. 30M marking is OK for showering, washing, etc. 50M marking is OK for swimming and bathing. The watch will remain water resistant only as long as the crown and case remain intact. Changing your watch battery may alter the water resistance of the watch unless done by an experienced watchmaker or jeweler.

Any implied warranties are also limited to two years from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In the event of a defect or malfunction outside of the two-year period, the watch will be repaired or replaced at our discretion. Please note that GSI reserves the right to substitute a watch of equal or greater value and similar appearance to the returned watch on both in-warranty and out-of-warranty returns/repairs.

Golden State International shall not be liable for any incidental, economic or consequential damages arising from the failure or malfunction of this watch. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**RETURN INFORMATION**

For any returns or repairs, carefully pack the watch and/or any parts that need to be replaced or repaired. Include your name, address, phone number and reason for return. Send insured, with payment - check or money order only (if applicable):

Watches purchased in the United States:

Golden State International  
PO Box 31088  
Oakland, CA 94604

Watches purchased in Canada:

Golden State International  
PO Box 104, Malton CSC  
Mississauga, ON L4T 3B5

For the most expedient service we recommend that you send the watch/parts to the above addresses rather than returning to the retailer where it was originally purchased. Any other warranty given by the retailer is the responsibility of the retailer. The terms of this warranty cannot be changed by any person.

If you have any questions regarding your watch, please call Customer Service at 1-800-799-6446 or 1-888-474-0005. You can also refer to our website at [www.gsi-usa.com](http://www.gsi-usa.com) to view and download instructions and/or warranty/repair information for your watch.

© 2010 The Coleman Company, Inc.  
Coleman, COLEMAN and Coleman are registered trademarks of The Coleman Company, Inc. used under license.

Manufactured for Golden State International  
Print in China

REF-AD32397-CR-EN

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>