

result in corrosion of the inner blades. cutter after each use. Failure to do this may must thoroughly clean and air-dry the foil and the cutter, women who use underarm deodorant 5. To prevent possible damage to the foils and submerged the entire unit in water.

4. Rinse the shaver head only, do not seals.

as they can cause damage to the waterproof Do not use hot water, sea water, or cleaners, the hair can get into the holes of the foil

3. When cleaning, use cold or warm water. **Immediately,**

Also a damaged foil may cause skin

foil will produce poor shaving results,

foils, or drop foils. A warped or distorted pieces. Do not press hard against the

2. The foils are thin and precisely finished

or arm before using the shaver.

a skin allergy, should test one section of the leg

or easily irritated by shaving, or who suffer from 1. Women whose skin is sensitive to cosmetics batteries are dead, remove or replace the shaver for a long period of time or if the

batteries from the unit.

shaver. If you are not going to use your

using longer lasting alkaline batteries in your AAA batteries (not included). We recommend a clean, close, smooth shave. It requires 2

This shaver has been engineered to give you pushing in and down toward the bottom of the

shaver.

1. Remove the battery compartment cover by

operating instructions

FOR HOUSEHOLD USE ONLY



3. Enjuague las cuchillas internas y las hojas bajo agua corriente. No utilice agua caliente. Utilice agua fría o tibia solamente.
4. Permita que las cuchillas y las hojas sequen al aire antes de volver a ensamblar el cabezal. Una vez seco, vuelva a instalar el cabezal, presionando hasta que encaje en su lugar. Limpie el cuerpo del aparato con una toalla seca. No seque las hojas. Permita que sequen al aire.

time.
1. Replace all batteries of a set at the same intended use.
10. Always purchase the correct size and grade of battery most suitable for the

9. Remove used batteries promptly.

8. Clean the battery contacts and also those of the device prior to battery installation.

be patient; use your shaver 10 to 12 times

pressing too hard makes the hair flat. Please the hair can get into the holes of the foil

satisfactory shave. You must press gently so push too hard and therefore not get a

the shaver. Caution: Most blade users will

and for you to learn how the effectively use

skin and hair to adjust to the new procedure

However, this is normal. It takes time for you might not be as close as you expect.

adjust to the shaver. At first, your shave

weeks so that your legs and underarms

Use your shaver exclusively for three to four

batteries (not included). We recommend 2

AAA batteries (not included). We recommend 2

operating instructions

7. Después de terminar, apague el aparato (OFF).
Importante: Necesitará hacer varios intentos hasta encontrar la mejor forma de afeitar sus piernas/ingles.



CÓMO AFEITAR SU AXILAS

1. Prepare la piel para el tipo de afeitado deseado, con agua o en seco. Asegúrese de que la piel esté limpia, seca y libre de desodorante.
2. Encienda el aparato.
3. Alce el brazo para estirar ligeramente la piel.
4. Si el vello es largo, acórtelo con la cuchilla recortadora integrada, pasando la máquina en dirección contraria al crecimiento del vello.
5. Mantenga el aparato en contacto con la piel y aféitese con movimientos suaves.
6. No presione mucho. Presionar mucho puede causar irritaciones cutáneas.
7. Después de terminar, apague el aparato (OFF).
Importante: Necesitará hacer varios intentos hasta encontrar la mejor forma de afeitar sus axilas.

1. Prepare the skin for the type of shaving desired, with water or dry. Make sure unit is in the "OFF" position before cleaning your shaver.
2. Hold shaver head and lift up from the back, (Fig. 1) then press foil frame release buttons on each side and lift up (the cutter is now in view). Be careful not to push on the foils. They are delicate and can easily be damaged.

1. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc, or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.
2. After each shave, switch the unit off and clean shaver head.
CAUTION Do not immerse any part of the unit in water or other liquid. The outer foils and inner blades are delicate and must be handled very carefully.

1. Before wet shaving, you may wish to prepare your legs and underarms with

3. Return the battery cover to its original position by pushing it in and up until you hear

a small click as it locks into place.

applied to the skin, the shaver will glide smoothly over the skin and clean away oil shaving cream or soap. If a soapy lather is

2. Align the two AAA batteries with the positive and negative positions indicated inside the

battery compartment. Being careful not to bend the clips, insert the negative end of each

shaver for a long period of time or if the

batteries are dead, remove or replace the

shaver. If you are not going to use your

 
using longer lasting alkaline batteries in your

AAA batteries (not included). We recommend a clean, close, smooth shave. It requires 2

operating instructions

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

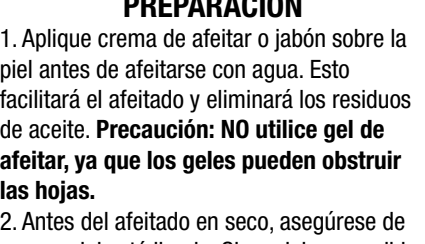

CÓMO AFEITAR SUS PIERNAS/INGLES

NOTA: *Presionar las hojas contra la piel aplasta los vellos e impide el afeitado. La experiencia le mostrará cuanto presión aplicar para obtener resultados óptimos.*

1. Prepare la piel para el tipo de afeitado deseado, con agua o en seco.
2. Encienda el aparato (ON).
3. Mueva la máquina suavemente contra la piel, arriba y abajo.
4. Siempre mantenga el aparato en contacto con la piel.
5. Para lograr resultados óptimos, aféitese en dirección contraria al crecimiento del vello.
6. La máquina de afeitar está equipada con una cuchilla recortadora integrada para acortar el vello largo. Para afeitar las ingles, acorte los vellos primero con la cuchilla recortadora integrada.

legs and bikini area.
7. When you finish shaving, turn the shaver off. Important: After several uses, you will be able to determine the optimum shaving method for your

6. The shaver has a bikini pop-up trimmer for

your complete shaving needs. To trim the bikini area, use the handy pop-up feature to easily see

5. For best results, shave against the direction of

hair growth.
4. Keep the full shaving head in contact with

down your skin.
3. Shave with smooth, steady strokes up and

2. Turn shaver on.
1. Prepare your legs for wet or dry shaving.

NOTE: *Pushing the shaver against the skin too hard will not allow the hairs to enter the foils and*

be cut. Experience will show just the right

long hair, stroking trimmer against the direction

of hair growth.
5. Hold the shaver so that it is in full contact

with your skin, and shave with gentle strokes.
6. It is important to press lightly. Pressing too

hard may lead to skin irritation.
7. When finished shaving, turn the shaver off.

Important: After several uses, you will be able to determine the optimum shaving method for

your underarms.
4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

3. Rinse the shaver cutter and foil frame under

running water or in a sink. Do not use hot water.

Use only warm or cold water.

4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

3. Rinse the shaver cutter and foil frame under

running water or in a sink. Do not use hot water.

Use only warm or cold water.

4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

3. Rinse the shaver cutter and foil frame under

running water or in a sink. Do not use hot water.

Use only warm or cold water.

4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

3. Rinse the shaver cutter and foil frame under

running water or in a sink. Do not use hot water.

Use only warm or cold water.

4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and


shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

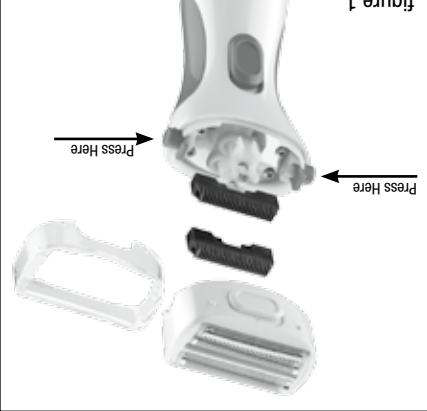

1. Prepare your underarms for wet or dry

shaving. (Be sure that your skin is clean and

free of deodorant.)
2. Turn the shaver on.

3. Lift your arm until the skin under the arm

stretches slightly.
4. Use the trimmer portion first to remove any

long hair, stroking trimmer against the direction

of hair growth.
5. Hold the shaver so that it is in full contact

with your skin, and shave with gentle strokes.
6. It is important to press lightly. Pressing too

hard may lead to skin irritation.
7. When finished shaving, turn the shaver off.

Important: After several uses, you will be able to determine the optimum shaving method for

your underarms.
4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the

foil area. Let the shaving head air-dry.

5. The cutter can also be cleaned with a

cleaning brush.

3. Rinse the shaver cutter and foil frame under

running water or in a sink. Do not use hot water.

Use only warm or cold water.

4. After wet cleaning, allow the foil frame and

cutter to air-dry before closing foil frame and

shaver until it clicks into place. Wipe the surface

of the main unit with a dry towel. Do not dry the




6. If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

7. Once dried, carefully place the protective cap on.


CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.

2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

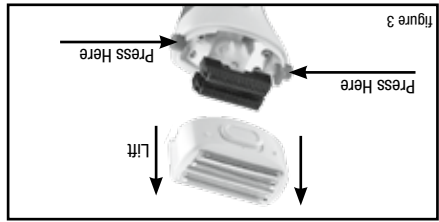

1. Remove the foil frame. (see figure 3)

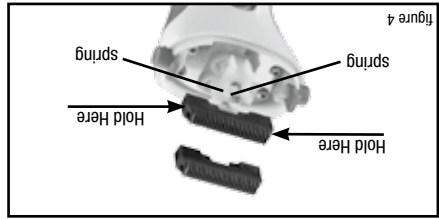

2. Push one side of the inner blades to unlock it and take out. (see figure 4) Be careful not to lose the small spring as it will be needed with the new cutters.

Replace the foil frame when you find you have to push harder on the shaver to get a close shave, or if you have to go over your leg area more often to get a smooth result. It is also time to replace the foils if you experience skin irritation. Replacement time will depend on how often you use your shaver and how quickly your hair grows.


Caution: Never replace the cutters without replacing the foils as well.

PIEZAS DE REPUESTO:
Para pedir piezas de repuesto (véase la lista de las piezas disponibles a continuación), llame al 1-800-3-CONAIR.

Hojas y cuchillas internas (modelo no. CSP21)

Para registrar su producto, visítenos en:
www.conair.com/registration

©2011 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

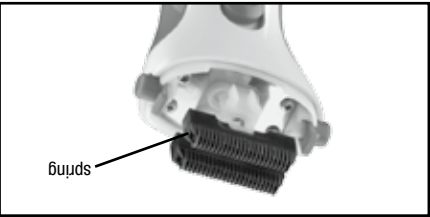

3. Hold the new inner blades firmly on the sides and guide them gently into the inner blade mount one side at a time until they lock into place.



4. Press firmly until the unit snaps into place.

5. Replace the foil frame.

REPLACING THE POP-UP TRIMMER ASSEMBLY

Note: we do not recommend replacing the trimmer assembly yourself. Take or send the shaver to a Conair service center because this requires a special tool for replacement. For most users, this trimmer will stay sharp for as long as you own your shaver.

CAMBIO DE LA CUCHILLA RECORTADORA INTEGRADA
Nota: No le aconsejamos que intente reemplazar la cuchilla recortadora integrada; se necesita una herramienta especial para hacer esto. Si la cuchilla está dañada o no corta, regrese el aparato a un centro de servicio autorizado. Sin embargo, la cuchilla ha sido diseñada para durar tanto como el aparato y es probable que nunca la tenga que reemplazar durante su vida útil.



3. Sostenga las cuchillas por los costados e insértelas sobre el cabezal, un lado tras otro.



4. Presione firmemente hasta que encaje.
5. Vuelva a instalar el cabezal.

LIMITED TWO YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.
To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.
ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.
Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.
Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.
This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.
For shaving tips and information on Conair appliances call: **1-800-3-CONAIR** or visit us on the web at www.conair.com

REPLACEMENT PART:
This shaver uses the following replacement parts, which can be ordered directly from Conair by calling customer service at 1-800-3-CONAIR.

 
CSP21 Replacement Foil and Cutter

Please register this product at
www.conair.com/registration

©2011 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
IB-10927

CÓMO REEMPLAZAR LAS HOJAS Y LAS CUCHILLAS

Si siente que debe hacer fuerza para afeitar o si debe pasar la máquina sobre la misma zona varias veces para conseguir un resultado suave, cambie las cuchillas. Cambie las hojas si irritan la piel. La vida útil de las cuchillas/hojas dependerá de la frecuencia de uso del aparato.
Precaución: Siempre reemplace las cuchillas y las hojas al mismo tiempo.

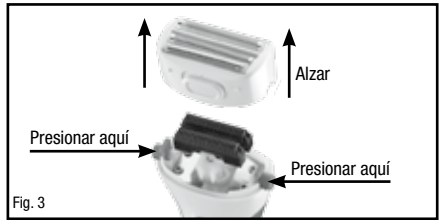

1. Retire el cabezal (Fig. 3).



2. Presione el costado de las cuchillas para liberarlas y retírelas (Fig. 4). Tenga cuidado de no perder el resorte; lo necesitará para instalar las nuevas cuchillas.



- Si desea, utilice un pequeño cepillo para limpiar las cuchillas internas.
- Si el cuerpo del aparato está sucio, límpielo con un paño ligeramente humedecido con agua jabonosa, o detergente suave. Nunca utilice disolvente, solventes o limpiadores fuertes.
- Regrese el protector de hojas sobre el cabezal.

PRECAUCIÓN:

- Si tiene que sacudir el aparato para eliminar el exceso de agua, sosténgalo firmemente para no dejarlo caer o desarmar el cabezal.
- No utilice un secador o un calentador para secar el aparato. Esto podría dañarlo o impedir su buen funcionamiento.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>