

GETTING TO KNOW YOUR STEAMER

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO

Cualquier aparato enchufado permanece bajo tensión, aunque el interruptor esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
3. No coloque el aparato ni lo deje caer al agua u otro líquido.
4. Si el aparato cayera al agua, desconéctelo inmediatamente. No toque el agua.

ADVERTENCIA

Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca deje este aparato desatendido mientras esté conectado.
2. Este aparato no debería ser utilizado por, sobre o cerca de niños o personas con alguna discapacidad.

3. Use este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.

4. Nunca utilice el aparato si el cable o la clavija estuviesen dañados, si no funcionase correctamente, si hubiese caído, si estuviese dañado o si hubiese caído al agua. No intente reparar el aparato. El ensamblar las partes de manera incorrecta aumenta los riesgos de incendio, electrocución y heridas. Regrese el aparato a un centro de servicio autorizado para que lo examinen y lo reparen.

5. Mantenga el cable alejado de las superficies calientes. No jale, retuerza ni enrolle el cable alrededor del aparato. Oprima el pedal de enrollado del cable para guardarlo en la base. Permita que el aparato enfríe completamente antes de guardarlo.

6. El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente vencer esta función de seguridad.

7. Nunca deje caer ni inserte un objeto en ninguna de las aberturas o en la manguera.

8. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

9. No utilice una extensión con este aparato.

10. No toque las superficies calientes del aparato.

11. No coloque la boquilla en ninguna superficie mientras esté caliente o mientras el aparato esté conectado. Manténgala alejada del cable eléctrico. Use el soporte incluido.

12. Desenchufe el aparato antes de llenar el depósito de agua. No sobrellene el depósito.

13. El vapor que sale de la boquilla es muy caliente. Respete las instrucciones de uso al pie de la letra y no permita que el vapor haga contacto con la piel, el cuero cabelludo o los ojos. Para reducir los riesgos de quemadura, pruebe el vapor lejos de su cuerpo antes de usarlo.

14. Nunca opere el aparato con el depósito de agua vacío.

15. Siempre mantenga la boquilla y la manguera a un nivel más alto que el depósito.

16. Nunca jale el cable para desconectar el aparato. Cójalo por la clavija.

17. Las partes de metal calientes, el agua caliente y el vapor pueden causar heridas. Tenga cuidado al vaciar el tanque, puesto que puede contener agua caliente.

18. Para prevenir las sobrecargas eléctricas, no opere ningún otro aparato de alto vataje en el mismo circuito.

19. Aunque no es aconsejable, si debe usar el aparato con una extensión, utilice una extensión de 15 amperios, porque una extensión de menor capacidad podría sobrecalentar. Ubique el cable de manera que nadie lo pueda jalar o tropezar.

20. Siempre saque el depósito de la base para llenarlo. No llene el tanque interno.

21. Asegúrese que el aparato esté apagado y que no esté emitiendo vapor antes de cambiar los accesorios.

Turn the water container upside down and remove the water and clean the container. Follow the steps for care and cleaning.

22. Cambie los accesorios con cuidado, puesto que podrían estar calientes o contener agua caliente. Asegúrese que estén secos y fríos antes de manipularlos.

OPERATING INSTRUCTIONS BEFORE FILLING THE WATER CONTAINER

1. Make sure the On/Off switch is in the off position.

2. Make sure all hose connections are secure and tight.

3. Make sure the telescopic pole is fully extended and the hose is not twisted.

4. Plug the steamer cord into a normal electrical outlet.

5. Turn the On/Off switch to the power is on.

6. The switch will light to indicate when steam will be produced from the nozzle in about one minute.

7. Inspect to make sure the valve and spring assembly are functioning. Place the container in the reservoir and check that it is seated securely. If the container has been stored with water inside, it may be necessary to clean it before using.

Remove the water container with the handle and turn upside down. Unscrew the valve in the center of the base. Fill container by holding container under a source of running cold water until the container is filled to the desired level. Do not overfill. Screw the cap onto the water container and return the container to the upright position. Place the water container onto the base and make certain it is seated properly in the cavity.

DO NOT FILL THE CONTAINER WITH HOT WATER.

OPERATING THE STEAMER

1. Always unplug appliance immediately after use. To reduce the risk of death by electric shock, do not touch the cord or plug when the appliance is electrically live even when the switch is off. Any appliance is electrically live when the switch is off.

2. Do not place or store appliance where it can fall or be pulled into a tub or sink.

3. Do not place in, or drop into water or other liquid.

4. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING—To reduce the risk of burns, electrocution, fire, or injury to persons: 1. This appliance should not be used by, on, or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Keep the cord away from heated surfaces. Do not allow cord to contact heated surfaces. Do not pull or twist cord.

6. The cord may be hot when heated for examination and repair.

7. Do not operate steam iron when the appliance is used. Return the appliance to an authorized service center when the appliance is used. Return the appliance to an authorized service center for examination and repair.

8. Do not use steam iron when the appliance is used. Return the appliance to an authorized service center when the appliance is used. Return the appliance to an authorized service center for examination and repair.

9. Do not use steam iron when the appliance is used. Return the appliance to an authorized service center when the appliance is used. Return the appliance to an authorized service center for examination and repair.

10. Do not use steam iron when the appliance is used. Return the appliance to an authorized service center when the appliance is used. Return the appliance to an authorized service center for examination and repair.

11. Do not use steam iron when the appliance is used. Return the appliance to an authorized service center when the appliance is used. Return the appliance to an authorized service center for examination and repair.

12. Use caution when changing attachments, as they may contain hot water from condensation. Ensure the attachments are dry or cooled off to avoid contact with hot water.

13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water discharging from steam vents, test appliance before each use by holding it away from body.

14. Do not operate steamer without properly filling the water container.

15. Always keep the hose and nozzle elevated above the appliance from the packaging material. Keep all plastic bags away from children.

16. Never yank cord to disconnect from outlet. Instead, grasp plug and pull to retract it into the housing completely. Do not let appliance cool completely before putting away. When storing, press the cord reel pedal with your foot until the cord is fully retracted.

17. Burns could occur from touching hot blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

18. To reduce likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.

19. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. Cords rated for less ampereage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

20. Always remove the reservoir from the appliance before filling it with water.

21. When changing attachments, please be sure the unit is off and no steam is being released in order to avoid contact with hot water.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment

Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

Extend the telescopic pole and hang the handle steam nozzle from the metal rod. Hose may be stiff upon removal from box. Handle with care. Do not use. Handle with care.

STEP 3 - Attaching T- Nozzle and Crease Attachment


Attach "T" handle steam nozzle or crease attachment to steam hose. Twist clockwise to securely lock onto hose. Tighten by hand until handle no longer turns.

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger simply place on top of pole firmly (Fig. 1). It is now in place to rotate 360°. Hang your garment and to attach it to the pole (on the telescopic pole) and moving the pole up and down, depending upon the length of pants (see Fig. 2). Clip pants as shown in Fig. 3 and steam. Please note some pants may be too long to use the bottom clips. If that is the case just simply use the top clips and let your pants hang freely.

Be sure the unit is off. Insert angled end of hose into steamer housing and twist clockwise to securely lock hose onto housing. (Be sure both connections at ends of hose are correct before operating appliance.)

STEP 2 - Attaching the Steamer Hose

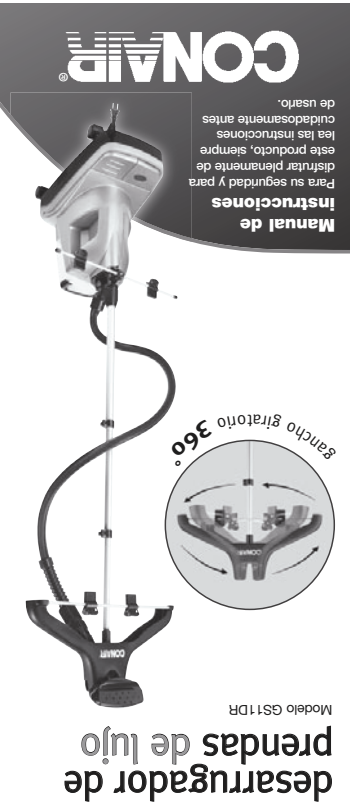

CLEANING AND STORING

1. Turn the On/Off switch to the off position and unplug from the power source.
2. Wait for the steamer to cool completely for at least 30 minutes.
3. Unplug power cord and retract it into the housing.
4. Remove the steamer hose.
5. Remove the water container from unit, unscrew valve and empty unused contents. Allow to air dry.
6. Remove excess water from the reservoir by lifting the unit and pouring.
7. Collapse telescopic hanger rod.
8. Replace water container.
9. Store the unit.



08PC427
 IB-8784
 Para más información sobre los productos de Conair, llame al 1-800-3-CONAIR o visite http://www.conair.com
 ©2008 Conair Corporation
 East Windsor, NJ 08520, Glendale, AZ 85307

Manual de instrucciones
 Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.
 Modelo GS11DR
 desarrugador de prendas de lujo
 gancho giratorio 360°

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

OTHER IMPORTANT NOTES
 During operation, the steamer hose may gurgle. This is a normal result of condensation collecting inside the hose. Simply lift the handle upward until the hose is extended to its full height. The gurgling will disappear when the excess moisture inside the hose has had a chance to drain back into the base.



DECALCIFICATION

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits which form over time on the metal parts of the steamer. For best performance from the Conair® Deluxe Fabric Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water container. Replace the water container in the unit. Plug the unit into electrical outlet. Turn to the on position and run until half the amount has steamed (1 liter). Turn the unit to the off position, unplug from electrical outlet, and allow to sit for 30 minutes. Remove water container.

Remove excess water from the reservoir by lifting the unit, inverting, and pouring the water over sink, and allowing water to drain from internal reservoir. Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2-3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification, before using the unit again to steam garments.



HOW TO STEAM

Grasp the handle of the steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack.

Heavier fabrics may require repeated steaming. Repeat as necessary. With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet or silk with the steam head.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer.

If you steam in a low position, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

TO STEAM DRAPES

Wash and dry drapes as directed, according to fabric type. Rehang drapes and steam when they are in place.

RESOLUCIÓN DE PROBLEMAS

- PROBLEMA: El aparato no calienta CAUSA: El aparato no está enchufado SOLUTION: Conecte el cable a un depósito
- PROBLEMA: El aparato no produce vapor de agua CAUSA: El nivel de agua está bajo SOLUTION: Apague el aparato y llene el depósito
- PROBLEMA: Gotas de agua caen de la boquilla CAUSA: Condensación en la manguera SOLUTION: Aíce la manguera para que se enfríe
- PROBLEMA: La boquilla burbujea agua CAUSA: Condensación en la manguera SOLUTION: Aíce la manguera para que se enfríe
- PROBLEMA: El aparato produce más vapor de agua que el necesario CAUSA: Depósitos de sarro SOLUTION: Limpie la cal

CONSEJOS PARA DESARRUGAR PRENDAS
 Siempre sostenga la boquilla recta y alta, para que la condensación baje hacia el depósito.
 Si la manguera no estuviere recta, condensación se podrá acumular adentro CAUSA: El nivel de agua está bajo SOLUTION: Apague el aparato y llene el depósito.
 Si la manguera no estuviere recta, respondan mejor cuando se aplica vapor metálicas interiores del aparato.
 Para lograr resultados óptimos, le recomendamos que limpie la cal regularmente. La frecuencia de la limpieza dependerá de la dureza del agua y de la toallas, servilletas y manteles colgándolos en una barra.
 Tetas más densas pueden necesitar más tiempo para desarrugarse. Aplique vapor cuantas veces sea necesario.
 Con práctica, desarrugar prendas se volverá más fácil y rápido y usted aprenderá cual frecuencia de uso del aparato.
 Mezcle 1/3 de vinagre blanco con 2/3 líquido (1 litro) se haya evaporado. Apague el aparato. Espere hasta que la mitad del líquido (1 litro) se haya evaporado. Aplique Coloque el depósito en la base y encienda de agua. Vierta la mezcla en el depósito.
 Repita estos pasos 2 ó 3 veces, usando cada vez una nueva mezcla de agua con vinagre, hasta que el vapor salga normalmente de la boquilla. Antes de volver a usar el aparato para desarrugar prendas, con un tanque de agua fresca.




TROUBLESHOOTING THE STEAMER

- PROBLEM - Steamer fails to heat CAUSE - Steamer not plugged in SOLUTION - Plug into electrical outlet
- PROBLEM - No steam CAUSE - Water level is low SOLUTION - Turn On/Off switch off and refill water container
- PROBLEM - Water drips from nozzle CAUSE - Condensation in hose SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Nozzle gurgles CAUSE - Condensation in hose SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Poor steam performance CAUSE - Sediment in container SOLUTION - Decalcify reservoir and water container

Note: Amounts of chemicals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

LIMPEZA DA CAL

No permita que la boquilla haga contacto con seda o terciopelo.
 Sostenga la boquilla con los orificios frente a la prenda. Mueva la boquilla lentamente desde abajo hasta arriba, por dentro y por fuera. Para terminar, aje la boquilla y funcione de agua baja se encenderá el indicador de manera intermitente, o si el aparato produce menos vapor o La manguera puede gorgotear durante el uso. Esto es el resultado normal de la condensación acumulada en la manguera. Para corregir esto, levante la boquilla hasta extender la manguera completamente. El agua. Permita que el depósito sequé fregadero para vaciar el tanque inferior. bado hasta el tanque inferior.
 Mezcle 1/3 de vinagre blanco con 2/3 frecuencia de uso del aparato.
 Tetas más densas pueden necesitar más tiempo para desarrugarse. Aplique vapor cuantas veces sea necesario.
 Con práctica, desarrugar prendas se volverá más fácil y rápido y usted aprenderá cual frecuencia de uso del aparato.
 Mezcle 1/3 de vinagre blanco con 2/3 líquido (1 litro) se haya evaporado. Apague el aparato. Espere hasta que la mitad del líquido (1 litro) se haya evaporado. Aplique Coloque el depósito en la base y encienda de agua. Vierta la mezcla en el depósito.
 Repita estos pasos 2 ó 3 veces, usando cada vez una nueva mezcla de agua con vinagre, hasta que el vapor salga normalmente de la boquilla. Antes de volver a usar el aparato para desarrugar prendas, con un tanque de agua fresca.

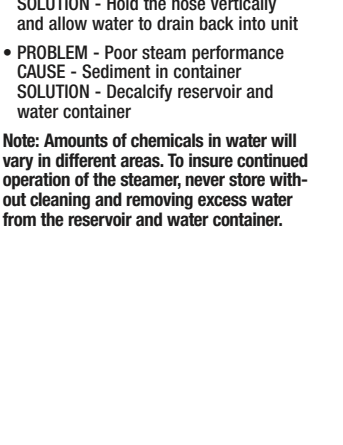

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture. **ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

 
This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



08PC427
 IB-8784
 Para más información sobre los productos de Conair, llame al 1-800-3-CONAIR o visite http://www.conair.com
 ©2008 Conair Corporation
 East Windsor, NJ 08520, Glendale, AZ 85307


NOTA IMPORTANTE

Si el aparato produce menos vapor o La manguera puede gorgotear durante el uso. Esto es el resultado normal de la condensación acumulada en la manguera. Para corregir esto, levante la boquilla hasta extender la manguera completamente. El agua. Permita que el depósito sequé fregadero para vaciar el tanque inferior. bado hasta el tanque inferior.
 Mezcle 1/3 de vinagre blanco con 2/3 frecuencia de uso del aparato.
 Tetas más densas pueden necesitar más tiempo para desarrugarse. Aplique vapor cuantas veces sea necesario.
 Con práctica, desarrugar prendas se volverá más fácil y rápido y usted aprenderá cual frecuencia de uso del aparato.
 Mezcle 1/3 de vinagre blanco con 2/3 líquido (1 litro) se haya evaporado. Apague el aparato. Espere hasta que la mitad del líquido (1 litro) se haya evaporado. Aplique Coloque el depósito en la base y encienda de agua. Vierta la mezcla en el depósito.
 Repita estos pasos 2 ó 3 veces, usando cada vez una nueva mezcla de agua con vinagre, hasta que el vapor salga normalmente de la boquilla. Antes de volver a usar el aparato para desarrugar prendas, con un tanque de agua fresca.

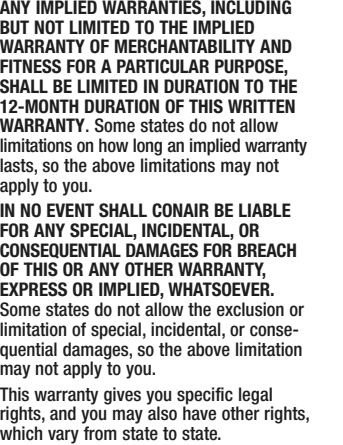

LIMPEZA DA CAL

 No permita que la boquilla haga contacto con seda o terciopelo.
 Sostenga la boquilla con los orificios frente a la prenda. Mueva la boquilla lentamente desde abajo hasta arriba, por dentro y por fuera. Para terminar, aje la boquilla y funcione de agua baja se encenderá el indicador de manera intermitente, o si el aparato produce menos vapor o La manguera puede gorgotear durante el uso. Esto es el resultado normal de la condensación acumulada en la manguera. Para corregir esto, levante la boquilla hasta extender la manguera completamente. El agua. Permita que el depósito sequé fregadero para vaciar el tanque inferior. bado hasta el tanque inferior.
 Mezcle 1/3 de vinagre blanco con 2/3 frecuencia de uso del aparato.
 Tetas más densas pueden necesitar más tiempo para desarrugarse. Aplique vapor cuantas veces sea necesario.
 Con práctica, desarrugar prendas se volverá más fácil y rápido y usted aprenderá cual frecuencia de uso del aparato.
 Mezcle 1/3 de vinagre blanco con 2/3 líquido (1 litro) se haya evaporado. Apague el aparato. Espere hasta que la mitad del líquido (1 litro) se haya evaporado. Aplique Coloque el depósito en la base y encienda de agua. Vierta la mezcla en el depósito.
 Repita estos pasos 2 ó 3 veces, usando cada vez una nueva mezcla de agua con vinagre, hasta que el vapor salga normalmente de la boquilla. Antes de volver a usar el aparato para desarrugar prendas, con un tanque de agua fresca.

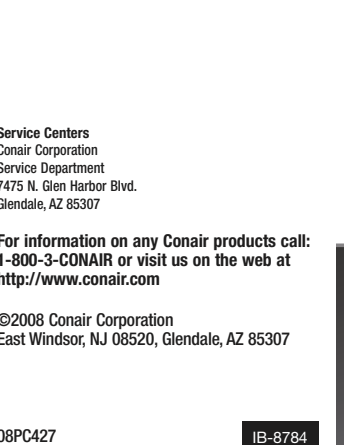

08PC427
 IB-8784
 Para más información sobre los productos de Conair, llame al 1-800-3-CONAIR o visite http://www.conair.com
 ©2008 Conair Corporation
 East Windsor, NJ 08520, Glendale, AZ 85307

deluxe fabric steamer

Model GS11DR



Instructions for Use
 For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>