# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

**DANGER** – Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.

 Do not use while bathing or in a shower.
Do not place or store appliance where it can fall or be pulled into a tub or sink.

4. Do not place in, or drop into, water or other liquid.

5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

#### 1. This appliance should never be left unattended when plugged in.

2. This appliance should not be used by, on, or near children or by individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this booklet. Do not use attachments not recommended by the manufacturer.

4. Do not use an extension cord to operate appliance.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

6. Keep the cord away from heated surfaces.

7. Do not pull, twist, or wrap line cord around appliance, even during storage.

8. Never place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked.

9. Never use while sleeping.

10. Never drop or insert any object into any opening or hose.

11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

12. This curling iron and clip are hot when in use. Do not let eyes or bare skin touch heated surfaces.

#### 13. Do not place the heated iron directly on any surface or on the appliance power cord while it is hot or plugged in. Use the built-in counter rest.

14. Before plugging in, please read the dual voltage information contained in the Operating Instructions section of this booklet.



# OPERATING INSTRUCTIONS

This curling appliance is intended for household use. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

#### DUAL VOLTAGE

This curling iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

#### **GETTING STARTED**

The iron's 30 temperature settings and Instant Heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting high. <u>You can vary the iron's temperature according to your particular need!</u>

### CURLING BASICS

1. Plug the curling iron cord into any household outlet (120/240V). Press on button. The iron will heat up very quickly. The indicator light will stop blinking and remain on when the iron is ready to use. To turn off, press off button (light will go off). Never leave your curling iron on and unattended. However, should you fail to turn the curling iron off, it will shut itself off automatically within 60 minutes.

2. Section dry hair evenly, and comb each section before winding. Pressing the automatic curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.

Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.

3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8-12 seconds, depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair. 4. To remove curling iron, unwind the hair and press the automatic curl release. To set the curl, do not comb or brush hair until it cools.

#### STYLING WITH CERAMIC TECHNOLOGY CURLING IRONS

The barrel of your new curling iron has an Easy-Glide<sup>™</sup> ceramic-coated surface, the newest technology.

This ceramic-coated surface helps to smooth down flyaways and frizzies. As you wind each strand around the barrel, it evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair glides easily over the surface of the barrel. Any residue from styling products that buildup on the ceramic-coated barrel can be easily cleaned.

The new ceramic technology is a pleasure to work with and makes styling your hair easier and the results more professional.

#### USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features Conair's Instant Heat technology.

Within this Instant Heat technology there are 30 variable temperature settings. Every type of hair, from the finest to the curliest and most resistant, has a temperature range that's gentle and safe for it and helps you create the look you want.

Temp. Control	Hair Type
Low 1-5	Delicate, thin, easy- to-curl hair
Medium 6-10	Average to thick or treated hair
Med/High 11-15	Thick or wavy hair
High 16-20	Hard-to-curl hair
Maximum 21-30	Very resistant hair

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the iron at constant temperatures.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.





# **USER MAINTENANCE**

Your curling iron is virtually maintenance-free. No lubrication is needed. If cleaning becomes necessary, disconnect the curling iron from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs. unplug the curling iron, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

**CAUTION-** NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE- When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hand or lie loose and straight at the point of entry into the appliance.


WARNING: The instant heat barrel will get very hot within a few seconds and should not be placed in contact with skin after the curling iron is turned on. The special application of this curling iron will result in an extremely hot barrel when the high setting is chosen. Always do a test curl before using the iron to ensure the proper setting for your hair type.

#### HEAT SHIELD




After using curling iron. simply slide heat shield over curling iron barrel for immediate storage convenience.

CURLING IRONS ARE AVAILABLE IN THE FOLLOWING SIZES:

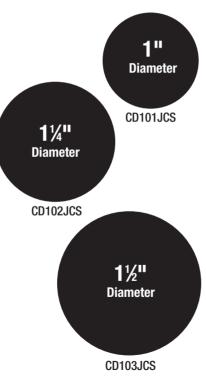

# WARNING: **IF YOU THINK** THE POWER IS OFF WHEN THE SWITCH IS OFF. YOU'RE WRONG.

## **KEEP AWAY FROM WATER**

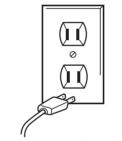

Everyone knows that electricity and water are a dangerous combination. But did vou know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

### ALWAYS UNPLUG SMALL APPLIANCES

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories. Inc.

# LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED IN **DURATION TO THE 24-MONTH DURATION OF** THIS WRITTEN WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL. INCIDENTAL. ... R CONSEQUENTIAL DAMAGES FOR THE BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state

Haircare

1-800-2-CONAIR

Or visit us on the web at:

http://www.conair.com

or info on any Conair product

Hotline

Service Center: Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

©2006 CONAIR CORPORATION

150 Milford Road, East Windsor, NJ 08520 7475 North Glen Harbor Blvd., Glendale, AZ 85307

06PC2278





## **Instruction & Styling Guide**

For your safety & continued enjoyment of this product, always read the instruction booklet carefully before using.

Models CD101JCS, CD102JCS, CD103JCS





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com