

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the

manufacturer.

4. Do not use an extension cord to operate appliance.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Do not pull, twist, or wrap line cord around appliance, even during storage.
8. Never place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked.
9. Never use while sleeping.
10. Never drop or insert any object into any opening.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. This straightener is hot when in use. Do not let eyes or bare skin touch heated surfaces.
13. **Do not place the heated straightener directly on any surface or on the appliance power cord while it is hot or plugged in.**
14. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
15. Do not touch the housing of your appliance near the straightening plates as it is hot when in use.
16. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air opening free of lint and other debris.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This straightening iron appliance is intended for household use. This unit is designed to operate at 120/240 volts AC. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

DRYING SYSTEM WITH UNIQUE DRY'N STRAIGHT™ WET • DRY DESIGN

This Wet • Dry Tourmaline Ceramic™ Straightener features our exclusive vent and channel design, allowing for use on dry or damp hair. When used on damp hair, excess water is forced into channels where it can escape as steam. The steam evaporates through the vents in the housing, while the hair's natural moisture is sealed into the cuticle.

CAUTION: Steam evaporating through the vents may be hot. During use, avoid touching or blocking the vents and direct drying vents away from your scalp and face.

STRAIGHTENING BASICS

1. Plug the straightening iron cord into any household outlet (120/240V). Press On button (the red light will blink indicating that the straightener is heating up). The iron will heat up very quickly. The green indicator light will light indicating that the unit is set to “wet” setting and will blink until the unit reaches the proper temperature. To turn off, press Off button (red light will go off). Never leave your straightening iron on and unattended.

WARNING: The straightening iron's tourmaline ceramic-coated plates will get very hot within a few seconds and should not be placed in contact with the skin after the straightening iron has been turned on.

Start with a hair section that is 2" wide and no more than 1/2" thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair or how damp it is.

Some experience is necessary when learning to use this straightening iron. After using iron several times, you will learn the ideal way to straighten and style your hair easily.

NOTE: Please refer to the temperature setting guide for heat settings, especially if using your iron on damp hair.

STYLING WITH THE NEW EASY-GLIDE TOURMALINE CERAMIC-COATED PLATES

The plates of your new straightening iron have an easy-glide tourmaline ceramic-coated surface, the newest technology.

You'll also find that hair glides easily over the surface of the plates as you're straightening. The tourmaline ceramic-coated surface also helps smooth down flyaways and frizzies. As you smooth each strand, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shining finish. Hair slips right off the plates after it's straightened.

The new tourmaline ceramic technology is a pleasure to work with, makes styling your hair easier and provides more professional results.

You'll find not only that hair glides easily over the surface of the plates as you're straightening, but it's simpler to clean styling products residue, etc. off after each use.

NEW! STRAIGHTENING COMB

The new straightening comb detangles and tames even the most unruly tangles and frizz. This added benefit is ideal for all hair types, especially thick and coarse hair.

USING INSTANT HEAT, THE 30 WET • DRY VARIABLE TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This straightening iron features Conair's Instant Heat technology. It heats up to the temperature you've selected for your hair type.

Within this Instant Heat technology there are 30 variable wet • dry temperature settings for every type of hair, from the finest to the curliest and most resistant. Use the low settings for wet/damp hair and as your hair dries turn to the medium settings. Once hair is completely dry, use the medium to high settings to complete the straightening process.

Temperature Setting Guide

TEMP. CONTROL	HAIR TYPE
Low/Wet 1-10	Delicate, thin, easy-to-straighten hair
Medium/Damp 11-17	Average to thick or treated hair
Med/High 18-23	Thick or wavy hair
High/Dry 24-30	Hard-to-straighten hair.

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the straightening iron at a constant temperature.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

**GET TO KNOW YOUR
DRY 'N STRAIGHT™ WET • DRY
STRAIGHTENING IRON**



USER MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

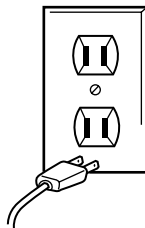

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307



©2007 CONAIR CORPORATION
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307
Patent Pending

07PC2018

IB-7374

Dry 'N Straight™



**2" Tourmaline
Ceramic™
Straightener**

Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Model CS36R

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>