

Your Synergy™ V Universal / DVR remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

Synergy™ V RT-U60C / RT-U62CP

CABLE Cable set-top terminals TV Televisions VCR VCR DVD

### Audio receivers, amplifiers, CD players Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

2. Before Getting Started

## Some of the special features and buttons on your remote control

are as follows

## Point and Press® Programming

Lets you program your TV, VCR, DVD, AUDIO devices without using codes. For more information, see sections 5 and 14.

### [ALL] SmartKey®

**AUDIO** 

Turns your CABLE set-top terminal and TV on / off with one button press. [ALL] can also be programmed to turn on / off additional electronic devices, or automatically set your correct TV output channel. For more information, see section 9.

[MODE] Indicates which mode (i.e. CBL, TV, VCR, DVD AUDIO) the remote is currently operating in by illuminating the power button. To change to a different mode, press [MODE], then the power button for the electronic device you wish to operate. For more information, see Section 15.

### Memory Guard®

Eliminates reprogramming after battery changes.

### 3. Installing / Replacing Batteries

Install two (2) new AA Alkaline batteries. Properly match the "+ / -" ends of the batteries with the diagram in the battery compartment.

### When the batteries become low and need to be replaced, the [CBL], [TV], [VCR], [DVD], [AUDIO] buttons will not illuminate normally, or at all during use.

Synergy™ V RT-U60C / RT-U62CP

When this happens, replace the existing batteries with two (2) new AA Alkaline batteries to restore normal operation to the

## 4. Programming Your Cable Set-Top Terminal

Your remote control is pre-programmed to operate the Scientific Atlanta Explorer® 8000 digital set-top terminal. To operate a different cable set-top terminal, look up the brand and model in the Cable Setup Code list and follow these

- 1. Press [SELECT], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV
- → VCR → DVD → AUDIO → CBL). 2. From the Cable Setup Code list, locate the 3-digit code for your brand / model and enter it on the keypad of the remote control. The set-top terminal will turn off.
- 3. Then, press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and go out.

### Cable Setup Codes

Motorola	
DCT, CFT2200	001
CFT2100, CFT2000	002
Jerrold	
DL4, DP(V), DQN(V), DPBB	003
Scientific Atlanta	
Explorer® 8000 (SARA - RT-U59C)	412
Explorer® 8000 (Passport - RT-U61CP)	413
Explorer®	004
8600X	005
8600	006
Pace	100
510 Digital	004

Synergy™ V RT-U60C / RT-U62CP

091

### HD Digital 010 Pioneer 004 Vovager BA-V1000, BA-V2000 007 Tocom 5503VIP. 5507, 5508 008 Zenith MM2500 009 013 Digital

Synergy™ V RT-U60C / RT-U62CP

### 5. Programming Your TV, VCR, DVD and AUDIO Devices **Code Entry Programming**

- 1. Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- 2. Press [SELECT], then [MUTE] together until the power /
- mode buttons illuminate in slow-rotation (i.e. CBL  $\rightarrow$  TV  $\rightarrow$ VCR → DVD → AUDIO → CBL...). 3. a. To program your TV, locate the 3-digit code for your
- brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off. If multiple codes are listed for your brand, you may have to try several different codes until your TV turns off.
- b. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].
- 1. If the TV turns back on, press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and Or
- 2. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and go out.
- 4. To program your VCR refer to the VCR / DVD Setup
- Code lists and repeat steps 2 and 3 above.

Synergy™ V RT-U60C / RT-U62CP

086

348

247 331

078 132

291

086

Synergy™ V RT-U60C / RT-U62CP

172 174

349

## 5. To program your DVD refer to the VCR / DVD Setup

Synergy™ V RT-U60C / RT-U62CP

Setup Code list and repeat steps 2 and 3 above.

This method allows you to program the remote control without

using codes. Instead, the remote control automatically finds

the correct command that you select in a variety of codes until

you find the code that operates your device. You then lock in

The following instructions describe how to program your

remote control using the [CH +] or [CH -] buttons ("Power"

function during programming). You may also program your

remote control using other buttons / functions as described

in Section 14. When using this method, there are several

· The order in which you program your electronic devices is

. There may be several codes that turn your electronic devices on

/ off (or perform other functions). Once you lock-in a code, be

sure to check the available functions for that device (i.e. TV - Vol

+/-, Mute, TV Input (Video Source button), VCR - Play, Stop..,

DVD - Play, Stop.., AUDIO - Vol +/-, Mute) to see if they are

. While the remote is searching for the correct setup code(s)

for your electronic devices, it is possible that other (previously

programmed) devices may turn on / off (or perform other

functions). If this occurs, continue pressing the [CH+] or [CH

-1 buttons (or the buttons described in Section 14) until you

find the correct code for the device you are programming.

. It may take several minutes for the remote to find the correct

function). During this time, the power / mode buttons will

illuminate in fast-rotation (i.e. CBL → TV → VCR → DVD →

Programming your electronic devices using the [Ch +] or

1. Turn on all the electronic devices (TV, VCR, DVD, AUDIO)

[Ch -] buttons ("Power" function during programming)...

code that turns your device off (or performs another selected

Point and Press® Programming

the correct code as described below

important points to remember:

not important.

operating.

AUDIO → CBL...).

you want to program the remote to operate. Code lists and repeat steps 2 and 3 above. 2. Press [SELECT], then [MUTE] together until the power / mode 6. To program your AUDIO equipment, refer to the AUDIO

## → DVD → AUDIO → CBL...).

buttons illuminate in slow-rotation (i.e. CBL → TV → VCR 3. Press and hold the [CH +] button until one device turns off.

Synergy™ V RT-U60C / RT-U62CP

## While you are pressing the [CH +] button, the power / mode

- buttons will illuminate in fast-rotation. As soon as one device tums off, release the [CH +] button. 4. Press [MUTE]. If the device that turned off...
- a. Turns back on, press [SELECT] to lock in this code. The
- power / mode buttons will blink 3-times and go out. b. Does not turn back on, press [CH -] one step at a time
- until that device turns back on. Each time you press the [CH -] button, the power / mode buttons will illuminate once in reverse fast-rotation (AUDIO → DVD → VCR → TV → CBL).
- Once you have found a code that turns the device on / off, press [SELECT] to lock in this code. The power / mode buttons will blink 3-times and go out.
- 5. Repeat steps 2 to 4 above for each of the remaining electronic

## 6. Programming Your TV / VCR Combination

devices you wish to program the remote to operate.

- 1. First, turn on your TV / VCR combination device and install
- a VHS tape.
- 2. Next, program your remote to operate the TV functions. Using the Code Entry Programming method described in
- Section 5, find a TV Setup Code that operates the TV functions ( Power, Vol + /-, Mute ) of your TV / VCR combination.
- 3. Last, program your remote to operate the VCR functions. Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the transport functions (Play, Stop, Rew, Pause, Rec) functions of your TV

Synergy\*\* V RT-U60C / RT-U62CP -

066 132 238 363

/ VCR combination.

Realistic

to put the remote in its VCR mode.

TV Setup Codes

PAUSE, REC) of your TV / DVD / VCR unit.

Synergy™ V RT-U60C / RT-U62CP

7. Programming Your TV / DVD or TV / VCR / DVD Combination

install a DVD.

TV / DVD unit.

REC) of your TV / DVD unit.

put the remote in its DVD mode.

1. First, turn on your TV / DVD combination device and

2. Next, program your remote to operate the TV functions.

Using the Code Entry Programming method described in

Section 5, find a TV Setup Code that operates the TV

functions (Power, Vol ▲/▼, Mute, Ch ▲/▼, 0-9) of your

3. Last, program your remote to operate the DVD functions.

Using the Code Entry Programming method described in

Section 5, enter, lock and test each 3-digit DVD Setup

Code for your brand until a code is found that operates the

transport functions (PLAY, STOP, REW, FWD, PAUSE,

Before you can test for the correct DVD setup code, you

must first press the [MODE] button, then [DVD] button to

4. If you have a TV / VCR / DVD combination unit, you would

then program your remote to operate the VCR functions.

Using the Code Entry Programming method described in

Section 5, enter, lock and test each 3-digit VCR Setup

Code for your brand until a code is found that operates the

VCR transport functions (PLAY, STOP, REW, FWD,

Before you can test for the correct VCR setup code, you

must first press the [MODE] button, then [VCR] button first

BRAND			DDE
Admiral	026	054	211
Adventura	047		
Advent	072	094	
Aiwa	214		
Akai	053		

Synergy™ V RT-U60C / RT-U62CP

	19				
Amark	023	215			
Amstrad	157				
Anam	217	218	219	220	221
	222	223			
AOC	053				
Apex	030	038			
Audiovox	220				
Belcor	073				
Bell & Howell	211				
Broksonic	165	167			
Brokwood	073				
Candle	068	091			
Centurion	095	107	108		
Citizen	068	091	211	233	
Concerto	073	095			
Contec	147				
Coronado	023				
Craig	223				
Crown	023				
Curtis Mathes	016	054	107	108	211
	213				
Daewoo	051	068	073	095	158
	159	189	191	194	196
	197	198	200	202	204
	205	206	207	209	
Daytron	073	095	107	108	
Dumont	073				
Electro Home	073	095			
Elektra	353				
Emerson	016	023	053	064	103
	139	158	159	164	165
	166	167	168	169	392
	400	401	402	408	415
Envision	073	095			
Fisher	355	356			
Funai	047				
GE	015	018	042	044	049

	090	095	107	108	
	360	033	107	100	
Goldstar (LG)	023	053	068	073	
dolastai (Ed)	107	108	233	360	
Grundig	233	100	200	000	
Hall Mark	073	095			
Hitachi	023	068	095	096	
intacin	098	099	100	000	
Inkel	364	000	100		
JC Penney	039	053	068	073	
oo i cilloy	095	102	355	0/0	
JVC	104	105	106	396	
000	410	100	100	030	
Kawasho	073	095			
KMC	023	033			
KTV	023	053	233	366	
Kurazai	211	213	200	500	
LG (Goldstar)	023	053	068	073	
La (aoiastai)	107	108	233	360	
Lodgenet	211	213	200	300	
Logik	211	213			
Luxman	068	073	095		
LXI	024	026	157		
Magnavox (Philips)	024	068	071	073	
iviagriavox (Frillips)	090	091	093	134	
	387	397	404	134	
Majestic	211	213	404		
Marantz	053	107	108	109	
Megatron	215	107	100	109	
Memorex	090	211	213	355	
Welliolex	405	211	213	333	
MGA/Mitsubishi	053	068	073	090	
IVIGA/IVIIISUDISIII	107	109	110	216	
	394	395	398	399	
Montgomony Word	022	023	026	053	
Montgomery Ward	072	108	211	213	
NEC	028				
Orion	019	068 159	090 160	108 161	
OHOH	163	382	100	101	
Panasonic	042	043	044	045	
Philco	023	053	068	045	

	001				
Philips(Magnavox)	023	068	071	073	089
	090	091	093	134	385
	387	397	404		
Pilot	073	094	233		
Pioneer	111	144	383		
Portland	023	068			
ProScan	055	070			
Proton	090	371	372		
Pulsar	073				
Quasar	044				
Radio Shack	073				
Realistic	022	166	168		
RCA	042	052	053	054	055
	069	070	416		
Sampo	090	108			
Samsung	015	016	017	023	031
	090	107	108	134	147
	151	153	386	411	
Sansui	423				
Sanyo	353	355	356	376	377
Scott	090	108	168		
Sears	023	031	038	039	068
	353	355	356	000	-
Sharp	016	022	023	024	025
onarp	026	027	028	029	393
	395	409	OLO	OLO	000
Signature 2000	023	026	108	211	213
Sony	014	020	021		_10
Soundesign	091	020	OL.		
Squareview	157				
Supre-Macy	380				
Sylvania	068	071	072	090	091
- Jiraina	093	107	108	157	158
	419	101	100	101	150
Symphonic	047	157			
Tatung	044	137			
Techwood	068				
Teknika	023	068	072	091	168
IONIINA	213	000	012	031	100
	023	213			
Telerent					

Tera	381				
Tevion	065	414			
TMK	068	090			
Toshiba	030	031	038	039	
Totevision	233				
Universal	068	102			
Vidtech	068				
Wards	068	090			
White Westinghouse	211	408			
XR-1000	213				
Yamaha	068				
York	090	108			
Zenith	047	048	049	050	051
	391	405	406		

BRAND		CODE					
Admiral	066	075					
Aiwa	132						
Akai	269	275	336	351	352		
	354						
Audio Dynamics	243	291					
Bell & Howell	357						
Broksonic	333	337	358	359			
Canon	086	362					
Citizen	033	172	247	331			
Colortyme	291						
Craig	172	363					
Curtis Mathes	086	112	247	291			
Daewoo	033	343	344	345	346		
	347						
Daytron	345	365					
DBX	243	291					
Dynatech	132						
Emerson	033	086	132	326	327		
	331	332	333	334	335		
	336	337	338	339	340		
	341	342					
Fisher	035	081	357	363			
Funai	132						

ľ	GE
	Go Video
	Goldstar (LG)
	Harman Kardon
	Hitachi
	Instant Replay
	JC Penney
	JCL
	JVC
	Kenwood
	LG (Goldstar)
	Lloyd
	Logik
	LXI
	Magnavox (Philips)
	Marantz

Philco

Pioneer Portland

ProScan

Quartz

Quasar

RCA

Philips (Magnavox) 086

	253				
Kenwood	120	132	238	243	2
LG (Goldstar)	247	331			
Lloyd	132				
Logik	367				
LXI	132	331			
Magnavox (Philips)	086	132	183		
Marantz	086	172	183	238	2
	291				
Marta	331				
Matsui	368				
Memorex	132	238	331	363	3
	370				
Mitsubishi	255	258			
MTC	132	172			
Montgomery Ward	066	170	173	373	
Multi Tech	132	172	367		
NEC	120	238	243	291	3
	375				
Orion	322	326	327	328	3
	330				
Panasonic	112	117			
Pentax	078				

086

078

112

170 174

238 378

173 174

Synergy™ V RT-U60C / RT-U62CP

TV (default), Cable or Audio.

132 183

132 183

120 263

078 132 141 170 172

Soundesign	132				
Sylvania	086	132	141	183	184
	322	324	420		
Symphonic	132				
Tandy	132	238			
Tashiko	331				
Tatung	243				
Teac	132	243			
Technics	086				
Teknika	132	331	359		
Thomas	132				
TMK	338				
Toshiba	033	035	078	081	
Totevision	172	331			
Unitech	172				
Vector Research	291				
Video Concepts	132	291			
Wards	066	132	172	247	331
XR-1000	367				
Yamaha	132	243	291		
Zenith	058	120	122	128	132

CODE

193 227

201 203

Synergy™ V RT-U60C / RT-U62CP

d. Press [CH +] to advance to next channel # setting.

f. Press [CH +] to advance to next channel # setting.

h. Press [CH +] to advance to next channel # setting.

3. Press [MOD] to store the above channels. The [CBL]

button will blink 3-times and go out. To store fewer

than 5 channels, you can press the [MOD] button any

4. Repeat the above steps to program the [MUSIC], [NEWS]

time after entering a complete channel number.

146

199

BRAND

Apex Digital

DVD-Video

B144

Denon

### ECA GE 150 152 156 175 129 133 135 179 260 Goldstar (LG) Gradiente 212 234 Harmon Kardon 256 259 149 Hitachi JVC 177 179 Kenwood 228 KLH 248 252 LG (Goldstar) 129 133 135 179 260 Magnavox 138 143 146 Marantz 270 181 185 Mitsubishi 246 NAD 085 244 Onkyo 115 118 121 124 Panasonic 187 125 188 Pioneer 236 Proceed RCA 156 Samsung 192 224 225 034 076 077 079 Sharp 040 059 061 421 Sylvania Thomson 156 237 Toshiba 082 085 087 113 Yamaha 121 124 210 129 133 135 Zenith Audio Setup Codes

	Compa	ct Disc
ADC	318	
Akai	249	261
Aiwa	176	
Carver	176	
Crown	154	
Denon	273	
Fisher	230	274
Goldstar (LG)	308	

Synergy™ V RT-U60C / RT-U62CP

terminal to ensure the full channel numbers are received

If you are using your Synergy™ V remote to operate a

Cable set-top terminal other than the Explorer® 8000

model, you may only have to enter channels in a 3-digit

This button changes the input source of your electronic

devices. In the remote's Cable mode, this operates a

Cable function. In the remote's TV mode, this button

changes the Input Source (Input 1, Input 2...) on your

TV. In the remote's VCR mode, this button changes the

You can program this button so that in the remote's Cable

mode, [VIDEO SOURCE] will operate the Input function on

your TV or VCR, eliminating the need to change modes on

To program [VIDEO SOURCE] to operate your TV Input

1. Press [VIDEO SOURCE], then [SELECT] together until

2. Press [TV]. The [CBL] button will blink 3-times and go out.

Note: You can also press [VCR] in step 2 above to

operate the TV / VCR function on your VCR. Or press

[CBL] to return to the normal CBL Video Source function.

To reset your remote control to its factory default settings...

1. Press [CBL], then [SELECT] together until the [CBL]

2. Press [SETTINGS], then [SETTINGS] again. The [CBL]

Reset (Partial) returns the ALL SmartKey®, Volume / Mute,

Mode Lock™ features to their factory default settings.

in their entirety

format (ex. 012).

12. Video Source

TV / VCR Input on your VCR.

function in the remotes cable mode.

the [CBL] button illuminates.

13. Reset

button will blink 3 times and go out.

button illuminates.

## Synergy™ V RT-U60C / RT-U62CP

Gibralta

054 055 068 073 090

095 101 102 103 389

390 396 403 406 407

023 048 053 068 073

Harman Kardon	315				
JVC	297				
Kenwood	131	176	274	289	299
Krol	176				
LG (Goldstar)	308				
Magnavox (Philips)	037	084	119	296	
Mission	176				
Mitsubishi	245	249			
NAD	182	231	290		
Nakamichi	264	319			
NEC	235				
NSM	176				
Onkyo	300				
Panasonic	184	266			
Philips (Magnavox)	037	084	119	296	
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295				
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	289			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				
Sylvania	084				
Teac	186				
Technics	184	208	317		
Toshiba	290				
Yamaha	280				

Philips (Magnavox)	037	084	119	296	
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295				
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	289			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				
Sylvania	084				
Teac	186				
Technics	184	208	317		
Toshiba	290				
Yamaha	280				
Rec	eiver/	Ampli	fier		
Adcom	325				
Aiwa	301				
Akai	142				
Bose	302				
Carver	155	180			
Denon	262	307			

1,0				
186				
288	289			
067	292	293		
148	242	311	320	
318				
084				
186				
184	208	317		
290				
280				
Receiver /	Ampli	fier		
325				
301				
142				
302				
155	180			
262	307			
15				
	288 067 148 318 084 186 184 290 280 <b>Receiver /</b> 325 301 142 302 155 262	288 289 067 292 148 242 318 084 186 184 208 290 280 Receiver / Ampli 325 301 142 302 155 180 262 307	288 289 067 292 293 148 242 311 318 084 186 184 208 317 290 280  Receiver / Amplifier  325 301 142 302 155 180 262 307	288 289 067 292 293 148 242 311 320 318 084 186 184 208 317 290 280  Receiver / Amplifier  325 301 142 302 155 180 262 307

Synergy™ V RT-U60C / RT-U62CP

### Additional Programming Information 1. The power / mode buttons will illuminate in slow-rotation (i.e. $CBL \rightarrow TV \rightarrow VCR \rightarrow DVD \rightarrow AUDIO \rightarrow CBL...)$ while the remote is in a programming mode. In the absence of a keypress entry, the power / mode buttons will stop illuminating after 45 seconds and the remote will exit the

- programming mode. 2. When programming the remote control using the [CH+] or [CH -] buttons (Power function) in the Point and Press® Programming method, you may find a code that turns a
- device off but not back on. If this happens... a. The correct code has not been found as you may have a code that operates some but not all of the functions of your device. Continue pressing [CH +] until your device turn on.
- OR
- Try pressing [CH -] one press at a time until you find a code that turns your device back on.
- 3. When using the Point and Press® Programming method, you can also program your remote using buttons other than the [CH +] or [CH -] as described in Section 5 as
- function on your devices.
- the device being programmed will increase or decrease.

d. [▼] - to "go back" through the codes using the "CH -"

function on your devices.

- performed. To simplify programming using these buttons, insert a VHS tape or DVD in the device being programmed. You can also program your remote using the other available
- b. You may have gone past the correct matching code.
- a. [VOL +] to "go forward" through the codes using the
- Note: When you find the correct code, the volume of
- "VOL +" function on your devices. b. [VOL -] - to "go back" through the codes using the "VOL -"
- c.  $[\blacktriangle]$  to "go forward" through the codes using the "CH +"

### Harman Kardon 240 114 241

063 277

282 283

032 074

123 137

229 267

226 268

126 171 304

142 229 321

036

281

080

286

323

080

032

310

283

195

272

294

313

142

032

063

229 267

314 316

114 241

Synergy™ V RT-U60C / RT-U62CP

Note: When you find the correct code, the channel of

the device being programmed will increase or decrease.

e. [▶▶] - to "go forward" through the codes using the "Fast

f. [◄◄] - to "go back" through the codes using the "Rewind"

Note: When you find the correct code, the fast-forward or

rewind function of the device being programmed will be

a. Press [SELECT], then [MUTE] together until the power /

b. In this order, carefully press [0], [0], [0], [CH+] and

[VOL+]. The power / mode buttons illuminate in slow-

rotation (i.e. CBL  $\rightarrow$  TV  $\rightarrow$  VCR  $\rightarrow$  DVD  $\rightarrow$  AUDIO  $\rightarrow$ 

c. You can now program your remote using the [CH+],

[CH -], [VOL+], [VOL -], [▲], [▼], [FFWD], [REW],

[PLAY], [STOP], [REC], [PAUSE], [LAST], [FAV], [0]

- [9] buttons. When you find the correct code, the

function associated with the selected button will be

4. Your remote is equipped with a Point and Press® Pro-

1. If the same button is pressed and held for 45-seconds,

your remote control will turn itself off automatically. This

extends the battery life should the remote become lodged

under or between heavy objects, for example sofa cushions.

quickly program the remote without using codes.

Troubleshooting / Tips

gramming label on the back of its case. This will help you

mode buttons illuminate in slow-rotation (i.e. CBL → TV

function on your devices.

function on your devices.

functions as follows

Forward" function on your devices.

→ VCR → DVD → AUDIO → CBL...).

145 254 303

036 083 088 239 265

041 057 232 287

083 088 239 265

Synergy™ V RT-U60C / RT-U62CP

136

Everquest

Goldstar (LG)

Fisher

Hitachi

Jensen

Kenwood

Luxman

Marantz

NAD

Onkyo

Optimus

Panasonic

Parasound

Pioneer

Quasar

Realistic

Rotel

Sansui

Sanvo

Scott

Sharp

Sony

Sherwood

Soundesign

Taekwang

Technics

Wards

Victor

Zenith

Yamaha

Radio Shack

Philips (Magnavox)

Magnavox

LG (Goldstar)

JVC

063 Fosgate Audionics 305 036 130 257 305 306

284 285

251 298

1. Press [TV], then [SELECT] together until the [TV] button 2. Press [INFO]. The [TV] button will "blink back" the code

8. Code Number Read-Back

To identify the TV setup code.

numbers, with a 1-second interval between each digit of

Synergy™ V RT-U60C / RT-U62CP

To identify the 3-digit setup codes stored under the Point

and Press® programming method, follow these steps:

- Example: For code "035", the remote will blink 10 times, then 3 times, then 5 times,
- To identify the 3-digit VCR code, press [VCR], then [SELECT] in step 1, then press [INFO].
- To identify the 3-digit DVD code, press [DVD], then [SELECT] in step 1, then press [INFO]. To identify the 3-digit AUDIO code, press [AUDIO], then

9. ALL SmartKey®

[SELECT] in step 1, then press [INFO].

Once you have programmed the remote to operate your electronic devices, you can press the [ALL] SmartKey® to turn your Cable set-top terminal and TV on / off with one button press. You can also program the [ALL] button to turn on / off additional electronic devices and / or tune your TV to its correct output channel.

## Programming the [ALL] SmartKey®

- 1. Press [ALL], then [SETTINGS] together until the [CBL] button illuminates.
- 2. Enter one of the following options on the keypad of the [0] - Turns on / off CBL + TV (default setting)
- [1] Turns on / off CBL + TV and tunes TV to output
- Channel 3.

## [2] - Turns on / off CBL + TV and tunes TV to output

Synergy™ V RT-U60C / RT-U62CP

2. If you have a TV that's operated by remote control, it is

### recommended that you plug it directly into a wall outlet instead of the cable set-top terminal 3. If you have any questions concerning the brand, model or

## Frequently Used Terms

AUDIO Devices - Audio receivers, amplifiers, CD players that you can program your remote to operate.

DVR - Digital Video Recorder.

Default Setting - How your remote is set when you receive it from your cable operator.

Fast-Rotation - The power / mode buttons will illuminate in a

CBL...) repeated every 1/3 second. Fast-rotation occurs when the remote is receiving keypresses to program it to your Mode - The device the remote is set to operate (ex. Cable,

Program (Setup) - The process of teaching your remote control to operate your electronic devices.

sequence (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...) repeated every 1 second. Slow-rotation illumination occurs when the remote is in the programming mode, waiting for the next entry on the keypad of the remote. TV Output Channel - The channel your TV needs to be set on

## Synergy™ V RT-U60C / RT-U62CP

- Channel 2. [3] - Turns on / off CBL + TV and tunes TV to output Channel 4.
- [10] Turns on / off CBL + TV + VCR + DVD [4] - Turns on / off CBL + TV + VCR + DVD and tunes
- TV to output Channel 3. [5] - Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 2.
- [6] Turns on / off CBL + TV + VCR + DVD and tunes
- [11] Turns on / off CBL + TV + VCR + DVD + AUDIO [7] - Turns on / off CBL + TV + VCR + DVD + AUDIO and
- tunes TV to output Channel 3. [8] - Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 2.

### tunes TV to output Channel 4. [12] - Turns on / off CBL + TV + AUDIO

- [13] Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 3 [14] - Turns on / off CBL + TV + AUDIO and tunes TV to
- output Channel 2 [15] - Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 4

### blink 3-times and go out. Using the [ALL] SmartKey®

When pressing the [ALL] SmartKey®, be sure to keep the remote control aimed at your electronic devices until your electronic devices turn on or / off.

Whenever the [ALL] SmartKey® is pressed, the mode of

the remote control will automatically switch back to Cable.

3. As soon as you select an option, the [CBL] button will

## 10. Volume Control

When you first program your remote, volume / mute are controlled through your TV (except AUDIO which defaults

to the AUDIO device). The volume control options in each

## b. Press [CH +] to advance to next channel # setting.

TV TV (default), Cable or Audio. VCR TV (default), Cable or Audio. TV (default), Cable or Audio. AUDIO device (default), Cable or TV.

mode of the remote are :

CBL

- To control volume / mute through your Cable set-top terminal in the remote's Cable mode.
- 1. Press [CBL], then [SELECT] together until the [CBL] button illuminates
- 2. Press [VOL +], then [CBL] for Cable volume. The [CBL] button will blink 3-times and go out.

## [MOD] (Movies-On-Demand), [NEWS], [HELP](may be labeled differently on some models). Each of these

## may come pre-tuned to channels or functions selected by your cable operator. If they have not been pre-tuned by

- 1, 12, 123, 1234, 17, follow these steps:
- 2. Enter each channel as follows (ex. assumes 4-digit
- channel format) a. Enter 1st channel # - 0001.

- For example, to program the [MOD] button to cable channels

### To return volume control to your TV, repeat step 1, then until the [CBL] button illuminates. press [VOL +], then [TV] in step 2.

## 11. Channel Memory Buttons - [MUSIC], [MOD], [NEWS], [HELP] Your remote has 4 Channel Memory Buttons - [MUSIC],

### buttons can store up to 5 cable channels. Each cable channel can be up to 5-digits. Some or all of your remote's Channel Memory Buttons

### your cable operator, they can be programmed as follows: **Programming Channel Memory Buttons**

1. Press [MOD], then [CBL] together until the [CBL] button

### and [HELP] buttons. Follow the example in step 1,but press [MUSIC] or [NEWS] or [HELP], then [CBL] together

c. Enter 2nd channel # - 0012.

e. Enter 3rd channel # - 0123.

g. Enter 4th channel # - 1234.

Enter 5<sup>th</sup> channel # - 0017.

- **Using Channel Memory Buttons** Using the above programmed channels as an example..
- 1. Press [MOD] Cable set-top terminal tunes to channel

2. Press [MOD] again - Cable set-top terminal tunes to

- channel 0012. 3. Press [MOD] again - Cable set-top terminal tunes to
- 4. Press [MOD] again Cable set-top terminal tunes to channel 1234.
- 5. Press [MOD] again Cable set-top terminal tunes to channel 0017 6. Press [MOD] again - Cable set-top terminal tunes to
- channel 1 .... repeat. Whenever a Channel Memory button is pressed, the

When pressing the Channel Memory Buttons, be sure to

keep the remote control aimed at your Cable set-top

## function of the transport buttons will automatically switch

being operated. Press Mode, then. CBL - for Cable mode for TV mode for VCR mode CBL & TV on / off (programmable) for DVD mode AUDIO - for Audio mode Individual device on / off power Displays Application Menu Program Guide Display channel information Page +/- through Moves through on-screen choices (▲, ▼, ◀, ▶) on-screen displays, Program Guide Display set-top terminal settings Selects on-screen choice On-screen decision buttons В Hides interactive screens Day ◀/▶ in Program Guide (Passport) Recall favorite channel On-screen HELP Recall last channel Listing of your recorded programs Replay last 8-seconds of a program Return to live TV programming 5 LIST LIVE Fast-forward (3 speeds) Rewind (3 speeds) 000 Record a program Stop recording a program PANSE 0 Function set by cable operator 2 3 PIP on / off 4 5 6 7 8 9 Play a program S O SNIER Pause program being watched Swap PIP & and main screen Selects video source Function set by Cable Operator Move PIP screen Enter channel # (Passport)

## 15. Using Your Synergy™ V - Universal / DVR Remote Control Important: The following diagram shows how to use the buttons on your remote control to operate the DVR and PIP functions of your Explorer® digital

set-top terminal. To access these functions, set the remote control to its Cable mode by pressing the [MODE] button, followed by the [CBL] button. Illuminate / select electronic device

Channel Memory Buttons (may be labeled differently or pre-set PIP channel + / by cable operator on some models)

# Synergy™ V RT-U60C / RT-U62CP

be TV channel 2 or 4). If you have any questions concerning

your TV output channel, contact your cable operator. Or, with

your cable set-top terminal turned on, try setting your TV to

Transport Functions - These are the [STOP], [PLAY], [FWD],

[REW], [PAUSE] and [REC] buttons. In the remote control's

Cable mode, these buttons operate your Cable set-top features.

In the remote control's VIDEO mode, these operate your VCR

channel 2, 3 or 4 to obtain a clear picture.

VIDEO Devices - VCR or DVD players.

© 2004, Contec Corporation

Point and Press® Memory Guard® and SmartKey® are

Explorer® is a registered trademark of Scientific-Atlanta, Inc.

Voyager® is a registered trademark of Pioneer New Media

Download from Www.Somanuals.com. All Manuals Search And Download.

registered trademarks of Contec Corporation

Rev. 01/04

Technologies, Inc.

U.S. Patent 6,507,306

or DVD functions.

operation of your cable set-top terminal, contact your

Electronic Components / Devices - The various electronics device the remote is designed. These include cable set-top terminals, TVs, VCRs, DVDs, audio-video receivers, amplifiers

fast sequence (i.e. CBL → TV → VCR → DVD → AUDIO →

TV, VCR, DVD, Audio) PIP - Picture-in-picture functionality through your Cable set-

Slow-Rotation - The power / mode buttons illuminate in a slow

for proper Cable reception (most often TV channel 3, but may

# [9] - Turns on / off CBL + TV + VCR + DVD + AUDIO and

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com