

Synergy® V Model RT-U61C/RT-U63CP Universal / DVR Remote Control



Programming And Operating Instructions

© 2006, Contec, LLC, Rev. 11/06

1. Introduction

Your Synergy® V Universal / DVR remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

CABLE	Cable set-top terminals
TV	Televisions
VCR	VCR
DVD	DVD
AUDIO	Audio receivers, amplifiers, CD players

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

2. Before Getting Started

Some of the special features and buttons on your remote control are as follows

Point and Press® Programming

Lets you program your TV, VCR, DVD, AUDIO devices without using codes. For more information, see sections 5 and 14.

[ALL] SmartKey®

Turns your CABLE set-top terminal and TV on / off with one button press. [ALL] can also be programmed to turn on / off additional electronic devices, or automatically set your correct TV output channel. For more information, see section 9.

[MODE]

Indicates which mode (i.e. CBL, TV, VCR, DVD, AUDIO) the remote is currently operating in by illuminating the power button. To change to a different mode, press [MODE], then the power button for the electronic device you wish to operate. For more information, see Section 15.

Memory Guard®

Eliminates reprogramming after battery changes.

3. Installing / Replacing Batteries

Install two (2) new AA Alkaline batteries. Properly match the + / - ends of the batteries with the diagram in the battery compartment.

When the batteries become low and need to be replaced, the [CBL], [TV], [VIDEO], [AUDIO] buttons will not illuminate normally, or at all during use, and the remote will no longer operate your devices. When this occurs, replace the existing batteries with two (2) new AA Alkaline batteries to restore normal operation to the remote. For more information, see Section 14.

4. Programming Your Cable Set-Top Terminal

Your remote control is pre-programmed to operate the Scientific Atlanta Explorer® 8000 digital set-top terminal. To operate a different cable set-top terminal, look up the brand and model in the Cable Setup Code list and follow these steps :

- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL).
- From the Cable Setup Code list, locate the 3-digit code for your brand / model and enter it on the keypad of the remote control. The set-top terminal will turn off.
- Then, press [SEL] to lock in the code. The power / mode buttons will blink 3-times and go out.

Cable Setup Codes

Motorola	DCT, CFT2200	002
	CFT 2100, CFT 2000	002
	DCT 62xx series DVR terminals	002
Jerold	DL4, DP(V), DQN(V), DPBB	003
Scientific Atlanta	Explorer® 8000 (w/o Day ◀, ▶)	412
	Explorer® 8000 (with Day ◀, ▶)	413*
Pace	510 Digital	412
	HD Digital	010 412

Pioneer	Voyager™	004
	BA-V1000, BA-V2000	007
Samsung	SMT-H3050	412
Tocom	5503VIP, 5507, 5508	008
Zenith	MM2500	009
	Digital	013

* Supports Explorer® 8000 set-top terminals running Passport™ software with Day ◀ / ▶ functionality in Electronic Program Guide.

5. Programming Your TV, VCR, DVD and AUDIO Devices

Code Entry Programming

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).
- a. To program your TV, locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off. If multiple codes are listed for your brand, you may have to try several different codes until your TV turns off.
b. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].
1. If the TV turns back on, press [SEL] to lock in the code. The power / mode buttons will blink 3-times and go out.
Or
2. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [SEL] to lock in the code. The power / mode buttons

will blink 3-times and go out.

- To program your VCR refer to the VCR / DVD Setup Code lists and repeat steps 2 and 3 above.
- To program your DVD refer to the VCR / DVD Setup Code lists and repeat steps 2 and 3 above.
- To program your AUDIO equipment, refer to the AUDIO Setup Code list and repeat steps 2 and 3 above.

Point and Press® Programming

This method allows you to program the remote control without using codes. Instead, the remote control automatically finds the correct command that you select in a variety of codes until you find the code that operates your device. You then lock in the correct code as described below.

The following instructions describe how to program your remote control using the [CH +] or [CH -] buttons ("Power" function during programming). You may also program your remote control using other buttons / functions as described in Section 14. When using this method, there are several important points to remember:

- The order in which you program your electronic devices is not important.
- There may be several codes that turn your electronic devices on / off (or perform other functions). Once you lock-in a code, be sure to check the available functions for that device (i.e. TV - Vol +/-, Mute, TV Input (Video Source button), VCR - Play, Stop., DVD - Play, Stop., AUDIO - Vol +/-, Mute) to see if they are operating.
- While the remote is searching for the correct setup code(s) for your electronic devices, it is possible that other (previously programmed) devices may turn on / off (or perform other functions). If this occurs, continue pressing the [CH +] or [CH -] buttons (or the buttons described in Section 14) until you find the correct code for the device you are programming.
- It may take several minutes for the remote to find the correct code that turns your device off (or performs another selected function). During this time, the power / mode buttons will illuminate in fast-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

Programming your electronic devices using the [CH +] or [CH -] buttons ("Power" function during programming)..

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).
- Press and hold the [CH +] button until one device turns off. While you are pressing the [CH +] button, the power / mode buttons will illuminate in fast-rotation. As soon as one device turns off, release the [CH +] button.
- Press [MUTE]. If the device that turned off...
a. Turns back on, press [SEL] to lock in this code. The power / mode buttons will blink 3-times and go out.
Or
b. Does not turn back on, press [CH -] one step at a time until that device turns back on. Each time you press the [CH -] button, the power / mode buttons will illuminate once in reverse fast-rotation (AUDIO → DVD → VCR → TV → CBL).
Once you have found a code that turns the device on / off, press [SEL] to lock in this code. The power / mode buttons will blink 3-times and go out.
- Repeat steps 2 to 4 above for each of the remaining electronic devices you wish to program the remote to operate.

6. Programming Your TV / VCR or TV / DVD Combination

- First, turn on your TV / VCR or TV / DVD combination device and install a VHS tape or DVD.
- Next, program your remote to operate the TV functions of your combination device.
Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol +/-, Mute) of your combination device.
- Last, program your remote to operate the VCR or DVD functions of your combination device.
Using the Code Entry Programming method described in

Section 5, enter, lock and test each 3-digit VCR or DVD Setup Code for your brand until a code is found that operates the VCR or DVD transport functions (Play, Stop, FF, Rew, Pause, Rec) functions of your combination device.

Before you can test for the correct VCR or DVD setup code, you must first press the [MODE] button, then the [VCR] or [DVD] button to put the remote in its VCR or DVD mode.

7. Programming Your TV / VCR / DVD Combination

- First, turn on your TV / VCR / DVD combination device and install a VHS tape and DVD.
- Next, program your remote to operate the TV functions of your combination device.
Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol +/-, Mute) of your combination device.
- Next, program your remote to operate the DVD functions of your combination device.
Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit DVD Setup Code for your brand until a code is found that operates the DVD transport functions (Play, Stop, FF, Rew, Pause) of your combination device.
Before you can test for the correct DVD setup code, you must first press the [MODE] button, then [DVD] button to put the remote in its DVD mode.
- Last, program your remote to operate the VCR functions of your combination device.
Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol +/-, Mute) of your combination device.
Before you can test for the correct VCR setup code, you must first press the [MODE] button, then [VCR] button first to put the remote in its VCR mode.

TV Setup Codes

BRAND	CODE
Admiral	026 054 211 213
Advent	072 094 425 447
Adventura	047
Aiwa	214
Akai	053
Amark	023 215
Amstrad	157
Anam	217 218 219 220 221
	222 223
AOC	053 073 095 108
APEX	030 038 427
Audiovox	220 191 168 051
Belcor	073
Bell & Howell	211 213
BenQ	454
Broksonic	165 167
Brokwood	073
Candle	068 091
Centurion	095 107 108
Citizen	068 091 211 213 233
Concerto	073 095
Contec	147
Coronado	023
Craig	223
Crown	023
Curtis Mathes	016 054 107 108 211
	213
Daewoo	051 068 073 095 158
	159 189 191 194 196
	197 198 200 202 204
	205 206 207 209
Daytron	073 095 107 108
Dell	448 094 072
Dumont	073
Electro Home	073 095
Elektra	353
Emerson	016 023 053 064 103
	139 158 159 164 165
	166 167 168 169 392
	400 401 402 408 415
Envision	073 095
ESA	454 456
Fisher	355 356

Funai	047 048 157 168 211
Fujitsu	460
Gateway	426
GE	015 018 042 044 049
	054 055 068 073 090
	092 095 101 102 103
	389 390 396 403 406
	407
Gibralta	023 048 053 068 073
	090 095 107 108 233
	360
Goldstar (LG)	023 053 068 073 090
	107 108 233 360 361
	104
Gradiente	233
Grundig	443
Go Video	072
HP	073 095
Hall Mark	023 068 095 096 097
Hitachi	096 099 100
	453
Hyundai	364
Inkel	450 461 456
Insignia	039 053 068 073 092
JC Penney	095 102 355
	062
Jensen	104 105 106 396 397
JVC	410
	073 095
Kawasho	023
KMC	023 053 233 366
KTV	445 168
Konka	211 213
Kurazai	023 053 068 073 090
LG (Goldstar)	107 108 233 360 361
	211 213
Lodgenet	211 213
Logik	068 073 095
Luxman	024 026 157 345 355
LXI	388
	459
Mag	023 068 071 072 073
Magnavox (Philips)	089 090 091 092 093
	094 134 385 387 397
	404 419
Majestic	211 213
Marantz	053 107 108 109
Maxent	426

Megatron	215
Memorex	090 211 213 355 388
	405 423
MGA / Mitsubishi	053 068 073 090 095
	107 109 110 216 384
	394 395 398 399 417
	108
Montgomery Ward	022 023 026 053 071
	072 108 211 213
	028 068 090 108 200
NEC	426
Net TV	455
Norcent	019 159 160 161 162
Orion	163 382
	042 043 044 045 046
Panasonic	429
	023 053 068 071 072
Philco	023 068 071 072 073
Magnavox (Philips)	089 090 091 092 093
	094 134 385 387 397
	404 419
Pilot	073 094 233
Pioneer	111 144 363
Polaroid	384 394
Portland	023 068
ProScan	055 070
Prima	072
Proton	090 371 372
Protron	457
Proview	459
Pulsar	073
Quasar	044
Radio Shack	073
Realistic	022 166 168
RCA	042 052 053 054 055
	069 070 416 068
Sampo	090 108
Samsung	015 016 017 023 031
	090 107 108 134 147
	151 153 386 411
	423 424
Sansui	353 355 356 376 377
Sanyo	090 108 168
Scott	023 031 038 039 068
Sears	353 355 356 030
	016 022 023 024 025
Sharp	026 027 028 029 393

Signature 2000	395 409
Sony	023 026 108 211 213
Soundesign	014 020 021 178
Squareview	091
Superscan	157
Supra-Macy	419
Sylvania	380
	068 071 072 090 091
	093 107 108 157 158
	419 092 456
Symphonic	047 157
Tatung	444 446
Techwood	068
Teknika	023 068 072 091 168
	213
Telerent	023 213
Tera	381
Tevion	065 414
TMK	068 090
Toshiba	030 031 038 039 423
Totevision	233
Universal	068 102
Vidtech	068
ViewSonic	428
Vizio	095 454
Wards	068 090
White Westinghouse	211 408 449 458 020
XR-1000	213
Yamaha	068
York	090 108
Zenith	047 048 049 050 051
	391 405 406 434

VCR Setup Codes

BRAND	CODE
Admiral	066 075
Aiwa	132
Akai	269 275 336 351 352
	354
Audio Dynamics	243 291
Bell & Howell	238 357
Broksonic	333 337 358 359
Canon	086 362
Citizen	033 172 247 331

Colortyme	291
Craig	172 363
Curtis Mathes	086 112 247 291
Daewoo	033 343 344 345 346
	347 342
Daytron	345 365
DBX	243 291
Dynatech	132
Emerson	033 086 132 326 331
	332 333 334 335 336
	337 338 339 340 341
	342
Fisher	035 081 357 363 238
Funai	132
GE	086 172 174 170
Go Video	348 349 350 331
Goldstar (LG)	247 331
Harman Kardon	291
Hitachi	078 132
Instant Replay	

Audio Setup Codes

BRAND	CODE			
Compact Disc				
ADC	318			
Akai	249	261		
Aiwa	176			
Carver	176	155		
Crown	154			
Denon	273			
Fisher	230	274		
Goldstar (LG)	308			
Harman Kardon	315			
JVC	297			
Kenwood	131	176	274	289 299
Krol	176			
LG (Goldstar)	308			
Magnavox (Philips)	037	084	119	296 433
Mission	176			
Mitsubishi	245	249		
NAD	182	231	290	
Nakamichi	264	319		
NEC	235			
NSM	176			
Onkyo	300			
Panasonic	184	266	437	
Philips (Magnavox)	037	084	119	296 433
Pioneer	116	127		
Quasar	184			
Radio Shack	186	190	266	279 289
RCA	295	037	119	
Sanyo	230	309		
SAE	176			
Scott	186			
Sharp	288	289		
Sony	067	292	293	
Soundesign	148	242	311	320
STS	318			
Sylvania	084			
Teac	186			
Technics	184	208	317	
Toshiba	290			
Yamaha	280			
Receiver / Amplifier				
Adcom	325			

Aiwa	301			
Akai	142			
Bose	302	440		
Carver	155	180		
Denon	262	307		
Everquest	136			
Fisher	063	180		
Fosgate Audionics	305			
Goldstar (LG)	036			
Harman Kardon	130	257	305	306
Hitachi	240			
Jensen	140			
JVC	114	241		
Kenwood	063	277	444	
LG (Goldstar)	036			
Luxman	281			
Magnavox (Philips)	080			
Marantz	282	283	284	285
NAD	286			
Onkyo	126	171	304	
Optimus	142	229	321	
Panasonic	032	074	438	441
Parasound	323			
Philips (Magnavox)	080	463		
Pioneer	123	137	251	298
Quasar	032			
Radio Shack	229	267		
RCA	439			
Realistic	226	268		
Rotel	310			
Sansui	283			
Sanyo	195			
Scientific Atlanta	312			
Scott	272			
Sharp	294			
Sherwood	229	267		
Sony	041	057	232	287 442
Soundesign	083	088	239	265
SSI	313			
Taekwang	142			
Teac	314	316		
Technics	032			
Wards	063			
Victor	114	241		
Yamaha	145	254	303	
Zenith	036	083	088	239 265

8. Code Number Read-Back

To identify the 3-digit setup codes stored under the Point and Press® programming method, follow these steps :

To identify the TV setup code...

1. Press [TV], then [SEL] together until the [TV] button illuminates.

2. Press [INFO]. The mode buttons will "blink back" the code numbers, with a 1-second interval between each digit of the code. Please note that for the numeric "0", the mode buttons will illuminate blink in fast- sequence.

Example : For code "130", the remote will blink 1 time, then 3 times, then in a fast-sequence for the 0.

To identify the 3-digit VCR code, press [VCR], then [SEL] in step 1, then press [INFO].

To identify the 3-digit DVD code, press [DVD], then [SEL] in step 1, then press [INFO].

To identify the 3-digit AUDIO code, press [AUDIO], then [SEL] in step 1, then press [INFO].

9. ALL SmartKey®

Once you have programmed the remote to operate your electronic devices, you can press the [ALL] SmartKey® to turn your Cable set-top terminal and TV on / off with one button press. You can also program the [ALL] button to turn on / off additional electronic devices and / or tune your TV to its correct output channel.

Programming the [ALL] SmartKey®

1. Press [ALL], then [SETTINGS] together until the [CBL] button illuminates.

2. Enter one of the following options on the keypad of the remote :

[0] - Turns on / off CBL + TV (default setting)

[1] - Turns on / off CBL + TV and tunes TV to output Channel 3.

[2] - Turns on / off CBL + TV and tunes TV to output

Channel 2.

[3] - Turns on / off CBL + TV and tunes TV to output Channel 4.

[10] - Turns on / off CBL + TV + VCR + DVD

[4] - Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 3.

[5] - Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 2.

[6] - Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 4.

[11] - Turns on / off CBL + TV + VCR + DVD + AUDIO

[7] - Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 3.

[8] - Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 2.

[9] - Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 4.

[12] - Turns on / off CBL + TV + AUDIO

[13] - Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 3.

[14] - Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 2.

[15] - Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 4.

3. As soon as you select an option, the [CBL] button will blink 3-times and go out.

Using the [ALL] SmartKey®

When pressing the [ALL] SmartKey®, be sure to keep the remote control aimed at your electronic devices until your electronic devices turn on or / off.

10. Volume Control

Whenever the [ALL] SmartKey® is pressed, the mode of the remote control will automatically switch back to Cable.

Whenever the [ALL] SmartKey® is pressed, the mode of the remote control will automatically switch back to Cable.

mode of the remote are :

CBL	TV (default), Cable or Audio.
TV	TV (default), Cable or Audio.
VCR	TV (default), Cable or Audio.
DVD	TV (default), Cable or Audio.
AUDIO	AUDIO device (default), Cable or TV.

To control volume / mute through your Cable set-top terminal in the remote's Cable mode...

1. Press [CBL], then [SEL] together until the [CBL] button illuminates.

2. Press [VOL +], then [CBL] for Cable volume. The [CBL] button will blink 3-times and go out.

To return volume control to your TV, repeat step 1, then press [VOL +], then [TV] in step 2.

11. Channel Memory Buttons - [MUSIC], [MOD], [NEWS], [HELP]

Your remote has 4 Channel Memory Buttons - [MUSIC], [MOD] (Movies-On-Demand), [NEWS], [HELP] (may be labeled differently on some models). Each of these buttons can store up to 5 cable channels. Each cable channel can be up to 5-digits

Some or all of your remote's Channel Memory Buttons may come pre-tuned to channels or functions selected by your cable operator. If they have not been pre-tuned by your cable operator, they can be programmed as follows:

Programming Channel Memory Buttons

For example, to program the [MOD] button to cable channels 1, 12, 123, 1234, 17, follow these steps:

1. Press [MOD], then [CBL] together until the [CBL] button illuminates.

2. Enter each channel as follows (ex. assumes 4-digit channel format) :

- a. Enter 1st channel # - 0001.
- b. Press [CH +] to advance to next channel # setting.

c. Enter 2nd channel # - 0012.

d. Press [CH +] to advance to next channel # setting.

e. Enter 3rd channel # - 0123.

f. Press [CH +] to advance to next channel # setting.

g. Enter 4th channel # - 1234.

h. Press [CH +] to advance to next channel # setting.

i. Enter 5th channel # - 0017.

3. Press [MOD] to store the above channels. The [CBL] button will blink 3-times and go out. To store fewer than 5 channels, you can press the [MOD] button any time after entering a complete channel number.

4. Repeat the above steps to program the [MUSIC], [NEWS] and [HELP] buttons. Follow the example in step 1, but press [MUSIC] or [NEWS] or [HELP], then [CBL] together until the [CBL] button illuminates.

Using Channel Memory Buttons

Using the above programmed channels as an example...

1. Press [MOD] - Cable set-top terminal tunes to channel 0001.

2. Press [MOD] again - Cable set-top terminal tunes to channel 0012.

3. Press [MOD] again - Cable set-top terminal tunes to channel 0123.

4. Press [MOD] again - Cable set-top terminal tunes to channel 1234.

5. Press [MOD] again - Cable set-top terminal tunes to channel 0017.

6. Press [MOD] again - Cable set-top terminal tunes to channel 1.... repeat.

Whenever a Channel Memory button is pressed, the function of the transport buttons will automatically switch back to Cable.

When pressing the Channel Memory Buttons, be sure to keep the remote control aimed at your Cable set-top

terminal to ensure the full channel numbers are received in their entirety.

If you are using your Synergy® V remote to operate a Cable set-top terminal other than the Explorer® 8000 model, you may only have to enter channels in a 3-digit format (ex. 012).

12. Video Source

This button changes the input source of your electronic devices. In the remote's Cable mode, this operates a Cable function. In the remote's TV mode, this button changes the Input Source (Input 1, Input 2...) on your TV. In the remote's VCR mode, this button changes the TV / VCR Input on your VCR.

You can program this button so that in the remote's Cable mode, [VIDEO SOURCE] will operate the Input function on your TV or VCR, eliminating the need to change modes on the remote.

To program [VIDEO SOURCE] to operate your TV Input function in the remotes cable mode...

1. Press [VIDEO SOURCE], then [SEL] together until the [CBL] button illuminates.

2. Press [TV]. The [CBL] button will blink 3-times and go out.

Note : You can also press [VCR] in step 2 above to operate the TV / VCR function on your VCR. Or press [CBL] to return to the normal CBL Video Source function.

13. Reset

To reset your remote control to its factory default settings...

1. Press [CBL], then [SEL] together until the [CBL] button illuminates.

2. Press [0]. The [CBL] button will blink 3 times and go out.

Reset returns the ALL SmartKey®, Volume / Mute, Mode Lock™, features to their factory default settings.

14. Additional Programming Information, Troubleshooting, Terms

Additional Programming Information

1. The power / mode buttons will illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...) while the remote is in a programming mode. In the absence of a keypress entry, the power / mode buttons will stop illuminating after 45 seconds and the remote will exit the programming mode.

2. When programming the remote control using the [CH +] or [CH -] buttons (Power function) in the Point and Press® Programming method, you may find a code that turns a device off but not back on. If this happens...

a. The correct code has not been found as you may have a code that operates some but not all of the functions of your device. Continue pressing [CH +] until your device turn on.

OR

b. You may have gone past the correct matching code. Try pressing [CH -] one press at a time until you find a code that turns your device back on.

3. When using the Point and Press® Programming method, you can also program your remote using buttons other than the [CH +] or [CH -] as described in Section 5 as follows:

a. [VOL +] - to "go forward" through the codes using the "VOL + function on your devices.

b. [VOL -] - to "go back" through the codes using the "VOL - function on your devices.

Note : When you find the correct code, the volume of the device being programmed will increase or decrease.

c. [▲] - to "go forward" through the codes using the "CH + function on your devices.

d. [▼] - to "go back" through the codes using the "CH - function on your devices.

function on your devices.

Note : When you find the correct code, the channel of the device being programmed will increase or decrease.

e. [▶▶] - to "go forward" through the codes using the "Fast Forward" function on your devices.

f. [◀◀] - to "go back" through the codes using the "Rewind" function on your devices.

Note : When you find the correct code, the fast-forward or rewind function of the device being programmed will be performed. To simplify programming using these buttons, insert a VHS tape or DVD in the device being programmed.

You can also program your remote using the other available functions as follows :

a. Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

b. In this order, carefully press [0], [0], [0], [CH+] and [VOL+]. The power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

c. You can now program your remote using the [CH+], [CH -], [VOL+], [VOL -], [▲], [▼], [FFWD], [REW], [PLAY], [STOP], [REC], [PAUSE], [LAST], [FAV], [0] - [9] buttons. When you find the correct code, the function associated with the selected button will be performed.

4. Your remote is equipped with a Point and Press® Programming label on the back of its case. This will help you quickly program the remote without using codes.

Troubleshooting / Tips

1. If the same button is pressed and held for 45-seconds, your remote control will turn itself off automatically. This extends the battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

2. When the batteries become low and need to be replaced,

the [CBL], [TV], [VCR], [DVD] and [AUDIO] buttons will not illuminate normally or at all during use, and the remote will no longer operate your devices.

When this occurs, replace the existing batteries with two (2) new AA Alkaline batteries to restore normal operation to the remote. If your remote still does not operate, you may want to check to see if any of the buttons are stuck in their "down" position.

3. If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.

4. If you have any questions concerning the brand, model or operation of your cable set-top terminal, contact your cable operator.

Frequently Used Terms

AUDIO Devices - Audio receivers, amplifiers, CD players that you can program your remote to operate.

DVR - Digital Video Recorder.

Default Setting - How your remote is set when you receive it from your cable operator.

Electronic Components / Devices - The various electronics device the remote is designed. These include cable set-top terminals, TVs, VCRs, DVDs, audio-video receivers, amplifiers and CD players.

Fast-Rotation - The power / mode buttons will illuminate in a fast sequence (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...) repeated every 1/3 second. Fast-rotation occurs when the remote is receiving keypresses to program it to your electronic devices.

Mode - The device the remote is set to operate (ex. Cable, TV, VCR, DVD, Audio)

PIP - Picture-in-picture

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>