

Continental ***Electric***

INSTRUCTION MANUAL




Two Slice Toaster

**MODEL:
CE23411**

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

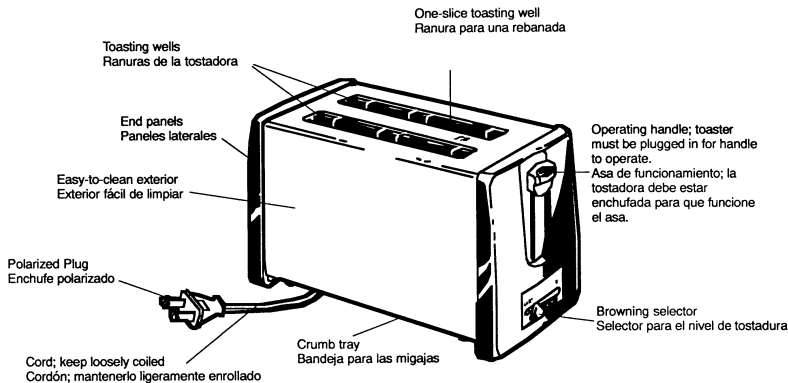

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other type of outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

A short power-supply cord (or cord set) is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

Longer cord sets or extension cords are available from local hardware stores and may be used if care is exercised in their use.

If an extension cord is used,

- (1) the marked electrical rating of the cord set or extension cord should be at least as the electrical rating marked on the bottom of the appliance,
- (2) if the appliance is of the grounded type, the extension cord should also be a grounding-type three-wire cord, and
- (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or accidentally tripped over.

IMPORTANT: Before using, operate the toaster without bread in order to burn off residues on the heating elements. When doing this, we suggest that you set the browning selector at a medium setting.

HOW TO USE THIS TOASTER

Adjust the browning selector to the desired setting. Exact settings are difficult to recommend due to personal preference; experiment to suit individual taste. Thick foods and those containing fillings will require a longer toasting time. Turn selector to a medium or high setting to increase time. Some frozen pastries and toaster foods may require two heating cycles for proper results.

Remove all protective wrappings from food before placing in toasting wells. (Avoid toasting torn slices of bread and broken pastries, which may get lodged in toasting wells.) Place bread or toaster food into toasting wells and depress the handle.

When toast or toaster food is ready, it will pop up automatically, and the toaster will switch off.

To reheat, set browning selector to the lowest setting and depress the handle.

NOTE: Do not make adjustments to the browning selector while the toaster is in use. To interrupt the cycle, gently lift the handle. When toasting a single slice, the bread or toaster food must be placed in toasting well marked "ONE SLICE".

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

TO CLEAN: Unplug toaster and allow it to cool fully. **NEVER IMMEDIATELY TOASTER IN WATER OR ANY OTHER LIQUID.**

Clean the crumb tray. To open the crumb tray, tilt the toaster and rest it on its side, grasp the knob and pull. Use a damp sponge or cloth to clean. Close the crumb tray.

CAUTION: TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE, SECURELY CLOSED AND CLEANED OF EXCESS FOOD. ALWAYS UNPLUG THE TOASTER WHEN NOT USING.

EXTERIOR: Wipe surface with a clean, damp cloth. Do not use abrasive cleaners, as they may scratch the surface.

TO STORE: Unplug the toaster and store in its box or in a clean, dry place. Do not put stress on the cord where it enters the unit, as it could cause the cord to fray and break.

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not place this unit in water or other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not use appliance unattended.
6. Unplug from outlet when not in use and before cleaning. Turn control to "0" or "OFF" before unplugging. Allow to cool before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may be hazardous.
9. To reduce the risk of injury, use accessory attachments only if recommended by the appliance manufacturer.

10. Do not use outdoors or while standing in a damp area.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot oil or liquids.
14. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn control to "0" or "OFF", then remove plug from wall outlet.
15. Do not use appliance except as intended.
16. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may cause fire or electrical hazards.
17. A fire may occur if toasters are covered or touching flammable materials including curtains, draperies, walls, etc., when in operation.
18. Do not attempt to dislodge food when toaster is plugged in.
19. Do not place foil-wrapped articles in toaster. Do not place pastry with running-type frosting or open filling in toaster.

SAVE THESE INSTRUCTIONS

Continental Electric 1

Continental ***Electric***


MANUAL DE INSTRUCCIONES



Tostadora de 2 Rebanadas

**MODELO
CE23411**

INSTRUCCIONES DE USO

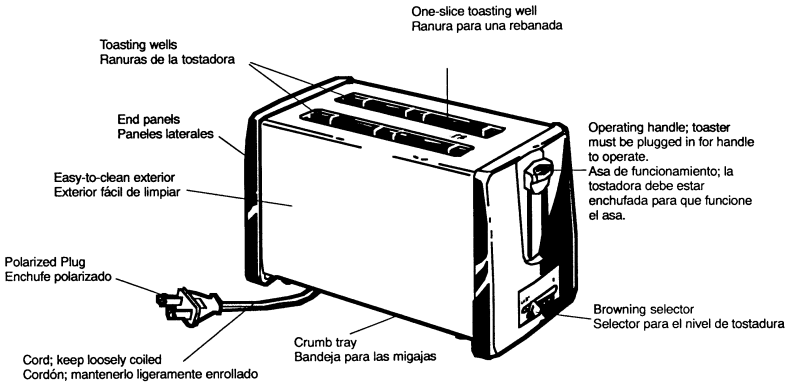

Este artefacto es para USO DOMESTICO SOLAMENTE. Puede ser enchufado en cualquier tomacorriente de corriente alterna de 120 voltios (corriente ordinaria doméstica). No use ningún otro tipo de tomacorriente.

NOTA: Este artefacto tiene un enchufe polarizado (una hoja es más ancha que la otra). Como medida de seguridad, este enchufe sólo debe usarse en un tomacorriente polarizado en un sólo sentido. Si no entrara en el tomacorriente, invierta el enchufe y trate nuevamente. Si aún así no entrara, busque la ayuda de un electricista calificado. No intente anular este dispositivo de seguridad.

Un cordón corto le es provisto para reducir el peligro resultante del enredo o tropezos que causa uno más grande.

Cordones más largos o de extensión están disponibles en ferreterías y pueden ser usados teniendo mucho cuidado en su uso.

Si se usara una extensión,

- (1) la graduación eléctrica deberá ser la misma graduación que se indica en la parte de abajo del artefacto.
- (2) Si el artefacto es de tipo tierra, la extensión deberá ser también un cordón tipo tierra de triple alambre, y
- (3) el cordón largo debe ser arreglado de tal forma que no cuelgue del mostrador o de la mesa, donde pueda ser señalado por un niño o tropezarse.

IMPORTANTE: Antes de usarla, haga funcionar la tostadora sin pan para así quemar todos los residuos de los elementos de calentamiento. Cuando haga esto, le sugerimos que coloque el selector para el nivel de tostado en la posición mediana.

COMO USAR ESTA TOSTADORA

Ajuste el selector de nivel de tostado a la posición deseada. Una posición exacta es difícil de recomendar debido a la preferencia personal; experimente con su gusto individual. Porciones abundantes o aquellas que contengan relleno requerirán un tiempo más largo para tostarse. Seleccione una posición mediana o alta para aumentar tiempo. Algunos pasteles congelados y alimentos para tostar pueden requerir dos ciclos de calentamiento para un resultado adecuado.

Remueva todas las envolturas protectoras de la comida antes de colocarlas en las ranuras de la tostadora. (Evite tostar un pedazo de una rebanada de pan o pedazos de pasteles, lo cual puede quedarse en el interior de las ranuras de la tostadora). Coloque pan u otro alimento para tostar dentro de la tostadora y baje el asa. Cuando la tostada esté lista, saltará automáticamente y la tostadora se apagará.

Para recalentar, ajuste el selector de nivel de tostado a la posición mas baja y baje el asa.

NOTA: No haga ajustes al selector del nivel de tostado mientras la tostadora esté funcionando. Para interrumpir el ciclo, levante suavemente el asa.

Cuando esté tostando una sola rebanada, el pan o tostada debe colocarse en la ranura marcada "ONE SLICE" (una rebanada).

INSTRUCCIONES DE MANTENIMIENTO PARA EL USUARIO

Este artefacto está permanente lubricado y no requiere lubricación adicional durante la vida de la unidad. No contiene piezas que puedan ser reparadas por el usuario. Para servicio remítalo a personas calificadas.

PARA LIMPIARLA: Siempre desenchufe la tostadora y déjela que se enfríe completamente. **¡NUNCA SUMERJA LA TOSTADORA EN EL AGUA O CUALQUIER OTRO LÍQUIDO.**

Limpie la bandeja para las migajas. Para abrir la bandeja para las migajas, incline la tostadora y colóquela sobre un lado, sujete la perilla y hálala. Use una esponja o trapo húmedo para limpiarla. Cierre la bandeja para las migajas.

PRECAUCIÓN: PARA PREVENIR QUE EL MOSTRADOR SE DAÑE, LA TOSTADORA DEBE SER OPERADO CON LA BANDEJA PARA MIGAJAS EN SU LUGAR, CERRADA Y LIMPIA DE EXCESO DE COMIDA. SIEMPRE DESENCHUFE LA TOSTADORA CUANDO NO SE ESTE USANDO.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>