

# COOPER LIGHTING - METALUX®

 
**OCCUPANCY SENSORS**

**CPD-1200H**



**DESIGNATION**

**MS=** Aisle Coverage Occupancy Sensor (120V-277V)

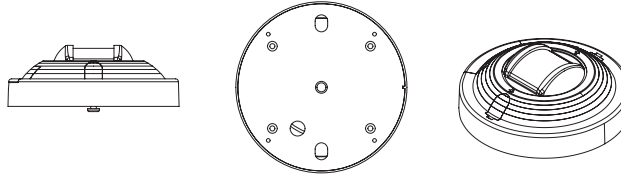

**DESCRIPTION**

CPD-1200 Aisle Coverage Occupancy Sensor (120V-277V)  
(Rectangular Beam, Pattern Coverage)



 
**OCCUPANCY SENSORS**

**CPD-500H**




**DESIGNATION**

**MSO=** 360° Coverage Occupancy Sensor (120V-277V)

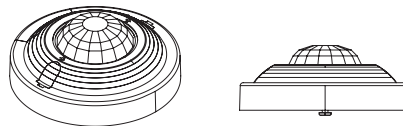

**DESCRIPTION**

 CPD-500 360° Coverage Occupancy Sensor (120V-277V)  
(360° Circular Pattern Coverage)

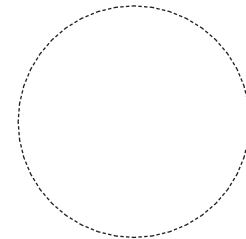

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>