
CRAFTSMAN®

TRACTOR LIFT

Model Number 610.24600

- Provides access to mower deck for easy cleaning and service
- Fits all 1985 through current models of CRAFTSMAN front engine tractors and Zero Turn Mowers
- Can be fitted to most major front engine tractor brands
- Adjustable arms for greater versatility
- Extra heavy duty gauge steel construction
- If you read and follow these instructions, this product can be assembled in approximately 20 minutes
- Assemble unit on cardboard to avoid scratches or damage to parts
- Can easily be assembled by one person
- All fasteners for this Tractor Lift can be purchased at Sears or any hardware store

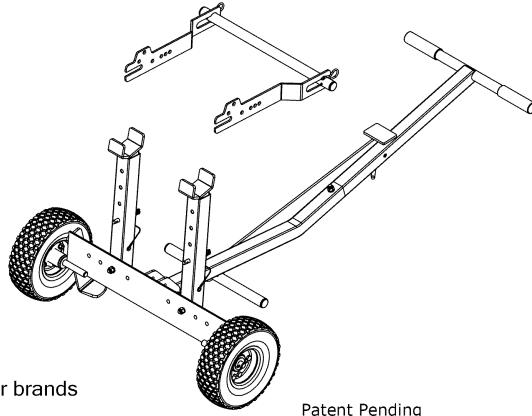



If there are any missing parts, or if you have any questions on assembly, operation, maintenance or safety, please call


1-800-652-6231

WARNINGS

- Always use the stabilizer bar provided when using tractor lift.
 Make sure stabilizer bar is properly in place before starting any work on tractor.
- Read and understand all safety and operating instructions before using the tractor lift. <u>Never</u> allow anyone unfamiliar with these instructions to use the tractor lift.
- Read and understand all safety and operating instructions provided by the tractor's manufacturer before using tractor lift.
- Never lay under the tractor or mowing deck.
- When using lift, keep all bystanders, including children, away.
- This tractor lift must be only used for lifting and lowering to and from a level and stable surface.
- · Never use in wet conditions.
- Do not attempt to lift the front and back of the tractor at the same time.
- <u>Do not</u> use tractor lift as an automotive lift, or for any other use for which it is not intended or designed.
- If tractor lift is bowing while lifting or lowering your tractor, which indicates an overload condition, remove the tractor immediately.
- <u>Do not</u> attempt to lift or lower any power equipment while motor is running.
- Never engage blades while using tractor lift.
- <u>Always</u> disconnect spark plug wire from tractor before beginning any work on tractor.
- <u>Do not</u> exceed the rated capacity of the tractor lift 270#.
- Failure to follow these warnings may result in property damage and/or serious bodily injury.

SAFETY INSTRUCTIONS

- Be sure to read and follow all safety instructions and warnings. Failure to follow these instructions may result in damage to the product and/or serious personal injury.
- Danger of serious personal injury exists. Serious personal injury can occur when using a lifting device.
- <u>Never</u> attempt to ride any vehicle up or down the tractor lift.
- Do not climb onto tractor while tractor is in the elevated position.
- When working on the front of the tractor always place wheel chocks in back of the rear wheels/tires.
- Always raise and lower tractor lift in a controlled fashion; do not allow the tractor to drop too quickly, damage could occur.
- Make sure lifting arms are aligned and set to the proper distance apart so that the equipment being loaded is well balanced on the lift.
- · Do not remove warning decals from product.
- Before each use, always check for any worn, loose, or damaged parts on the tractor lift. If any damage is present, DO NOT USE THE TRACTOR LIFT.
- Periodically check the fasteners to make sure they are still tight and in place.
- Keep lift surface clean by occasionally cleaning with water and any mild detergent.
- Do not add to or try to modify the tractor lift in any way.
 Any modifications will void any warranties.
- Failure to abide by the warnings and read the safety instructions may result in loss of load, damage to lift and/or property, serious personal and/or fatal injury.

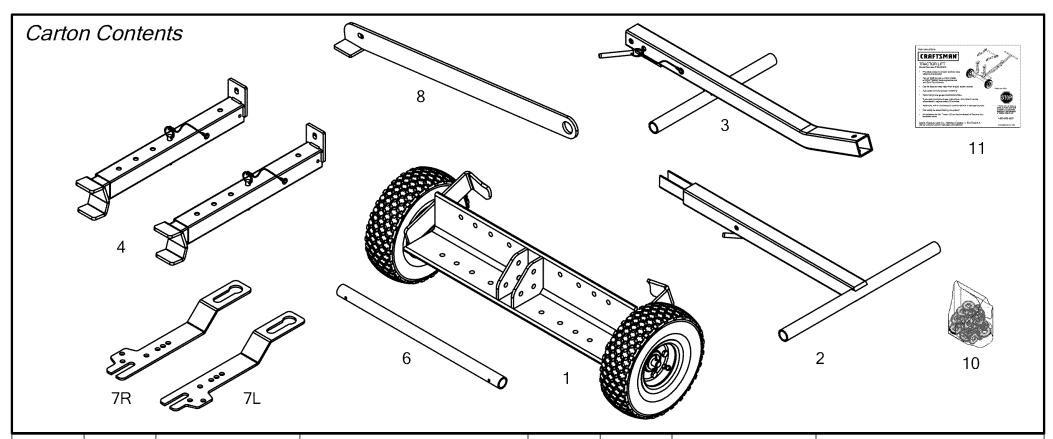

REF NO	QTY	PART NUMBER	DESCRIPTION	REF NO	QTY	PART NUMBER	DESCRIPTION
1	1	51001	Angle Frame Assembly	7L	1	410131	Tractor Mounting Bar - Left
2	1	51002	Handle Top	7R	1	410132	Tractor Mounting Bar - Right
3	1	51003	Handle Bottom	8	1	51006	Stabilizer Bar
4	2	41009	Lift Tube Assembly	10	1	310031	Hardware Bag
6	1	51005	Lift Cross Tube	11	1	310041	Assembly Manual

OPERATION

Tractor Lift can be used out of the box on all Craftsman tractors with bumpers or brush guards. Tractor Lift mounting hardware is provided if your tractor does not have a bumper or brush guard.

TOOLS REQUIRED FOR ASSEMBLY

9/16" Wrench and/or Socket Adjustable wrench


MAINTENANCE

Store unit in a clean dry place.

Recommended tire pressure - 30 PSI.

Before each use:


- Always check tire pressure.
- Always inspect unit for damage. Always check fasteners for tightness.

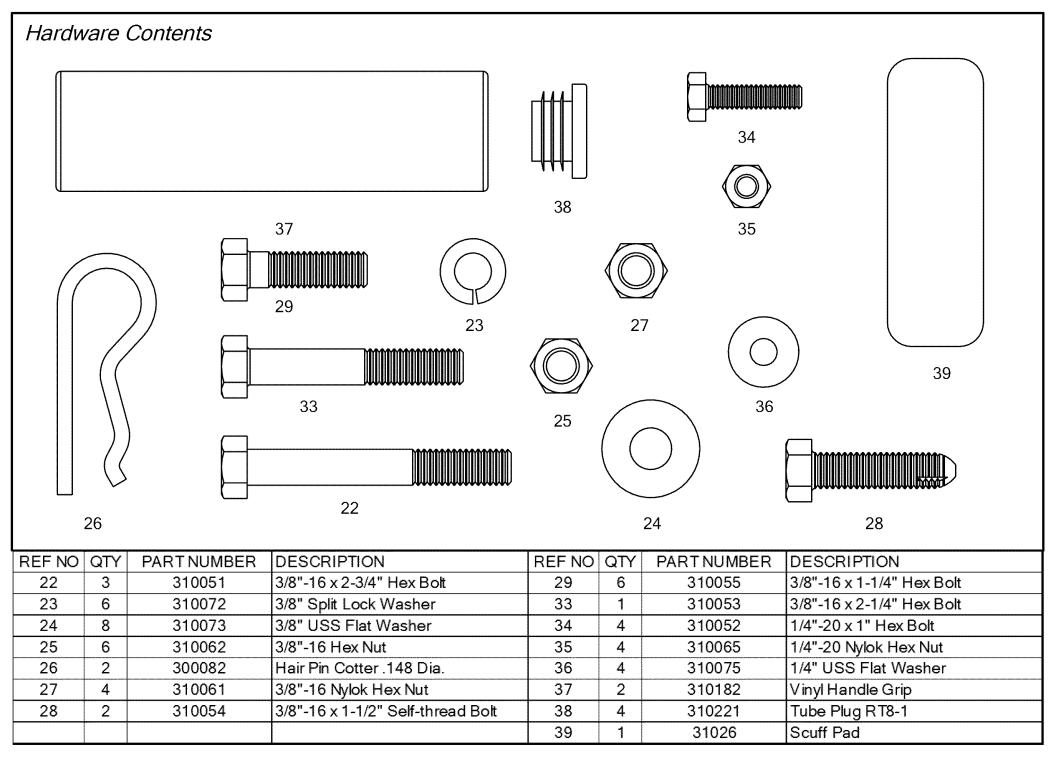

Setting up Lift Mounting Hardware - Tractor Front

Tractor Lift can be used out of the box on all Craftsman tractors with bumpers or brush guards. Tractor Lift mounting hardware is provided. If your tractor does not have a bumper or brush guard, follow the steps below:

Note: Left and Right sides are determined by standing behind tractor looking forward.

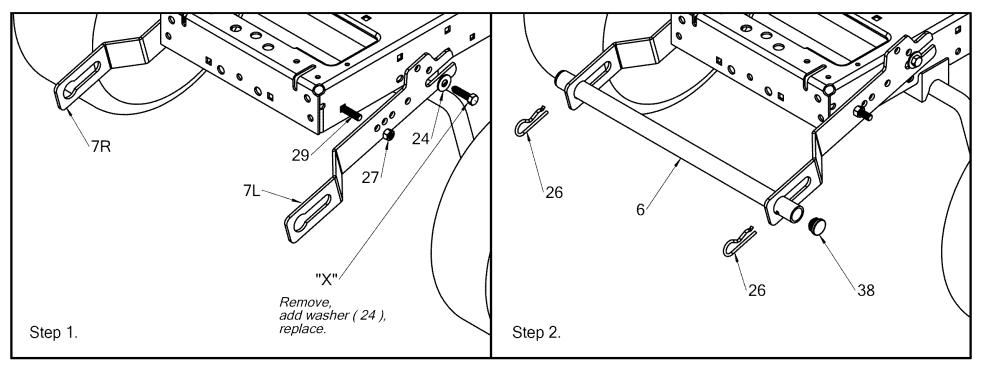

Step 1.

- Remove existing bolt "X" and set aside. If tractor does not have this bolt use supplied 3/8" x 1-1/4" bolt with 3/8 nylok nut.
- Align holes in tractor mounting bars (7R & 7L) to the front left & right side frame holes of the tractor.
- Insert hex head bolt (29) through inside front hole of frame, through tractor mounting bar and secure with nylock nut (27).
- Add flat washer (24) under head of bolt removed in earlier step and reinsert through tractor mounting bar and tighten.
- For LT1000 & LT2000 series tractors, use self-thread bolts (28) in place of bolt (29) and nut (27).

Step 2.

- Push tube plugs (38) into each end of lift tube (6).
- Slide lift tube through cut-out in tractor mounting bars and center.
- Pin lift tube in place with one hair pin cotter (26) on each side of mounting bar.


Note: The mounting bars have been manufactured to attach to the frames of most major front engine tractor brands. Additional hardware has been included for attachment to non-Craftsman brands.

Assemble Tractor Lift

Attach Lift Tubes to Angle Frame

- Lift tubes come pre-assembled. Attach lift tube assemblies (4) to angle frame (1) using bolts (22), flat washers (24), split lock washers (23) and hex nuts (25).
- Secure rear of lift tube assembly (4) to angle frame (1) using bolts (29), flat washers (24), split lock washers (23) and hex nuts (25).


Note: Over-tightening receiver bolts (22) could cause damage to lift tubes (4).

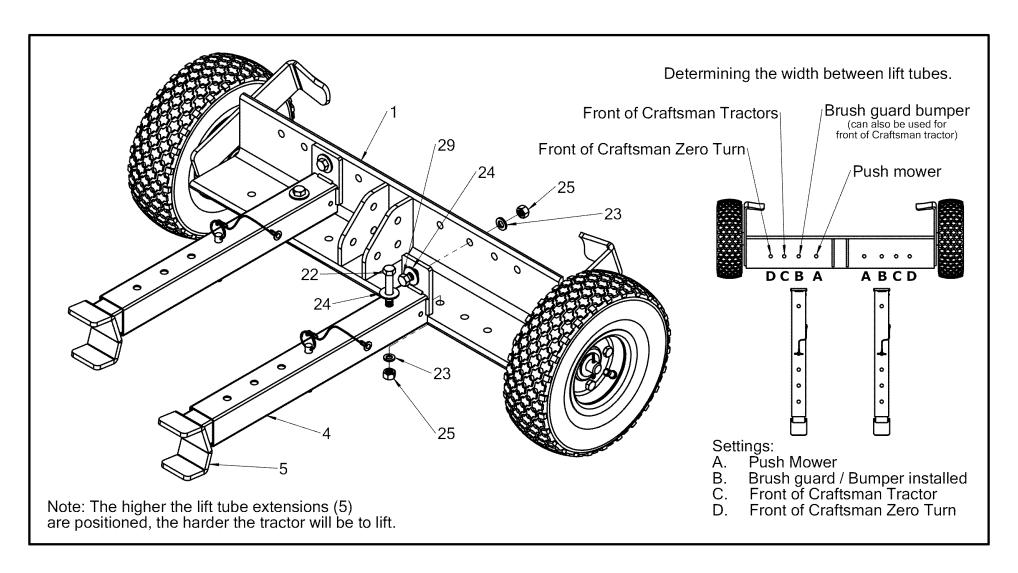

Assemble Tractor Lift


Attach Handle to Angle Frame

Attach handle bottom (3) to angle frame (1) using hex bolt (22), flat washer (24), split lock washer (23) and hex nut (25). Step 1. Step 2. Insert ring grip pin (30), as shown. Insert handle top (2) into handle bottom (3). Secure with hex bolt (33), flat washer (24), split lock washer (23) and hex nut (25). Step 3. Step 4. Place handle grips (37) onto handle top tube (2). A little soapy water will help grip slide onto tube easily. 0 122 124 23 **IF HANDLE CANNOT BE EASILY INSERTED, FLIP HANDLE OVER AND** REINSERT. 38 25 38 Foot Bar Tube Peel off scuff pad (39) 33 backing and adhere to back of handle. Handle Top Tube 37

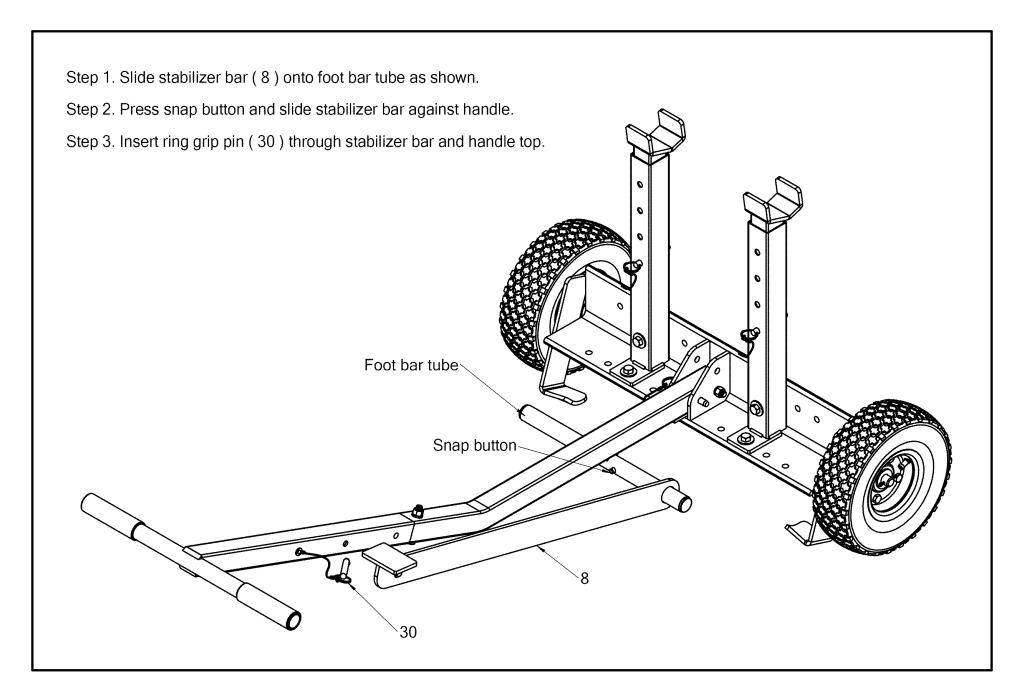

OPERATION

Using the Tractor Lift

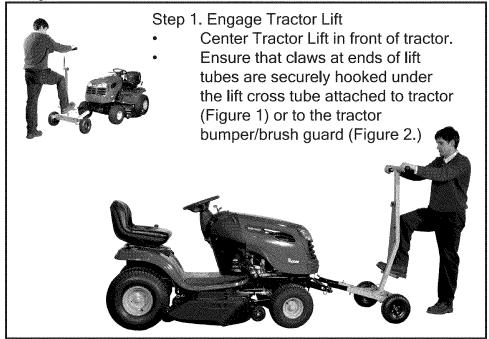

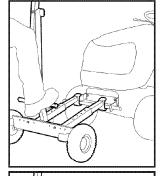


Figure 1.
Properly engaging tractor with mounted lift cross tube.



Figure 2.
Properly engaging tractor with tractor bumper/brush guard.



IMPORTANT: Stabilizer bar MUST be engaged immediately after raising the tractor. See Step 3 on next page for instructions.




Step 3. Engaging Stabilizer Bar

Stabilizer bar MUST be engaged immediately after raising the tractor.

WARNING: Failure to engage stabilizer bar may result in serious personal injury and or property damage.


- Remove ring grip pin (30) from tube handle. Press snap button and slide stabilizer bar (8) from foot bar tube.
- Turn stabilizer bar 180 degrees as shown at bottom of Figure 1.
- Position stabilizer bar under base of unit between wheels.
- Slide stabilizer bar back onto foot bar tube making sure the bar is positioned back over snap button.

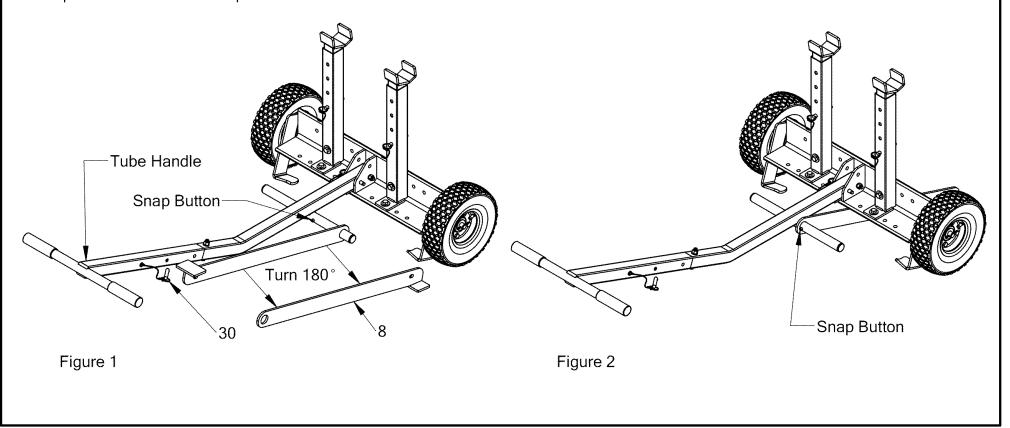

Repair Parts List

MODEL NUMBER - 610.24600

REF. NO.	PART NO.	AMT.	DESCRIPTION
1	51001	1	Body Angle
2	51002	1	Handle Top
3	51003	1	Handle Bottom
4	41009	2	Lift Tube Assembly
5	51004	2	Lift Tube Extension
6	51005	1	Lift Cross Tube
7L	410131	1	Tractor Mounting Bar - Left
7R	410132	1	Tractor Mounting Bar - Right
8	51006	1	Stabilizer Bar
9	310011	2	Tire 4.10/3.50-4
10	310031	1	Hardware Bag
11	310041	1	Assembly Manual
20	310071	4	5/8" SAE Flat Washer
21	300081	2	Cotter Pin 1/8" x 1-1/2"
22	310051	3	3/8"-16 x 2-3/4" Hex Bolt
23	310072	6	3/8" Split Lock Washer
24	310073	8	3/8" USS Flat Washer
25	310062	6	3/8"-16 Hex Nut
26	300082	2	Hair Pin Cotter .148
27	310061	4	3/8"-16 Nylok Hex Nut
28	310054	2	3/8"-16 x 1-1/2" Self-thread Bolt
29	310055	6	3/8"-16 x 1-1/4" Hex Bolt
30	310081	4	3/8" x 2-1/8" Ring Grip Pin
33	310053	1	3/8"-16 x 2-1/4" Hex Bolt
34	310052	4	1/4"-20 x 1" Hex Bolt
35	310065	4	1/4"-20 Nylock Hex Nut
36	310075	4	1/4" USS Flat Washer
37	310182	2	Handle Grip
38	310221	4	Tube Plug RT8-1
39	31026	1	Handle Scuff Pad
40	31019	1	Valco Snap Button

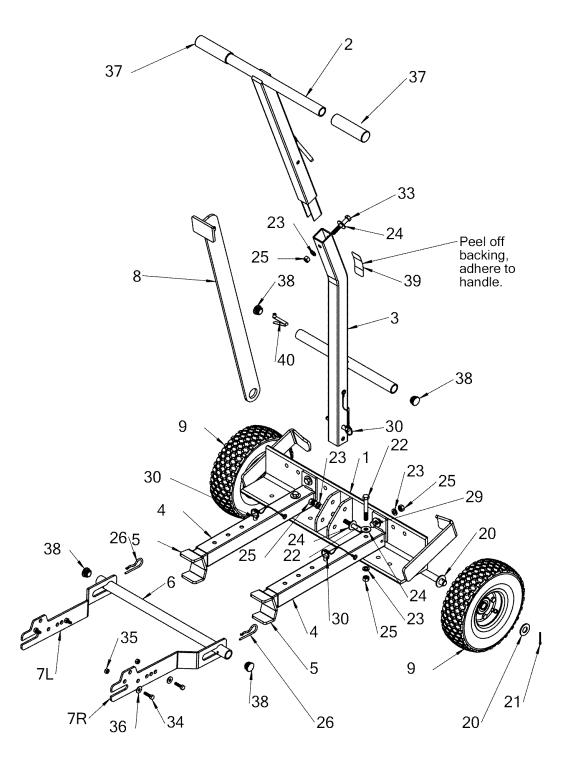

CRAFTSMAN THREE YEAR LIMITED WARRANTY

If this Craftsman product fails due to a manufacturer's defect within three years from the date of purchase, return it to any Sears store or other Craftsman outlet in the United States for free replacement.

This warranty does not include wearing off or fading of product paint, nor replacement of product wheels or tires.

This warranty is void if this product is ever used for commercial or rental purposes.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179.

PRODUCT RECORD

In the space below record the model number and purchase date of your cart. The model number can be found on the front cover of the user guide.

Model Number .

Purchase Date______.

Keep this booklet and your Sears receipt in a safe place for future reference.

ORDERING INFORMATION

After the one year warranty period all parts may be ordered by calling Sears Service at 1-800-4MY-HOME (1-800-469-4663).

When ordering repair parts, always give the following information:

- Product -

NOTES

^{*}Found on the repair part list. Reference page 11.

Get it fixed, at your home or ours!

Your Home

For expert troubleshooting and home solutions advice:



www.managemyhome.com

For repair – in your home – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, no matter who made it, no matter who sold it!

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

1-800-469-4663 (Canada)

www.sears.com

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

Au Canada pour service en français:

1-888-SU-HOGAR®

1-800-LE-FOYER^{MC} (1-800-533-6937)

(1-888-784-6427)

www.sears.ca



Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC
 Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC
 Marque de commerce / MD Marque déposée de Sears Brands, LLC

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com