

# Owner's Manual

# CRAFTSMAN®


## 3.75 HP

## 17 INCH TINE WIDTH

# FRONT TINE TILLER

Model No.  
917.292200

- Safety
- Assembly
- Operation
- Maintenance
- Repair Parts

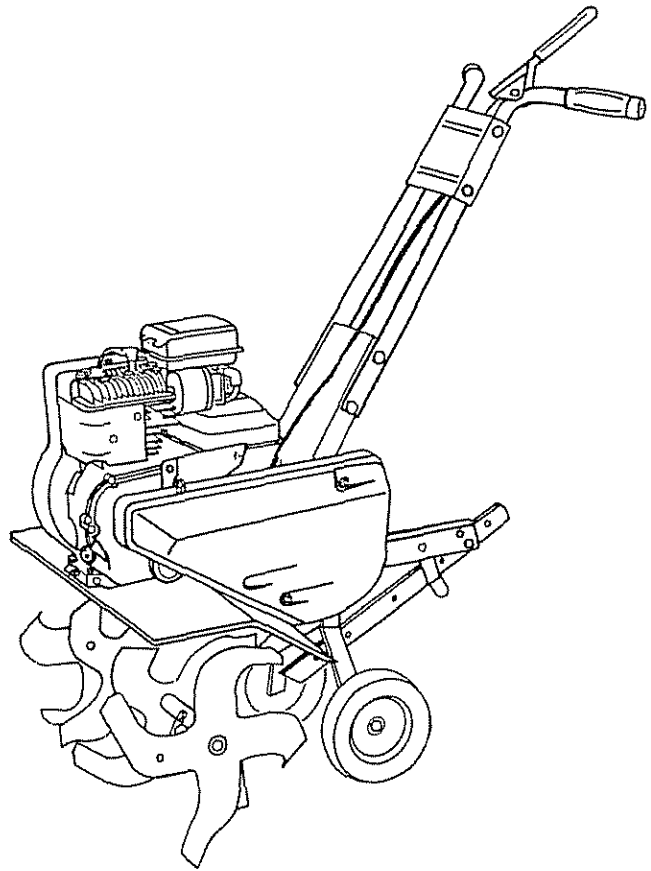

This product has a low emission engine which operates differently from previously built engines. Before you start the engine, read and understand this Owner's Manual.

### CAUTION:

Read and follow all  
Safety Rules and Instructions  
before operating this equipment

For answers to your questions  
about this product, Call:

**1-800-659-5917**  
Sears Craftsman Help Line  
5 am - 5 pm, Mon - Sat

Sears, Roebuck and Co., Hoffman Estates, IL 60179

## TABLE OF CONTENTS

|                              |    |                               |            |
|------------------------------|----|-------------------------------|------------|
| Safety Rules .....           | 2  | Service and Adjustments ..... | 13         |
| Warranty .....               | 2  | Storage .....                 | 16         |
| Product Specifications ..... | 4  | Troubleshooting .....         | 18         |
| Assembly .....               | 6  | Illustrated Parts List .....  | 20         |
| Operation .....              | 7  | Parts Ordering .....          | Back Cover |
| Maintenance .....            | 11 |                               |            |

## WARRANTY

### LIMITED ONE YEAR WARRANTY ON CRAFTSMAN TILLER

For one (1) year from date of purchase, when this Craftsman Tiller is maintained, lubricated, and tuned up according to the operating and maintenance instructions in the owner's manual, Sears will repair free of charge any defect in material or workmanship. This Warranty does not cover:

- Expendable items which become worn during normal use, such as tines, spark plugs, air cleaners and belts.
- Repairs necessary because of operator abuse or negligence, including bent crankshafts and the failure to maintain the equipment according to the instructions contained in the owner's manual.
- If this Craftsman Tiller is used for commercial or rental purposes, this Warranty applies for only thirty (30) days from the date of purchase.

Warranty service is available by returning the craftsman power mower to the nearest sears service center/department in the united states. This warranty applies only while this product is in use in the united states.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO., D/817WA, HOFFMAN ESTATES, IL 60179

## SAFETY RULES

### TRAINING

- Read the Owner's Manual carefully. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.
- Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction.
- Keep the area of operation clear of all persons, particularly small children, and pets.

### PREPARATION

- Thoroughly inspect the area where the equipment is to be used and remove all foreign objects.
- Disengage all clutches and shift into neutral before starting the engine (motor).

- Do not operate the equipment without wearing adequate outer garments. Wear footwear that will improve footing on slippery surfaces.
- Handle fuel with care; it is highly flammable.
- Use an approved fuel container.
- Never add fuel to a running engine or hot engine.
- Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors.
- Replace gasoline cap securely and clean up spilled fuel before restarting.
- Use extension cords and receptacles as specified by the manufacturer for all units with electric drive motors or electric starting motors.
- Never attempt to make any adjustments while the engine (motor) is running (except where specifically recommended by manufacturer).

## OPERATION

- Do not put hands or feet near or under rotating parts.
- Exercise extreme caution when operating on or crossing gravel drives, walks, or roads. Stay alert for hidden hazards or traffic. Do not carry passengers.
- After striking a foreign object, stop the engine (motor), remove the wire from the spark plug, thoroughly inspect the tiller for any damage, and repair the damage before restarting and operating the tiller.
- Exercise caution to avoid slipping or falling.
- If the unit should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning of trouble.
- Stop the engine (motor) when leaving the operating position.
- Take all possible precautions when leaving the machine unattended. Disengage the tines, shift into neutral, and stop the engine.
- Before cleaning, repairing, or inspecting, shut off the engine and make certain all moving parts have stopped. Disconnect the spark plug wire, and keep the wire away from the plug to prevent accidental starting. Disconnect the cord on electric motors.
- Do not run the engine indoors; exhaust fumes are dangerous.
- Never operate the tiller without proper guards, plates, or other safety protective devices in place.
- Keep children and pets away.
- Do not overload the machine capacity by attempting to till too deep at too fast a rate.
- Never operate the machine at high speeds on slippery surfaces. Look behind and use care when backing.
- Never allow bystanders near the unit.
- Use only attachments and accessories approved by the manufacturer of the tiller (such as wheel weights, counterweights, cabs, and the like).
- Never operate the tiller without good visibility or light.
- Be careful when tilling in hard ground. The tines may catch in the ground and propel the tiller forward. If this occurs, let go of the handlebars and do not restrain the machine.

## MAINTENANCE AND STORAGE

- Keep machine, attachments, and accessories in safe working condition.
- Check shear pins, engine mounting bolts, and other bolts at frequent intervals for proper tightness to be sure the equipment is in safe working condition.
- Never store the machine with fuel in the fuel tank inside a building where ignition sources are present, such as hot water and space heaters, clothes dryers, and the like. Allow the engine to cool before storing in any enclosure.
- Always refer to the operator's guide instructions for important details if the tiller is to be stored for an extended period.

**⚠ CAUTION:** Always disconnect spark plug wire and place wire where it cannot contact spark plug in order to prevent accidental starting when setting up, transporting, adjusting or making repairs.

**⚠ WARNING:** The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defect, or other reproductive harm.

## PRODUCT SPECIFICATIONS

|                              |                              |
|------------------------------|------------------------------|
| HORSEPOWER:                  | 3.75 HP                      |
| DISPLACEMENT:                | 9.03 CU. IN.<br>(148CC)      |
| GASOLINE CAPACITY:           | 2 Quarts<br>Unleaded Regular |
| OIL (API-SF/SG/SH):          | SAE 30<br>(Above 32°F)       |
| (CAPACITY: 20 oz.)           | SAE 5W-30<br>(Below 32°F)    |
| SPARK PLUG :<br>(GAP: .030") | Champion J19LM               |

**Congratulations** on your purchase of a Sears Tiller. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problems you cannot easily remedy, please contact your nearest authorized Sears Service Center/Department. We have competent, well-trained technicians and the proper tools to service or repair this unit.

Please read and retain this manual. The instructions will enable you to assemble and maintain your tiller properly. Always observe the "SAFETY RULES".

Your new tiller has been assembled at the factory with exception of those parts left unassembled for shipping purposes. To ensure safe and proper operation of your tiller all parts and hardware you assemble must be tightened securely.

Use the correct tools as necessary to insure proper tightness.

## MAINTENANCE AGREEMENT

A Sears Maintenance Agreement is available on this product. Contact your nearest Sears store for details.

## CUSTOMER RESPONSIBILITIES

- Read and observe the safety rules.
- Follow a regular schedule in maintaining, caring for and using your tiller.
- Follow the instructions under the "Customer Responsibilities" and "Storage" sections of this Owner's Manual.


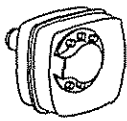

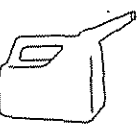


**⚠ WARNING:** This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. See your Sears Authorized Service Center for spark arrester. Refer to the Repair Parts section of this manual for part number.





## ACCESSORIES

These accessories were available when the tiller was purchased. They are also available at most Sears Retail outlets and Service Centers. Most Sears Stores can order repair parts for you when you provide the model number of your tiller.

### ENGINE

| SPARK PLUG  | MUFFLER   | AIR FILTER  | GAS CAN   | ENGINE OIL  | STABILIZER  |
|---|---|---|---|---|---|
|  |  |  |  |  |  |

### TILLER MAINTENANCE

| BELT  | TINES   | CLEVIS PIN  | HAIRPIN CLIP  |
|---|---|---|---|
|  |  |  |  |

## BAG OF PARTS


### TOOLS REQUIRED FOR ASSEMBLY

A socket wrench set will make assembly easier. Standard wrench sizes are listed.


- (1) Utility knife
- (1) Pair of pliers
- (1) Screwdriver
- (2) 1/2" wrenches

### OPERATOR'S POSITION

When right or left hand is mentioned in this manual, it means when you are in the operating position (standing behind tiller handles).

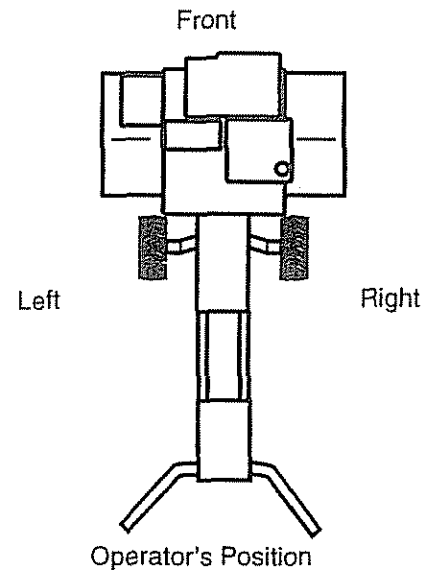

### CONTENTS OF HARDWARE PACK

 


(2) Hex Bolts 5/16-18 x 3/4



(2) Hex Bolts 5/16-18 x 1



(6) Hex Nuts 5/16-18

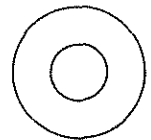

(4) Washers  
3/8 x 7/8 x 14 Ga



(2) Hex Bolts 5/16-18 x 1-1/4



(1) Bottle Engine Oil



(6) Lock Washers 5/16



## ASSEMBLY

### UNPACK CARTON & INSTALL HANDLE

**CAUTION:** Be careful of exposed staples when handling or disposing of cartoning material.

**IMPORTANT:** When unpacking and assembling tiller, be careful not to stretch or kink cable(s).

- Cut cable ties securing handles.
- The handle may be assembled in high or low position. Slowly lift handle assembly up and align handle holes with desired handle panel hole and slot.
- Loosely assemble hardware as shown. Be sure the shorter (3/4" long) hex bolt is assembled in lower hole of handle. Repeat for opposite side. Tighten all hardware securely.
- Cut cable ties securing tiller to skid and remove tiller from skid.

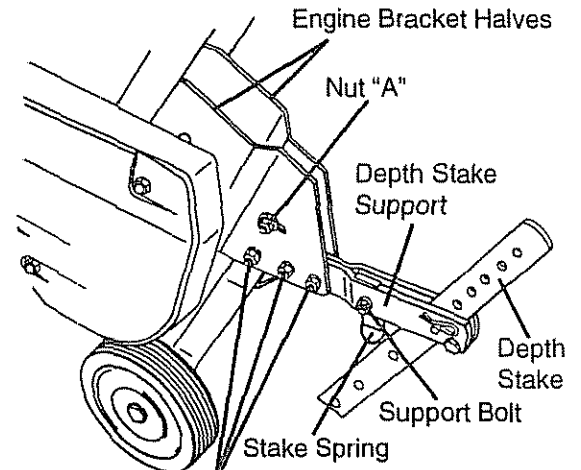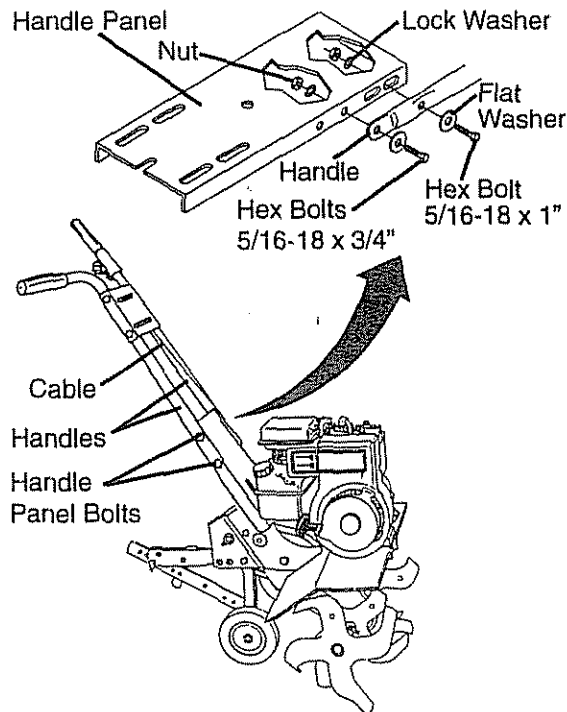

Hex Bolts, Lockwashers, and Hex nuts

### HANDLE HEIGHT

- Handle height may be adjusted to better suit operator. (See "HANDLE HEIGHT" in the Service and Adjustments section of this manual).

### TILLING WIDTH

- Tilling width may be adjusted to better handle your tilling conditions (See "TINE ARRANGEMENT" in the Service and Adjustments section of this manual).

### TINE OPERATION

- Check tine operation before first use. (See "TINE OPERATION CHECK" in the Service and Adjustments section of this manual).

### INSTALL DEPTH STAKE ASSEMBLY

- Loosen nut "A".
- Insert stake support between engine bracket halves with stake spring down.
- Bolt stake support to engine brackets with bolts, lock washers and nuts. Tighten securely. Tighten nut "A".
- Depth stake must move freely. If it does not, loosen support bolt.



## OPERATION

### KNOW YOUR TILLER

READ THIS OWNER'S MANUAL AND SAFETY RULES BEFORE OPERATING YOUR TILLER.

Compare the illustrations with your tiller to familiarize yourself with the location of various controls and adjustments. Save this manual for future reference.

**These symbols may appear on your Tiller or in literature supplied with the product. Learn and understand their meaning.**

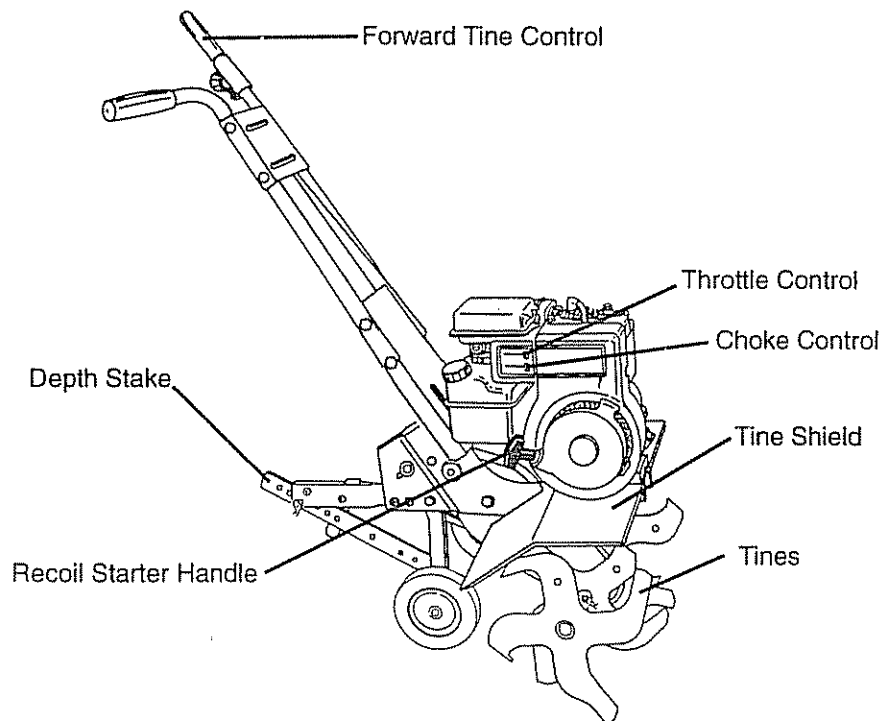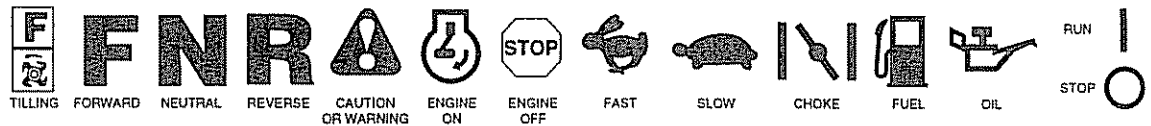

### MEETS ANSI SAFETY REQUIREMENTS

Sears tillers conform to the safety standards of the American National Standards Institute.

**FORWARD TINE CONTROL** - Engages tines in forward direction.

**CHOKE CONTROL** - Used when starting a cold engine.

**THROTTLE CONTROL** - Controls engine speed.

**DEPTH STAKE** - Controls forward speed and the depth at which the tiller will dig.

**RECOIL STARTER HANDLE** - Used to start the engine.

## OPERATION



The operation of any tiller can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields before starting your tiller and while tilling. We recommend a wide vision safety mask over the spectacles or standard safety glasses.

### HOW TO USE YOUR TILLER



Know how to operate all controls before adding fuel and oil or attempting to start engine.

#### STOPPING TINES

- Release tine control to stop movement.

#### ENGINE

- Move throttle control to "STOP" position.
- Never use choke to stop engine.

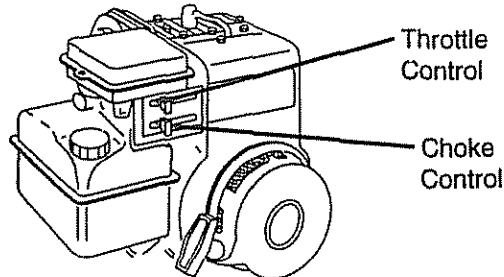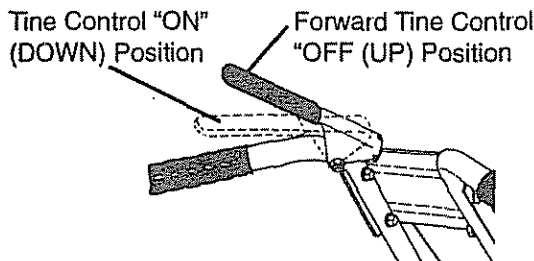

### TINE OPERATION

#### FORWARD

- Squeeze forward tine control to handle.

#### TILLING

The speed and depth of tilling is regulated by the position of the depth stake and wheel height.

The depth stake should always be below the wheels for digging. It serves as a brake to slow the tiller's forward motion to enable the tines to penetrate the ground. Also, the more the depth stake is lowered into the ground the deeper the tines will dig.

#### DEPTH STAKE


Adjust depth stake by removing the hairpin clip and clevis pin. Change depth stake to desired position. Replace the clevis pin and hairpin clip.

- For normal tilling, set depth stake at the second or third hole from the top.

#### WHEELS

Adjust wheels by removing the hairpin clip and clevis pin. Change wheel position. Replace the hairpin clip and clevis pin.

- For normal tilling, set wheels at the second or third hole from the top.

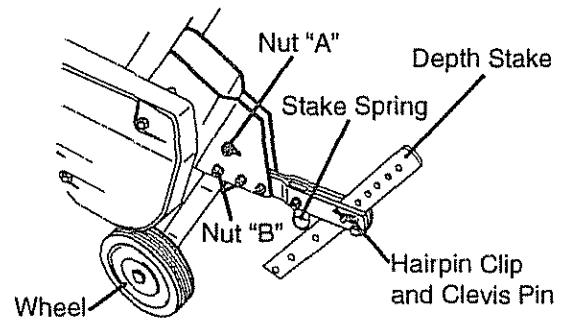

### TRANSPORTING YOUR TILLER

**CAUTION:** Before lifting or transporting, allow tiller engine and muffler to cool. Disconnect spark plug wire. Drain gasoline from fuel tank.

#### AROUND THE YARD

- Tip depth stake forward until it is held by the stake spring.
- Push tiller handles down, raising tines off the ground.
- Push or pull tiller to desired location.

#### AROUND TOWN

- Disconnect spark plug wire.
- Drain fuel tank.
- Transport in upright position to prevent oil leakage.

#### BEFORE STARTING ENGINE


**IMPORTANT:** Be very careful not to allow dirt to enter the engine when checking or adding oil or fuel. Use clean oil and fuel and store in approved, clean, covered containers. Use clean fill funnels.

#### FILL ENGINE WITH OIL

- Remove hangtag from engine.
- With engine level, remove engine oil filler plug.
- Fill engine with oil to point of overflowing. For approximate capacity see "PRODUCT SPECIFICATIONS" on page 4 of this manual.



- Tilt tiller back on its wheels and then re-level.
- With engine level, refill to point of overflowing if necessary. Replace oil filler plug.
- For cold weather operation you should change oil for easier starting (See "OIL VISCOSITY CHART" in the Customer Responsibilities section of this manual).
- To change engine oil, see the Customer Responsibilities section of this manual.

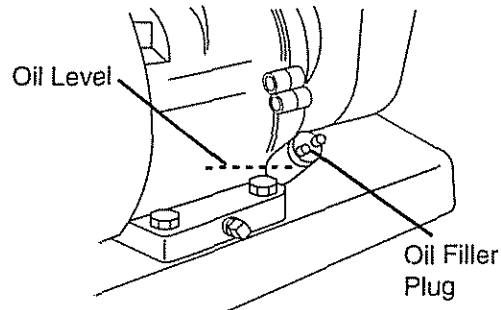

### ADD GASOLINE

- Fill fuel tank. Use fresh, clean, regular unleaded gasoline. (Use of leaded gasoline will increase carbon and lead oxide deposits and reduce valve life.)

**IMPORTANT:** When operating in Temperatures below 32°F (0°C), use fresh, clean, winter grade gasoline to help insure good cold weather starting.

**WARNING:** Experience indicates that alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Drain the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season. See Storage section of this manual for additional information. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

**CAUTION:** Fill to within 1/2 inch of top of fuel tank to prevent spills and to allow for fuel expansion. If gasoline is accidentally spilled, move machine away from area of spill. Avoid creating any source of ignition until gasoline vapors have disappeared. Do not overfill. Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

### TO START ENGINE

**CAUTION:** Keep tine control in "OFF" position when starting engine.

When starting engine for the first time or if engine has run out of fuel, it will take extra pulls of the recoil starter to move fuel from the tank to the engine.


- Make sure spark plug wire is properly connected.
- Place throttle control in "FAST" position.
- Move choke control to full "CHOKE" position. Grasp recoil starter handle with one hand and grasp tiller handle with other hand. Pull rope out slowly until engine reaches start of compression cycle (rope will pull slightly harder at this point).
- Pull recoil starter handle quickly. Do not let starter handle snap back against starter. Repeat if necessary.
- If engine fires but does not start, move choke control to half choke position. Pull recoil starter handle until engine starts.
- When engine starts, slowly move choke control to "RUN" position as engine warms up.

**NOTE:** A warm engine requires less choking to start.

- Move throttle control to desired running position.
- Allow engine to warm up for a few minutes before engaging tines.

**NOTE:** If at a high altitude (3000 feet) or in cold temperatures (below 32°F), the carburetor fuel mixture may need to be adjusted for best engine performance. See "TO ADJUST CARBURETOR" in the Service and Adjustments section of this manual.

**NOTE:** If engine does not start, see troubleshooting points.

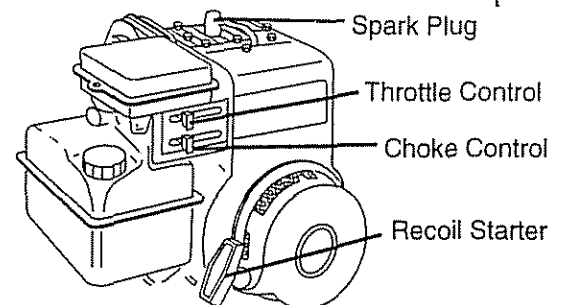

### BREAKING IN YOUR TILLER

Break-in your belt(s), pulleys and tine control before you actually begin tilling.

- Start engine, tip tines off ground by pressing handles down and engage tine control to start tine rotation. Allow tines to rotate for five minutes.
- Check tine operation and adjust if necessary. See "TINE OPERATION CHECK" in the Service and Adjustments section of this manual.

### TILLING HINTS

**CAUTION:** Until you are accustomed to handling your tiller, start actual field use with throttle in slow position (mid-way between "FAST" and "IDLE").

To help tiller move forward, lift up the handles slightly (thus lifting depth stake out of ground). To slow down the tiller, press down on handles.


If you are straining or tiller is shaking, the wheels and depth stake are not set properly in the soil being tilled. The proper setting of the wheels and depth stake is through trial and error and depends upon the soil condition. (The harder or wetter the ground, the slower the engine and tine speed needed. Under these poor conditions, at fast speed the tiller will run and jump over the ground).

A properly adjusted tiller will dig with little effort from the operator.

- Tilling is digging into, turning over, and breaking up packed soil before planting. Loose, unpacked soil helps root growth. Best tilling depth is 4" to 6". A tiller will also clear the soil of unwanted vegetation. The decomposition of this vegetable matter enriches the soil. Depending on the climate (rainfall and wind), it may be advisable to till the soil at the end of the growing season to further condition the soil.
- Soil conditions are important for proper tilling. Tines will not readily penetrate dry, hard soil which may contribute to excessive bounce and difficult handling of your tiller. Hard soil should be moistened before tilling; however, extremely wet soil will "ball-up" or clump during tilling. Wait until the soil is less wet in order to achieve the best results. When tilling in the fall, remove vines and long grass to prevent them from wrapping around the tine shaft and slowing your tilling operation.
- You will find tilling much easier if you leave a row untilled between passes.

Then go back over the entire area at right angles. There are two reasons for doing this. First, wide turns are much easier to negotiate than about-faces. Second, the tiller won't be pulling itself, and you, toward the row next to it.


- Set depth stake and wheel height for shallow tilling when working extremely hard soil or sod. Then work across the first cuts at normal depth.

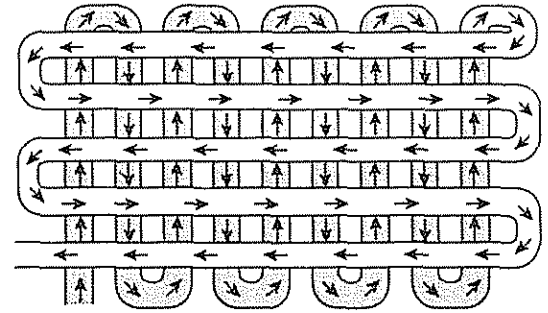

### CULTIVATING

Cultivating is destroying the weeds between rows to prevent them from robbing nourishment and moisture from the plants. At the same time, breaking up the upper layer of soil crust will help retain moisture in the soil. Best digging depth is 1" to 3".

- You will probably not need to use the depth stake. Begin by tipping the depth stake forward until it is held by the stake spring.
- Cultivate up and down the rows at a speed which will allow tines to uproot weeds and leave the ground in rough condition, promoting no further growth of weeds and grass.

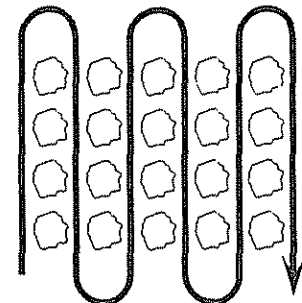

# MAINTENANCE

| <b>MAINTENANCE SCHEDULE</b><br><br>FILL IN DATES AS YOU COMPLETE REGULAR SERVICE | SERVICE DATES   |               |                  |                |  |  |  |  |  |  |  |  |
|--|-----------------|---------------|------------------|----------------|--|--|--|--|--|--|--|--|
|  | BEFORE EACH USE | EVERY 5 HOURS | EVERY 25 HOURS   | EVERY 50 HOURS |  |  |  |  |  |  |  |  |
| Check Engine Oil Level   | ✓               | ✓             |                  |                |  |  |  |  |  |  |  |  |
| Change Engine Oil  |                 |               | ✓ <sub>1,2</sub> |                |  |  |  |  |  |  |  |  |
| Oil Pivot Points   |                 | ✓             |                  |                |  |  |  |  |  |  |  |  |
| Inspect Spark Arrester / Muffler   |                 |               |                  | ✓              |  |  |  |  |  |  |  |  |
| Inspect Air Screen   | ✓               |               |                  |                |  |  |  |  |  |  |  |  |
| Clean or Replace Air Cleaner Cartridge   |                 |               |                  | ✓ <sub>2</sub> |  |  |  |  |  |  |  |  |
| Clean Engine Cylinder Fins   |                 |               |                  | ✓              |  |  |  |  |  |  |  |  |
| Replace Spark Plug   |                 |               |                  | ✓              |  |  |  |  |  |  |  |  |

1 - Change more often when operating under a heavy load or in high ambient temperatures.  
 2 - Service more often when operating in dirty or dusty conditions.

### GENERAL RECOMMENDATIONS

The warranty on this tiller does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, operator must maintain tiller as instructed in this manual. Some adjustments will need to be made periodically to properly maintain your tiller. All adjustments in the Service and Adjustments section of this manual should be checked at least once each season.

- Once a year you should replace the spark plug, clean or replace air filter, and check tines and belt for wear. A new spark plug and clean air filter assure proper air-fuel mixture and help your engine run better and last longer.


#### BEFORE EACH USE

- Check engine oil level.
- Check tine operation.
- Check for loose fasteners.

#### LUBRICATION

Keep unit well lubricated (See "LUBRICATION CHART").

### LUBRICATION CHART

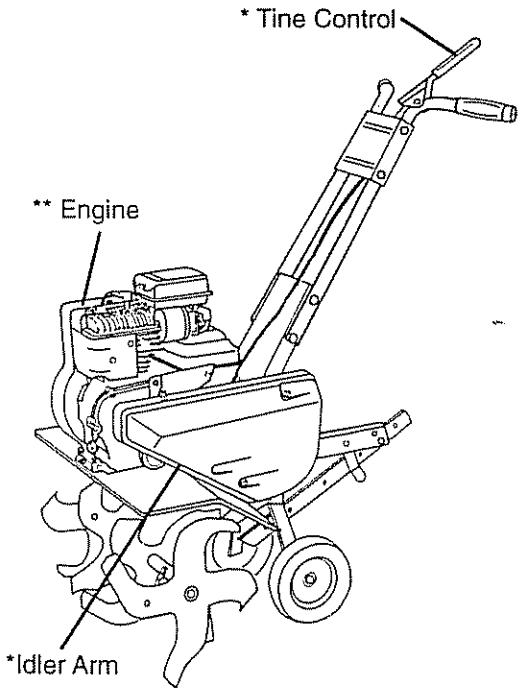

\* SAE 30 OR 10W30 MOTOR OIL  
 \*\* REFER TO CUSTOMER RESPONSIBILITIES "ENGINE" SECTION.


Disconnect spark plug wire before performing any maintenance (except carburetor adjustment) to prevent accidental starting of engine.

Prevent fires! Keep the engine free of grass, leaves, spilled oil, or fuel. Remove fuel from tank before tipping unit for maintenance. Clean muffler area of all grass, dirt, and debris.

Do not touch hot muffler or cylinder fins as contact may cause burns.

## ENGINE LUBRICATION

Use only high quality detergent oil rated with API service classification SF, SG or SH. Select the oil's SAE viscosity grade according to your expected temperature.

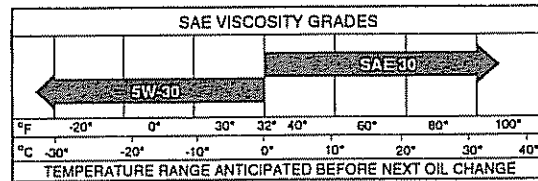

**NOTE:** Although multi-viscosity oils (5W-30, 10W-30, etc.) improve starting in cold weather, these multi-viscosity oils will result in increased oil consumption when used above 32°F (0°C). Check your engine oil level more frequently to avoid possible engine damage from running low on oil.

Change the oil after every 25 hours of operation or at least once a year if the tiller is not used for 25 hours in one year.


Check the crankcase oil level before starting the engine and after each five (5) hours of continuous use. Add SAE 30 motor oil or equivalent. Tighten oil filler plug securely each time you check the oil level.

### TO CHANGE ENGINE OIL

Determine temperature range expected before oil change. All oil must meet API service classification SF, SG or SH.

- Be sure tiller is on level surface.
- Oil will drain more freely when warm.
- Catch oil in a suitable container.
- Remove drain plug.
- Tip tiller forward to drain oil.
- After oil has drained completely, replace oil drain plug and tighten securely.
- Remove oil filler plug. Be careful not to allow dirt to enter the engine.

- Refill engine with oil. See "FILL ENGINE WITH OIL" in the Operation section of this manual.

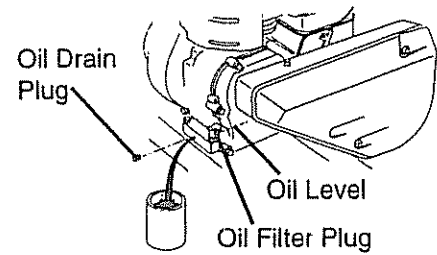


## AIR CLEANER

Service air cleaner cartridge every twenty-five hours, more often if engine is used in very dusty conditions.

- Loosen air cleaner screws, one on each side of cover.
- Remove air cleaner cover.
- Carefully remove air cleaner cartridge. Be careful. Do not allow dirt or debris to fall into carburetor.
- Clean by tapping gently on a flat surface.
- If very dirty or damaged, replace cartridge.
- Clean and replace cover. Tighten screws securely.


**CAUTION:** Petroleum solvents, such as kerosene, are not to be used to clean cartridge. They may cause deterioration of the cartridge. Do not oil cartridge. Do not use pressurized air to clean or dry cartridge.

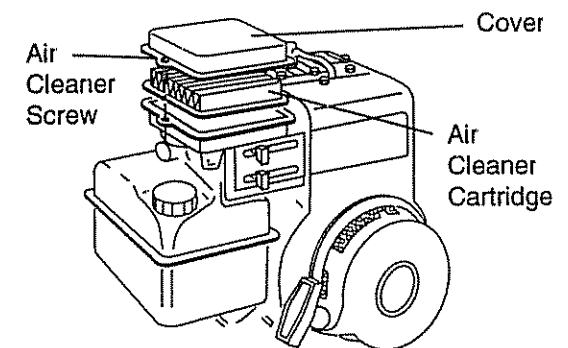

## COOLING SYSTEM

Your engine is air cooled. For proper engine performance and long life keep your engine clean.

- Clean air screen frequently using a stiff-bristled brush.
- Remove blower housing and clean as necessary.
- Keep cylinder fins free of dirt and chaff.

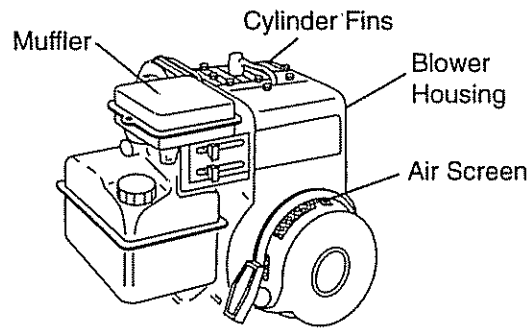

### MUFFLER

Do not operate tiller without muffler. Do not tamper with exhaust system. Damaged mufflers or spark arresters could create a fire hazard. Inspect periodically and replace if necessary. If your engine is equipped with a spark arrester screen assembly, remove every 50 hours for cleaning and inspection. Replace if damaged.

### SPARK PLUG

Replace spark plugs at the beginning of each tilling season or after every 50 hours of use, whichever comes first. Spark plug type and gap setting is shown in "PRODUCT SPECIFICATIONS" on page 4 of this manual.

### TRANSMISSION

Your transmission is sealed and will only require lubrication if it is serviced.

### CLEANING

- Clean engine, wheels, finish, etc. of all foreign matter.
- Keep finished surfaces and wheels free of all gasoline, oil, etc.
- Protect painted surfaces with automotive type wax.

We do not recommend using a garden hose to clean your unit unless the muffler, air filter and carburetor are covered to keep water out. Water in engine can result in a shortened engine life.

## SERVICE AND ADJUSTMENTS


**⚠ CAUTION:** Disconnect spark plug wire from spark plug and place wire where it cannot come into contact with plug.

### TILLER

#### TO ADJUST HANDLE HEIGHT

Factory assembly has provided lowest handle height. Select handle height best suited for your tilling conditions. Handle height will be different when tiller digs into soil.

- If a higher handle height is desired, loosen the four nuts securing handle panel to engine brackets.
- Slide handle panel to desired location.
- Tighten the four nuts securely.

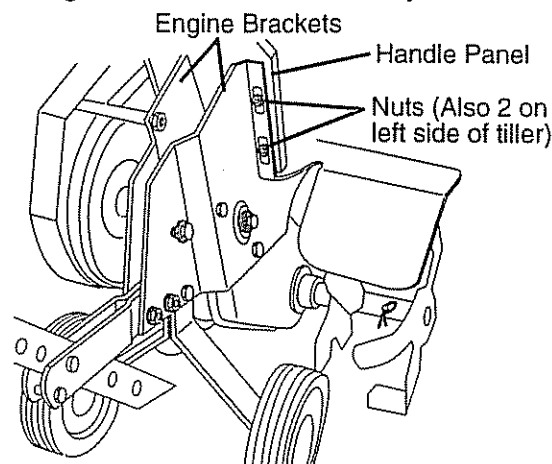


### TINE ARRANGEMENT

Your outer tines can be assembled in several different ways to suit your tilling or cultivating needs.

**⚠ CAUTION:** Tines are sharp. Wear gloves or other protection when handling tines.


#### NORMAL TILLING - 17" PATH

- Assemble holes "A" in tine hubs to holes "B" in tine shaft.

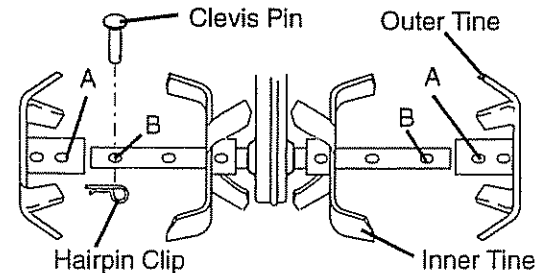


#### MID-WIDTH TILLING - 15" PATH

- Assemble holes "A" in tine hubs to holes "C" in tine shaft.

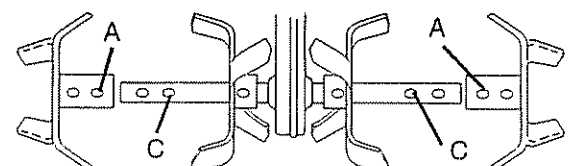


## NARROW TILLING/CULTIVATING - 12-3/4" PATH

- Remove outer tines.

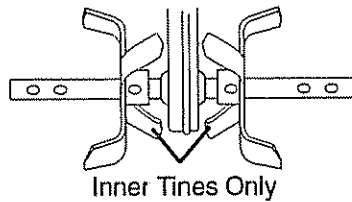


## NARROW CULTIVATING - 12-1/2" PATH

- Remove inner tines.
- Assemble holes "A" in tine hubs to holes "C" in tine shaft.

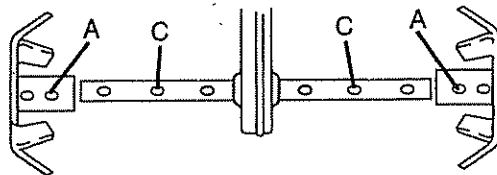

## EDGING - 9-5/8" PATH

- Remove inner tines.
- Assemble holes "A" in tine hubs to holes "D" in tine shaft.

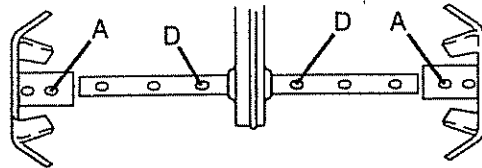

**NOTE:** When reassembling outer tines, be sure right tine assembly (marked "R") and left tine assembly (marked "L") are mounted to correct side of tine shaft.

## TINE OPERATION CHECK

**⚠ WARNING:** Disconnect spark plug wire from spark plug to prevent starting while checking tine operation.

For proper tine operation, tine control lever must be against control body and all slack removed from inner wire of control cable when control is in the "OFF" (up) position. If lever and cable are loose, loosen cable clip at lower end of cable. Pull up on cable to remove slack, without extending spring on end of cable, and retighten cable clip.

## FINAL CHECK "OFF" POSITION

- With tine control "OFF" (up), push down on handle to raise tines off the ground.
- Slowly pull recoil starter handle while observing tines. Tines should not rotate.
- If tines rotate, inner wire of control cable is too tight which is extending lower



spring and engaging tines. Loosen cable clip and push down on cable only enough to relieve spring tension. Tighten cable clip.

- Recheck in "OFF" position and adjust if necessary.

## FINAL CHECK "ON" POSITION


- With tine control "ON" (held down to handle) push down on handle to raise tines off the ground.
- Slowly pull recoil starter handle while observing tines. Tines should rotate forward.
- If tines do not rotate, inner wire of control cable is too loose. Loosen cable clip and pull cable up to remove slack and retighten clip.
- Recheck in "ON" position and adjust if necessary.

**NOTE:** If "ON" position check required adjustment, recheck "OFF" position adjustment to insure tines do not rotate when control is "OFF" (up).

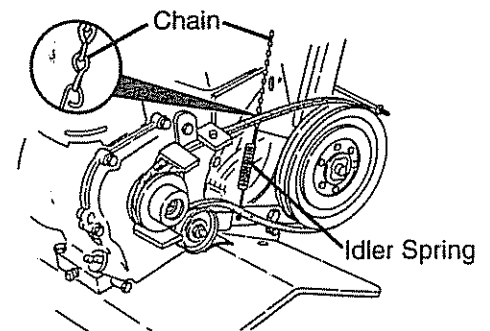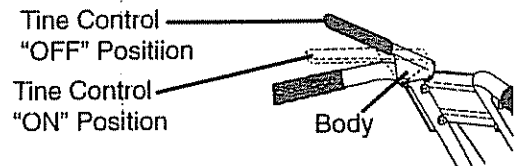

## TO REMOVE BELT GUARD

- Remove cap nut and washer from side of belt guard.
- Loosen (do not remove) tine shield nut on underside of tine shield and cap nut on top of belt guard.
- Pull belt guard out and away from unit.
- Replace belt guard by reversing above procedure. Be sure slot in bottom of belt guard is under head of tine shield bolt and all nuts are tightened securely.

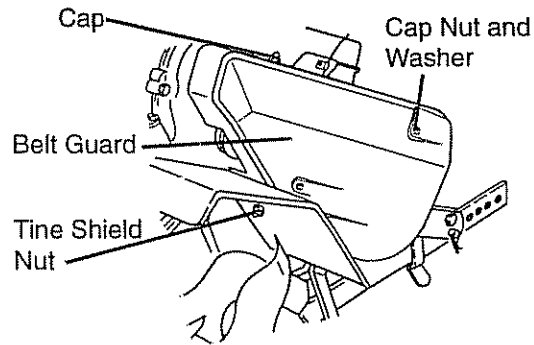

### TO REPLACE V-BELT

Replace V-belt if it has stretched considerably or if it has cracks or frayed edges. Belt guard must be removed to service belt. See "TO REMOVE BELT GUARD" in this section of manual.

### BELT REMOVAL

- Remove V-belt from transmission pulley first and then from engine pulley.


### BELT REPLACEMENT

- Install new V-belt to engine pulley first then to transmission pulley. Be sure belt is positioned on inside groove of both pulleys, inside all belt guides and rests on idler pulley.

### CHECK TINE OPERATION

- See "TINE OPERATION CHECK" in this section of manual.

### REPLACE BELT GUARD

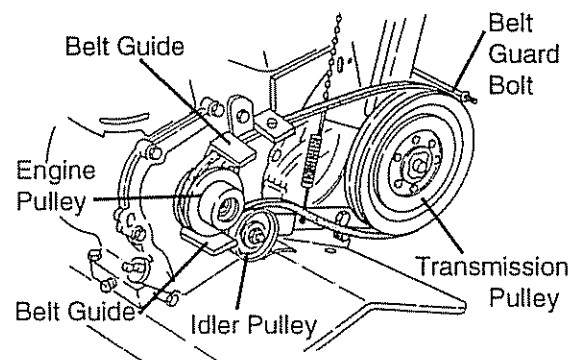

## ENGINE

### TO ADJUST CARBURETOR

The carburetor has a high speed fixed jet and has been preset at the factory and adjustment should not be necessary. However, minor adjustments may be required to compensate for differences in fuel, temperature, altitude or load. If the carburetor does need adjustment, proceed as follows.

### FINAL SETTING


- Start engine and allow to warm for five minutes.
- With throttle control in "SLOW" position.

### IDLE RPM ADJUSTMENT

- To adjust idle RPM, rotate throttle linkage counterclockwise and hold against stop while adjusting idle speed adjusting screw to obtain 1750 RPM. Release throttle linkage.

High speed stop is factory adjusted. Do not adjust or damage may result.

**IMPORTANT:** Never tamper with the engine governor, which is factory set for proper engine speed. overspeeding the engine above the factory high speed setting can be dangerous. If you think the engine-governed high speed needs adjusting, contact your nearest authorized service center/department, which has the proper equipment and experience to make any necessary adjustments.

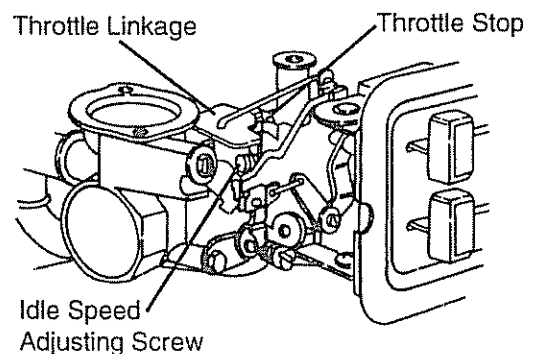

## STORAGE

Immediately prepare your tiller for storage at the end of the season or if the unit will not be used for 30 days or more.

**▲CAUTION:** Never store the tiller with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

### TILLER

- Clean entire tiller (See "CLEANING" in the Customer Responsibilities section of this manual).
- Inspect and replace belts, if necessary (See belt replacement instructions in the Service and Adjustments section of this manual).
- Lubricate as shown in the Customer Responsibilities section of this manual.
- Be sure that all nuts, bolts and screws are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.
- Touch up all rusted or chipped paint surfaces; sand lightly before painting.

### ENGINE

#### FUEL SYSTEM

**IMPORTANT:** It is important to prevent gum deposits from forming in essential fuel system parts such as the carburetor, fuel filter, fuel hose, or tank during storage. also, experience indicates that alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.

- Drain the fuel tank.
- Start the engine and let it run until the fuel lines and carburetor are empty.
- Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.
- Use fresh fuel next season.

**NOTE:** Fuel stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow the mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not drain the gas tank and carburetor if using fuel stabilizer.

### ENGINE OIL

Drain oil (with engine warm) and replace with clean oil. (See "ENGINE" in the Customer Responsibilities section of this manual).

### CYLINDERS

- Remove spark plug.
- Pour 1 ounce (29 ml) of oil through spark plug hole into cylinder.
- Pull starter handle slowly several times to distribute oil.
- Replace with new spark plug.

### OTHER

- Do not store gasoline from one season to another.
- Replace your gasoline can if your can starts to rust. Rust and/or dirt in your gasoline will cause problems.
- If possible, store your unit indoors and cover it to give protection from dust and dirt.
- Cover your unit with a suitable protective cover that does not retain moisture. Do not use plastic. Plastic cannot breathe which allows condensation to form and will cause your unit to rust.

**IMPORTANT:** Never cover tiller while engine and exhaust areas are still warm.



## TROUBLESHOOTING

| PROBLEM               | CAUSE   | CORRECTION   |
|-----------------------|---|--|
| <b>Will not start</b> | <ol style="list-style-type: none"> <li>1. Out of fuel.</li> <li>2. Engine not "CHOKED" properly.</li> <li>3. Engine flooded.</li> <li>4. Dirty air cleaner.</li> <li>5. Water in fuel.</li> <li>6. Clogged fuel tank.</li> <li>7. Loose spark plug wire.</li> <li>8. Bad spark plug or improper gap.</li> <li>9. Carburetor out of adjustment.</li> </ol>   | <ol style="list-style-type: none"> <li>1. Fill fuel tank.</li> <li>2. See "TO START ENGINE" in the Operation section.</li> <li>3. Wait several minutes before attempting to start.</li> <li>4. Clean or replace air cleaner cartridge.</li> <li>5. Drain fuel tank and carburetor, and refill tank with fresh gasoline.</li> <li>6. Remove fuel tank and clean.</li> <li>7. Make sure spark plug wire is seated properly on plug.</li> <li>8. Replace spark plug or adjust gap.</li> <li>9. Make necessary adjustments.</li> </ol>   |
| <b>Hard to start</b>  | <ol style="list-style-type: none"> <li>1. Throttle control not set properly.</li> <li>2. Dirty air cleaner.</li> <li>3. Bad spark plug or improper gap.</li> <li>4. Stale or dirty fuel.</li> <li>5. Loose spark plug wire.</li> <li>6. Carburetor out of adjustment.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Place throttle control in "FAST" position.</li> <li>2. Clean or replace air cleaner cartridge.</li> <li>3. Replace spark plug or adjust gap.</li> <li>4. Drain fuel tank and refill with fresh gasoline.</li> <li>5. Make sure spark plug wire is seated properly on plug.</li> <li>6. Make necessary adjustments.</li> </ol>  |
| <b>Loss of power</b>  | <ol style="list-style-type: none"> <li>1. Engine is overloaded.</li> <li>2. Dirty air cleaner.</li> <li>3. Low oil level/dirty oil.</li> <li>4. Faulty spark plug.</li> <li>5. Oil in fuel.</li> <li>6. Stale or dirty fuel.</li> <li>7. Water in fuel.</li> <li>8. Clogged fuel tank.</li> <li>9. Spark plug wire loose wire.</li> <li>10. Dirty engine air screen.</li> <li>11. Dirty/clogged muffler.</li> <li>12. Carburetor out of adjustment.</li> <li>13. Poor compression.</li> </ol> | <ol style="list-style-type: none"> <li>1. Set depth stake and wheels for shallower tilling.</li> <li>2. Clean or replace air cleaner cartridge.</li> <li>3. Check oil level/change oil.</li> <li>4. Clean and regap or change spark plug.</li> <li>5. Drain and clean fuel tank and refill, and clean carburetor.</li> <li>6. Drain fuel tank and refill with fresh gasoline.</li> <li>7. Drain fuel tank and carburetor, and refill tank with fresh gasoline.</li> <li>8. Remove fuel tank and clean.</li> <li>9. Connect and tighten spark plug.</li> <li>10. Clean engine air screen.</li> <li>11. Clean/replace muffler.</li> <li>12. Make necessary adjustments.</li> <li>13. Contact an authorized Sears Service Center/Department.</li> </ol> |


| <b>PROBLEM</b>                             | <b>CAUSE</b>  | <b>CORRECTION</b>  |
|--|---|--|
| <b>Engine overheats</b>                    | <ol style="list-style-type: none"> <li>1. Low oil level/dirty oil.</li> <li>2. Dirty engine air screen.</li> <li>3. Dirty engine.</li> <li>4. Partially plugged muffler.</li> <li>5. Improper carburetor adjustment.</li> </ol> | <ol style="list-style-type: none"> <li>1. Check oil level/change oil.</li> <li>2. Clean engine air screen.</li> <li>3. Clean cylinder fins, air screen, muffler area.</li> <li>4. Remove and clean muffler.</li> <li>5. Adjust carburetor to richer position.</li> </ol> |
| <b>Excessive bounce/difficult handling</b> | <ol style="list-style-type: none"> <li>1. Ground too dry and hard.</li> <li>2. Wheels and depth stake incorrectly adjusted.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Moisten ground or wait for more favorable soil conditions.</li> <li>2. Adjust wheels and depth stake.</li> </ol>   |
| <b>Soil balls up or clumps</b>             | <ol style="list-style-type: none"> <li>1. Ground too wet.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Wait for more favorable soil conditions.</li> </ol>  |
| <b>Engine runs but tiller won't move</b>   | <ol style="list-style-type: none"> <li>1. Tine control is not engaged.</li> <li>2. V-belt not correctly adjusted.</li> <li>3. V-belt is off pulley(s).</li> </ol>   | <ol style="list-style-type: none"> <li>1. Engage tine control.</li> <li>2. Inspect/adjust V-belt.</li> <li>3. Inspect V-belt.</li> </ol>   |
| <b>Engine runs but labors when tilling</b> | <ol style="list-style-type: none"> <li>1. Tilling too deep.</li> <li>2. Throttle control not properly adjusted.</li> <li>3. Carburetor out of adjustment.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Set depth stake for shallower tilling.</li> <li>2. Check throttle control setting.</li> <li>3. Make necessary adjustments.</li> </ol>  |

# REPAIR PARTS

## REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200

## HANDLE ASSEMBLY

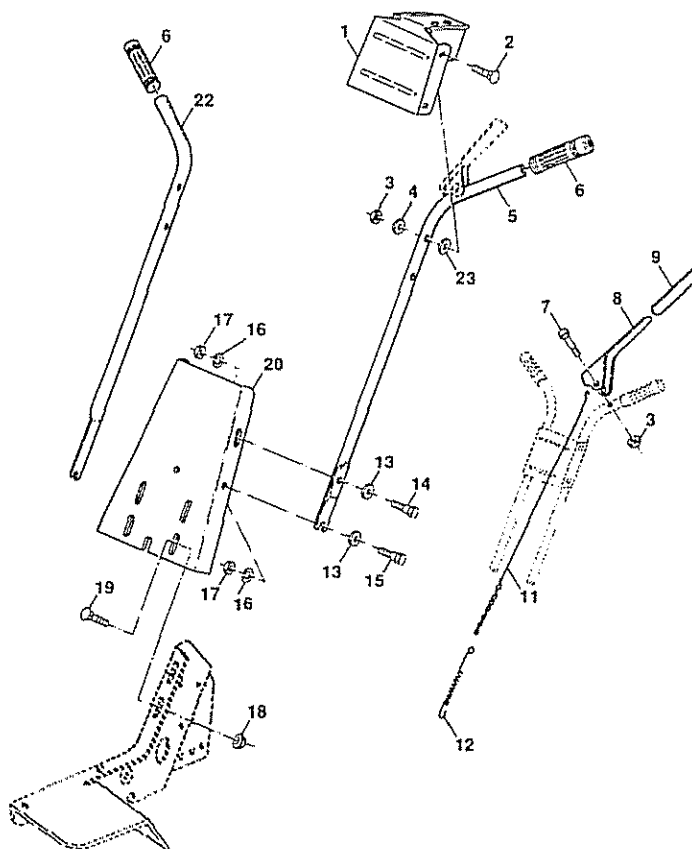


| KEY PART<br>NO. NO. | DESCRIPTION                                  | KEY PART<br>NO. NO. | DESCRIPTION                                  |
|---------------------|--|---------------------|--|
| 1                   | 137176X574 Bracket, Handle                   | 14                  | 74760516 Bolt, Hex Hd 5/16-18 x 1            |
| 2                   | 72140512 *Bolt, Carriage 5/16-18 UNC x 1-1/2 | 15                  | 74760512 Bolt, Hex Hd 5/16-18 x 3/4          |
| 3                   | 73680500 *Locknut, Crown 5/16-18             | 16                  | 10040500 *Washer, Lock 5/16                  |
| 4                   | 19111116 *Washer 11/32 x 11/16 x 16 Ga       | 17                  | 7322050 *Nut, Hex 5/16-18                    |
| 5                   | 151473 Handle, L.H                           | 18                  | 98000129 *Nut, Flanged 5/16-18               |
| 6                   | 9266R Grip, Handle                           | 19                  | 72140506 *Bolt, Carriage 5/16-18 x 3/4 Gr. 5 |
| 7                   | 74760524 *Bolt, Hex 5/16-18 x 1-1/2          | 20                  | 9209R574 Panel, Handle                       |
| 8                   | 3069J Lever, Control, Tine                   | 22                  | 151474 Handle, R H                           |
| 9                   | 8206H Grip, Lever                            | 23                  | 19131312 Washer 13/32 x 13/16 x 12 Ga.       |
| 11                  | 3067J Cable, Control, Tine                   |                     |  |
| 12                  | 3070J Spring, Extension                      |                     |  |
| 13                  | 19121414 *Washer 3/8 x 7/8 x 14 Ga           |                     |  |

\* STANDARD HARDWARE - - PURCHASE LOCALLY  
**NOTE:**All component dimensions given in U.S. inches.  
 1 inch = 25.4 mm

## REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200

### BELT GUARD AND PULLEY ASSEMBLY

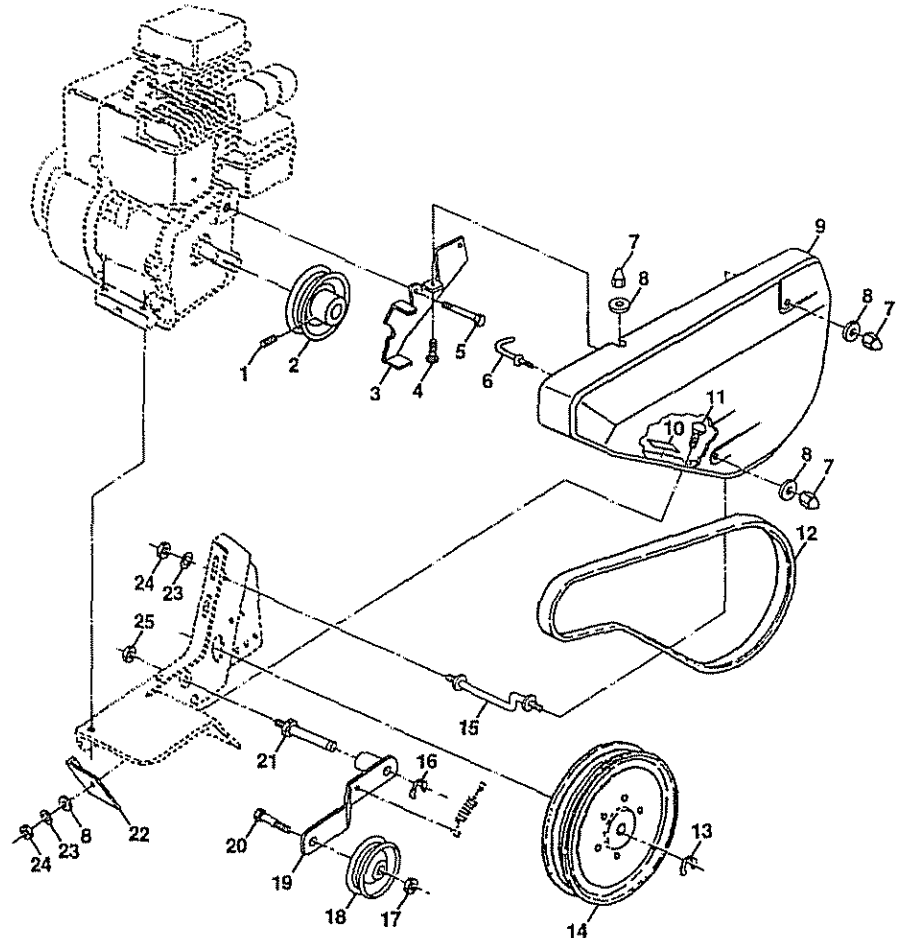


| KEY PART NO. | NO.        | DESCRIPTION  | KEY PART NO. | NO.      | DESCRIPTION               |
|--------------|------------|--|--------------|----------|---------------------------|
| 1            | 23230506   | *Screw, Set, Forged Socket, Headless 5/16-18 x 3/8 | 15           | 132213   | Bolt, Belt Guard          |
| 2            | 130811     | Pulley, Engine                                     | 16           | 12000036 | Ring, Klip                |
| 3            | 122955X    | Bracket Assembly, Guard, Belt                      | 17           | 73350600 | *Nut, Hex, Jam 3/8-16     |
| 4            | 72140404   | *Bolt, Carriage 1/4-20 x 1/2                       | 18           | 161806   | Pulley, Idler             |
| 5            | 74610812   | Bolt, Hex 1/2-20 x 3/4                             | 19           | 162290   | Idler Arm Assembly        |
| 6            | 121463X    | Keeper, Belt, Transmission Pulley                  | 20           | 74760620 | *Bolt, Hex 3/8-16 x 1-1/4 |
| 7            | 104213X    | Nut, Cap 1/4-20                                    | 21           | 106968X  | Shaft, Idler Arm          |
| 8            | 19091016   | *Washer 9/32 x 5/8 x 16 Ga.                        | 22           | 105358X  | Shield, Dirt              |
| 9            | 131157X574 | Guard, Belt  | 23           | 10040400 | *Washer Lock 1/4          |
| 10           | 109227X    | Pad, Idler   | 24           | 73220400 | *Nut, Hex 1/4-20          |
| 11           | 72140406   | *Bolt, Carriage 1/4-20 x 3/4                       | 25           | 73350500 | *Nut, Hex, Jam 5/16-18    |
| 12           | 9179R      | V-Belt   |              |          |                           |
| 13           | 12000028   | Ring, Retainer                                     |              |          |                           |
| 14           | 151939     | Pulley, Transmission                               |              |          |                           |

\*STANDARD HARDWARE—PURCHASE LOCALLY  
**NOTE:** All component dimensions given in U.S. inches.  
 1 inch = 25.4 mm

## REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200

### WHEEL AND DEPTH STAKE ASSEMBLY

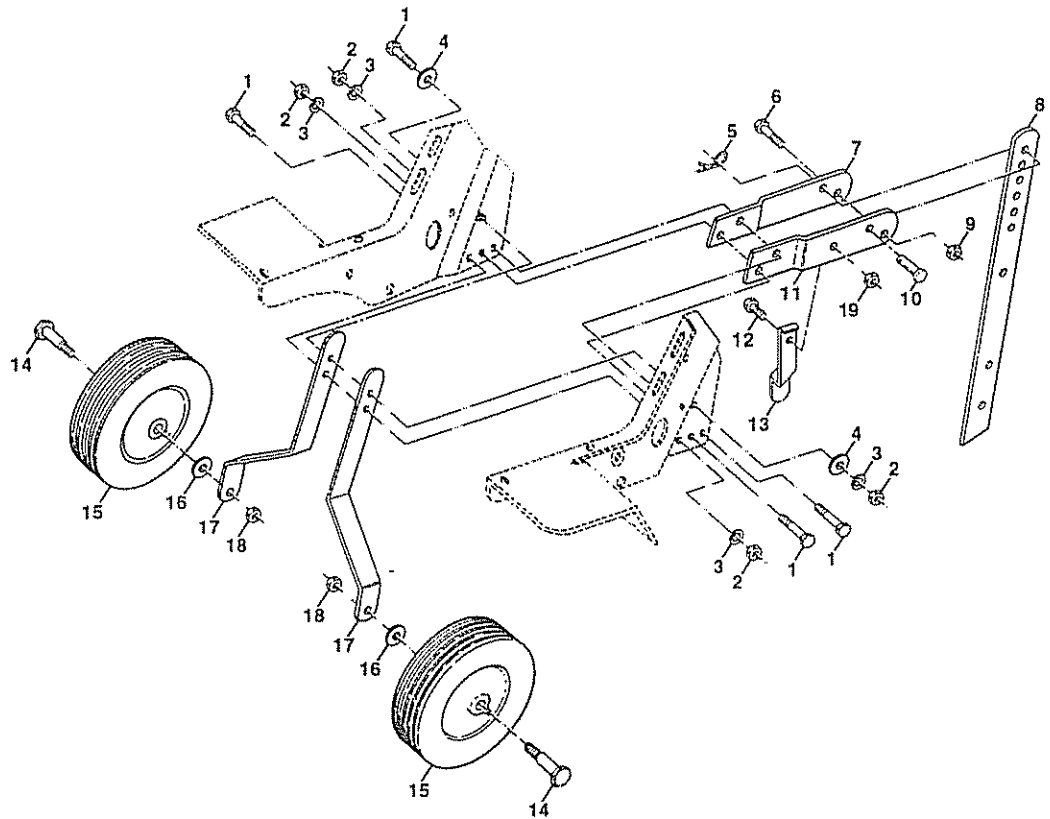

| KEY PART NO. | NO.      | DESCRIPTION                   |
|--------------|----------|-------------------------------|
| 1            | 74760520 | *Bolt, Hex 5/16-18 x 1-1/4    |
| 2            | 73220500 | *Nut, Hex 5/16-18             |
| 3            | 10040500 | *Washer, Lock 5/16            |
| 4            | 19121414 | *Washer 3/8 x 7/8 x 14 Ga.    |
| 5            | 4921H    | Clip, Hairpin                 |
| 6            | 74780628 | Bolt, Fin, Hex 3/8-16 x 1-3/4 |
| 7            | 318J     | Support, Depth Stake, R.H.    |
| 8            | 9193R    | Depth Stake                   |
| 9            | 73800600 | Locknut, W/insert 3/8-16      |
| 10           | 9551R    | Pin, Clevis                   |
| 11           | 317J     | Support, Depth Stake, L.H.    |
| 12           | 74760512 | *Bolt, Hex 5/16-18 x 3/4      |


| KEY PART NO. | NO.      | DESCRIPTION                    |
|--------------|----------|--------------------------------|
| 13           | 325J     | Spring, Depth Stake            |
| 14           | 121117X  | Bolt, Shoulder                 |
| 15           | 9186R    | Wheel                          |
| 16           | 19131311 | *Washer 13/32 x 13/16 x 11 Ga. |
| 17           | 9189R    | Bracket, Wheel                 |
| 18           | 73680600 | *Nut, Crownlock 3/8-16         |
| 19           | 73800500 | Locknut, W/insert 5/16-18      |
| 20           | 74760524 | Bolt, Hex 5/16-18 X 1-1/2      |

\* STANDARD HARDWARE - - PURCHASE LOCALLY  
 NOTE: All component dimensions given in U.S. inches  
 1 inch = 25.4 mm

# REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200


## TINE ASSEMBLY

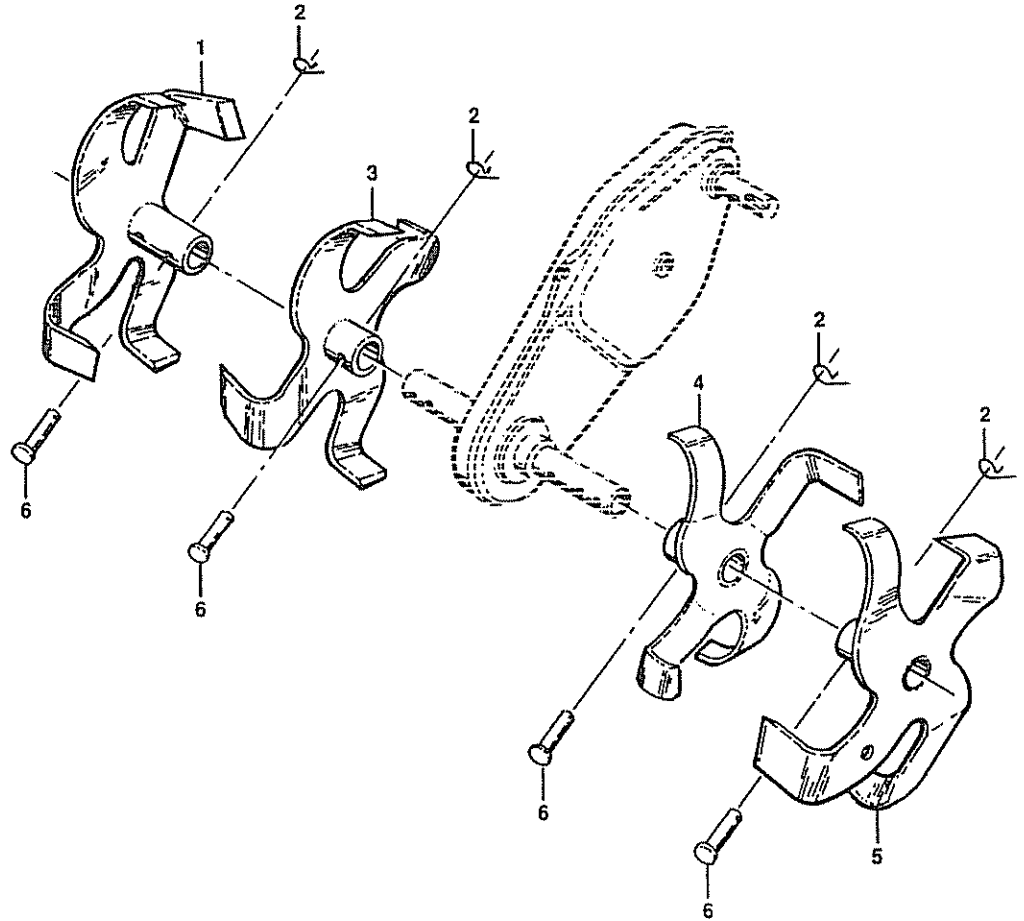

| KEY PART NO. | NO.     | DESCRIPTION       |
|--------------|---------|-------------------|
| 1            | 106860X | Tine, Outer, R.H. |
| 2            | 4921H   | Clip, Hairpin     |
| 3            | 106858X | Tine, Inner, R.H. |

| KEY PART NO. | NO.     | DESCRIPTION       |
|--------------|---------|-------------------|
| 4            | 106857X | Tine, Inner, L.H. |
| 5            | 106859X | Tine, Outer, L.H. |
| 6            | 9194R   | Pin, Clevis       |

**REPAIR PARTS**  
**TILLER - - MODEL NUMBER 917.292200**  
**TRANSMISSION**

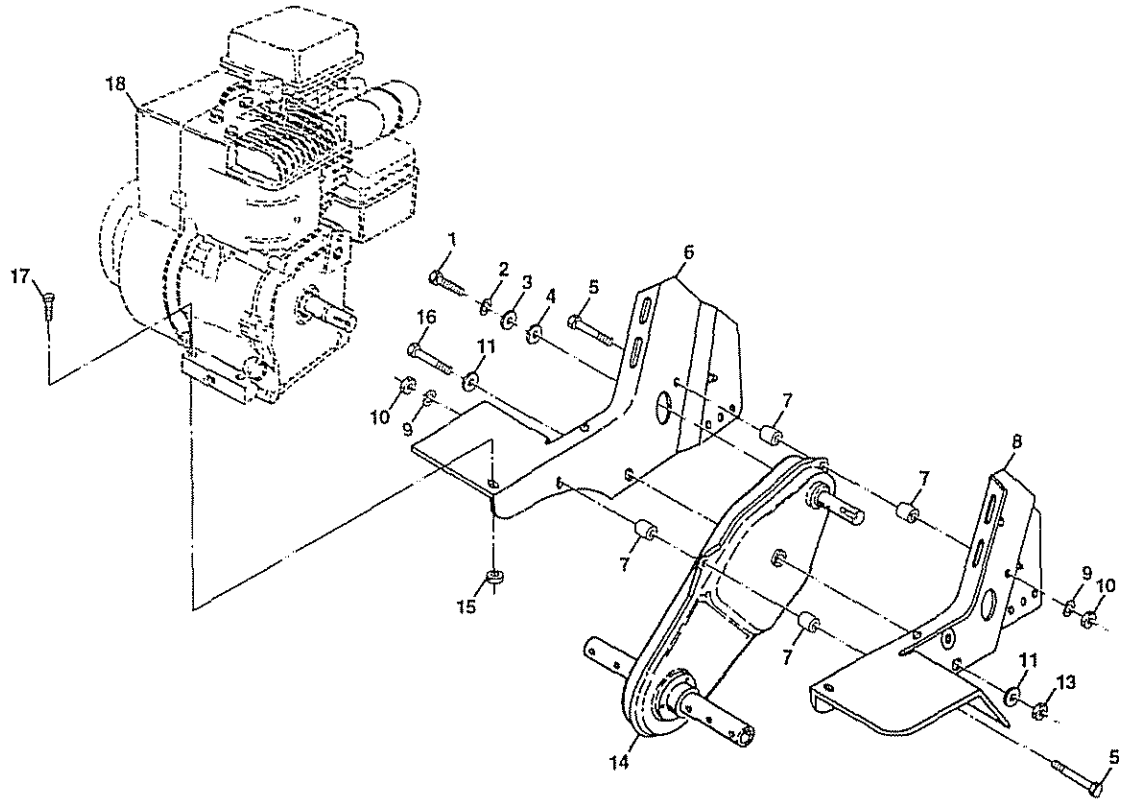


| KEY PART NO. | NO.        | DESCRIPTION                    | KEY PART NO. | NO.      | DESCRIPTION   |
|--------------|------------|--------------------------------|--------------|----------|---|
| 1            | 74610412   | Bolt, Hex 1/4-28 x 3/4 Gr 5    | 13           | 73800600 | * Locknut, w/insert 3/8-16  |
| 2            | 10040400   | * Washer, Lock 1/4             | 14           | 151937   | Transmission  |
| 3            | 19092016   | Washer 9/32 x 1-1/4 x 16 Ga.   | 15           | 73510500 | * Nut, Keps 5/16-18   |
| 4            | 19091412   | Washer 9/32 x 7/8 x 12 Ga      | 16           | 74780652 | * Bolt, Fin, Hex 3/8-16 x 3-1/4   |
| 5            | 74760544   | * Bolt, Hex 5/16-18 x 2-3/4    | 17           | 74760524 | * Bolt, Hex 5/16-18 x 1-1/2   |
| 6            | 2606J574   | Bracket, Engine, R.H.          | 18           | -----    | Engine, Briggs & Stratton Model No. 94202-0115-E1                               |
| 7            | 9173R      | Spacer, Split                  |              |          |   |
| 8            | 132212X574 | Bracket, Engine, L.H           |              |          |   |
| 9            | 10040500   | * Washer, Lock 5/16            |              |          |   |
| 10           | 73220500   | * Nut, Hex 5/16-18             |              |          |   |
| 11           | 19131311   | * Washer 13/32 x 13/16 x 11 Ga |              |          |   |
|              |            |                                |              |          | *STANDARD HARDWARE—PURCHASE LOCALLY   |
|              |            |                                |              |          | <b>NOTE:</b> All component dimensions given in U.S. inches.<br>1 inch = 25.4 mm |

## REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200

## DECALS

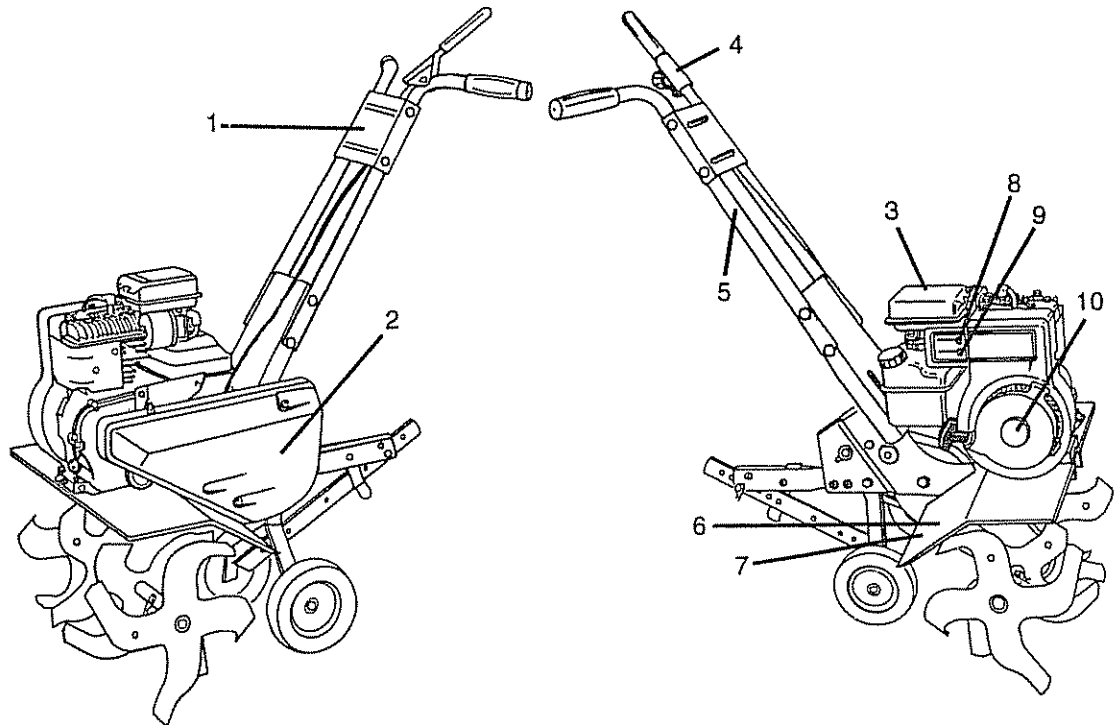


| KEY PART<br>NO. | NO.     | DESCRIPTION                    |
|-----------------|---------|--------------------------------|
| 1               | 163165  | Decal, Logo                    |
| 2               | 163322  | Decal, Logo                    |
| 3               | 110719X | Decal, Oper/Lubrication        |
| 4               | 110655X | Decal, Tine Control            |
| 5               | 120431X | Decal, Hand Placement          |
| 6               | 162215  | Decal, Tine Shield Wrng Dom    |
| 7               | 120075X | Decal, Warning, Rotating Tines |
| 8               | 273871  | Decal, Craftsman               |
| 9               | 273603  | Decal, Control Speed           |
| 10              | 273873  | Decal, 3.75 HP                 |
| --              | 163516  | Manual, Owner's (English)      |
| --              | 163517  | Manual, Owner's (Spanish)      |



# REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200


BRIGGS & STRATTON ENGINE -- MODEL NUMBER 94202, TYPE NO.01115-E1

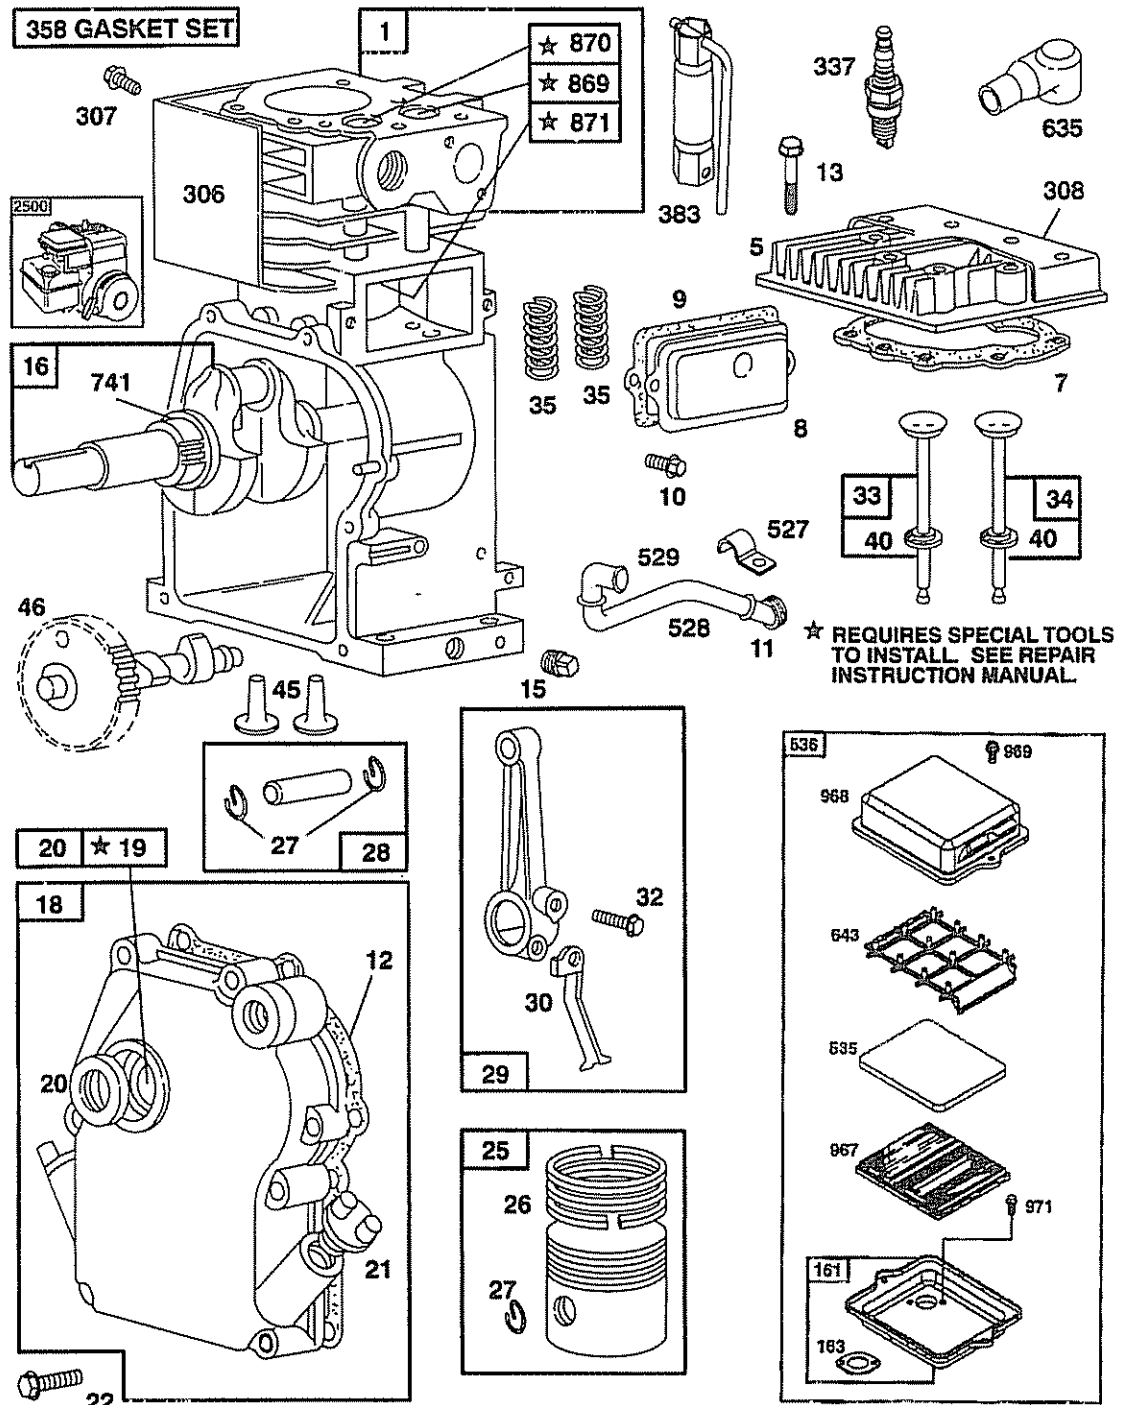

REPAIR PARTS

TILLER - - MODEL NUMBER 917.292200



BRIGGS & STRATTON ENGINE -- MODEL NUMBER 94202, TYPE NO.01115-E1

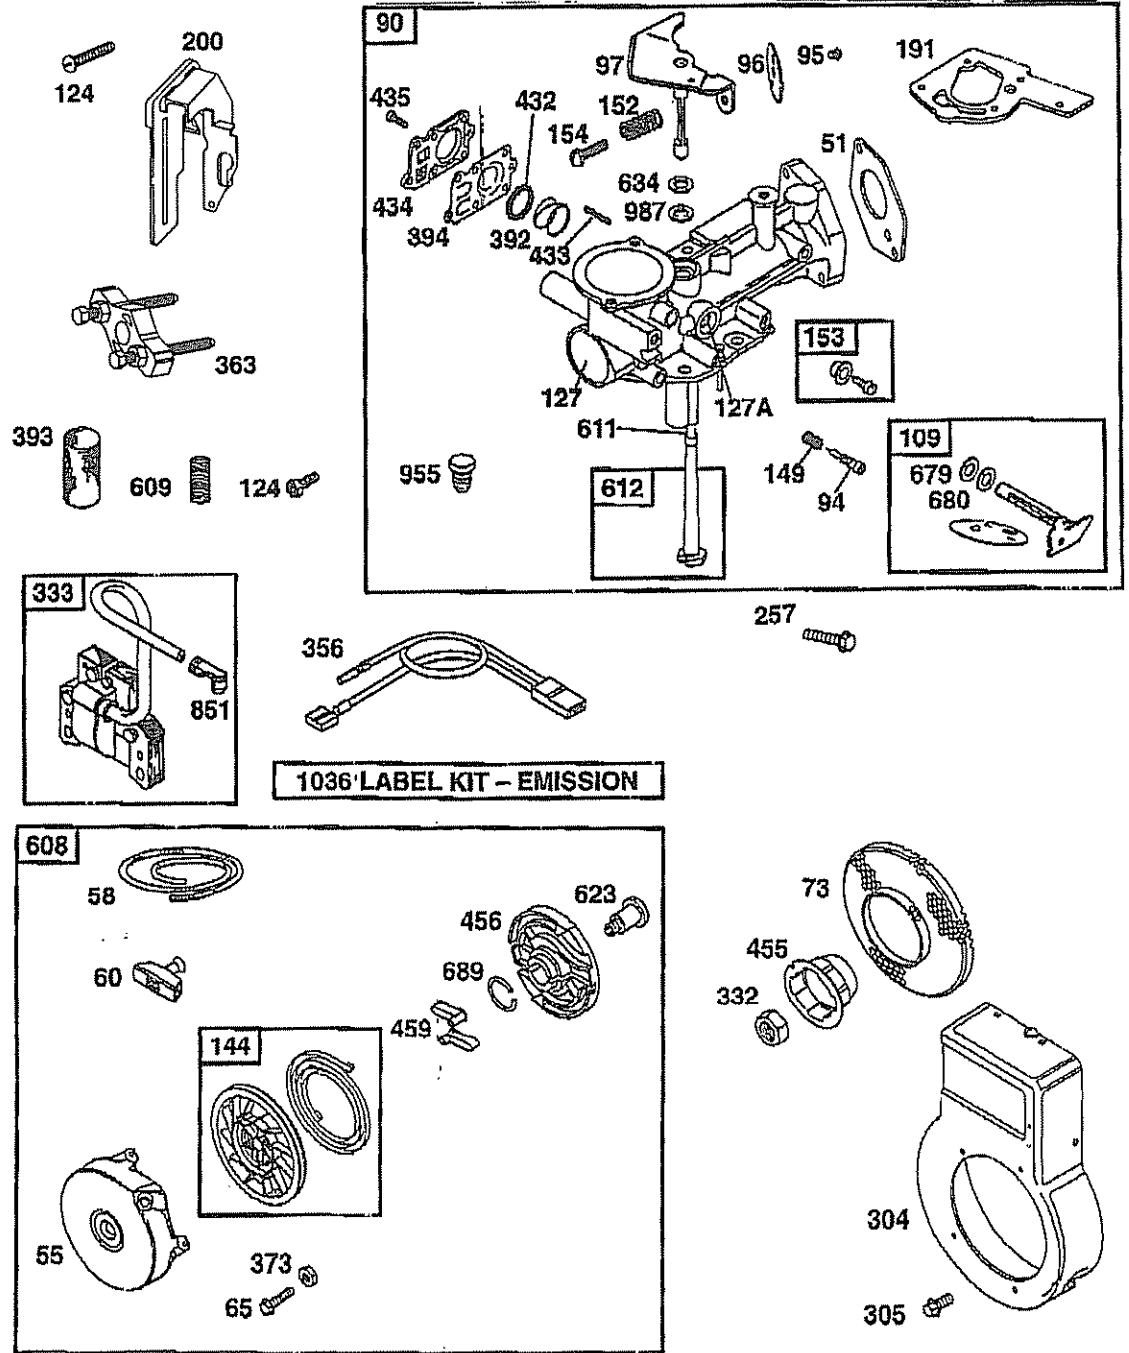

# REPAIR PARTS



TILLER - - MODEL NUMBER 917.292200

BRIGGS & STRATTON ENGINE -- MODEL NUMBER 94202, TYPE NO.01115-E1

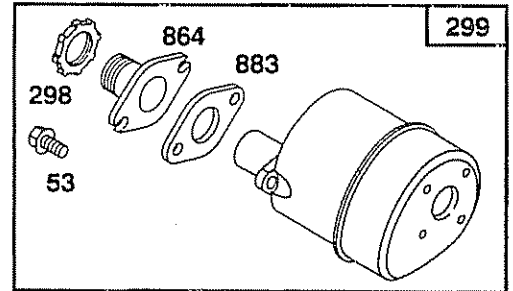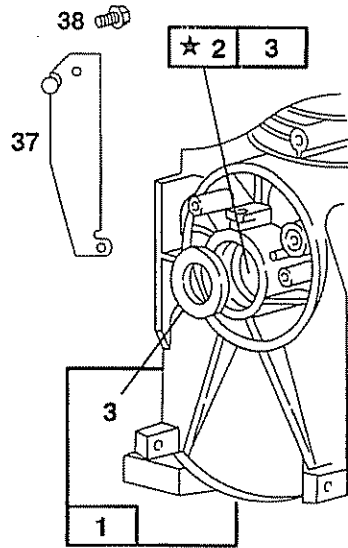

1019 LABEL KIT

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

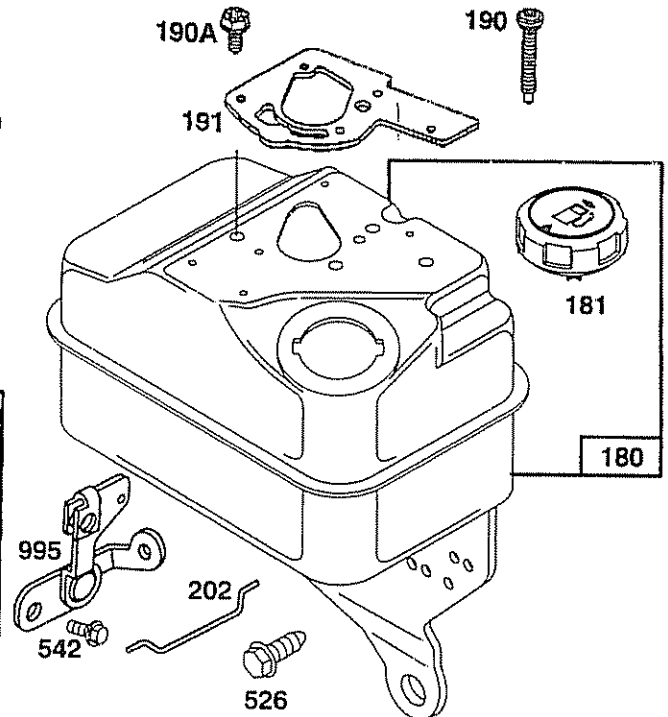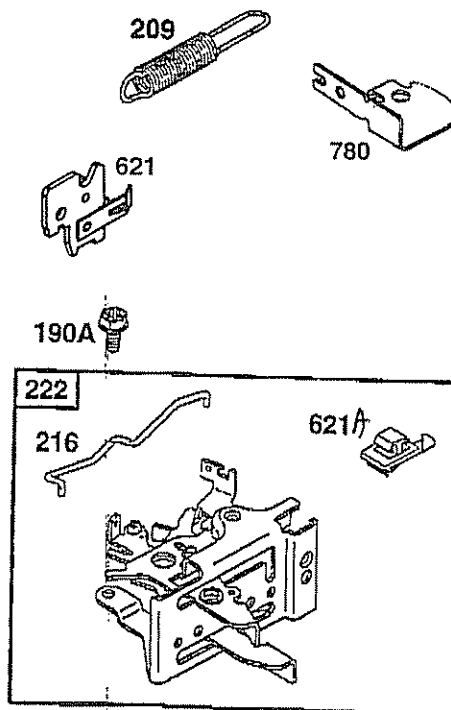

## REPAIR PARTS

### TILLER - - MODEL NUMBER 917.292200

### BRIGGS & STRATTON ENGINE -- MODEL NUMBER 94202, TYPE NO.01115-E1

| KEY PART NO. | KEY PART NO. | DESCRIPTION   | KEY PART NO. | KEY PART NO. | DESCRIPTION                                     |
|--------------|--------------|---|--------------|--------------|---|
| 1            | 494549       | Cylinder Assembly   | 30           | 220670       | Dipper, Connecting Rod                          |
| 2            | 293708       | Bushing, Cylinder (Special Tools Required For Installation) | 32           | 94699        | Screw, Connecting Rod                           |
| 3            | 299819       | * Seal, Oil   | 33           | 296676       | Valve, Exhaust (Includes Retainer Number 93312) |
| 5            | 214277       | Head, Cylinder  | 34           | 296677       | Valve, Intake                                   |
| 7            | 272694       | * Gasket, Cylinder Head                                     | 35           | 260552       | Spring, Valve                                   |
| 8            | 495774       | Breather, Valve Chamber                                     | 37           | 224557       | Guard, Flywheel                                 |
| 9            | 27543        | * Gasket, Valve Cover                                       | 38           | 94736        | Screw, Hex                                      |
| 10           | 94621        | Screw, Sems, Valve Cover Mount.                             | 40           | 93312        | Retainer, Valve Spring                          |
| 11           | 66578        | Grommet, Breather Tube                                      | 45           | 230173       | Tappet, Valve                                   |
| 12           | 270833       | * Gasket, Crankcase, Standard .015"                         | 46           | 493747       | Gear, Cam                                       |
|              | 270895       | * Gasket, Crankcase .005"                                   | 51           | 273113       | ** Gasket, Carb, Mounting                       |
|              | 270896       | * Gasket, Crankcase .009"                                   | 53           | 94523        | Screw, Exhaust                                  |
| 13           | 94960        | Screw, Cylinder Head  | 55           | 499441       | Housing, Rewind, Starter                        |
| 15           | 94387        | Plug, Oil Drain (Opposite Carb Side)                        | 58           | 281464       | Rope, Starter                                   |
| 16           | 495211       | Crankshaft  | 60           | 393152       | Grip, Starter Rope                              |
|              | 499047       | Key, Timing Gear Retaining                                  | 65           | 94904        | Screw, Starter, Housing                         |
| 18           | 394820       | Cover Assembly, Crankcase                                   | 73           | 225381       | Screen, Rotating                                |
| 19           | 293708       | Bushing, Crankcase  | 90           | 499941       | Carburetor Assembly                             |
| 20           | 299819       | * Seal, Oil   | 94           | 231533       | Valve, Idle Adjustment                          |
| 21           | 281658       | Plug, Oil Filler  | 95           | 93499        | Screw, Slotted                                  |
| 22           | 94607        | Screw, Hex  | 96           | 223793       | Valve, Throttle                                 |
| 22A          | 94862        | Screw, Hex, (Used In Pos. No. 1)                            | 97           | 495313       | Shaft and Lever, Throttle                       |
| 23           | 496278       | Flywheel  | 109          | 497230       | Choke, Shaft Kit                                |
| 24           | 222698       | Key, Flywheel   | 121          | 495606       | Carburetor, Overhaul Kit                        |
| 25           | 498668       | Piston Assembly, Standard                                   | 124          | 94616        | Screw, Torx                                     |
|              | 498669       | Piston Assembly .010" Oversize                              | 127          | 220352       | Plug, Welch                                     |
|              | 498670       | Piston Assembly .020" Oversize                              | 127A         | 223789       | Plug, Welch                                     |
|              | 498671       | Piston Assembly .030" Oversize                              | 144          | 499901       | Pulley/Spring Assy                              |
| 26           | 498680       | Ring Set, Piston, Standard                                  | 149          | 26336        | ** Spring, Needle Valve                         |
|              | 498681       | Ring Set, Piston .010" Oversize                             | 152          | 260575       | Spring Throttle Adjustment                      |
|              | 498682       | Ring Set, Piston .020" Oversize                             | 153          | 490501       | Collar, Bell, Crank                             |
|              | 498683       | Ring Set, Piston .030" Oversize                             | 154          | 93527        | Screw, Slotted                                  |
| 27           | 26026        | Lock, Piston Pin  | 161          | 492797       | Base, Air Cleaner                               |
| 28           | 298909       | Pin Assembly, Piston, Standard                              | 163          | 271935       | * Gasket, Air Cleaner                           |
|              | 298908       | Pin Assembly, Piston .005" Over                             | 180          | 495377       | Tank, Fuel                                      |
| 29           | 294367       | Rod Assembly, Connecting                                    | 181          | 494559       | Cap, Fuel Tank                                  |
|              | 296079       | Rod Assembly, Connecting, .020" Undersize Crankpin Bore     | 190          | 94919        | Screw, Torx                                     |
|              |              |   | 190A         | 94924        | Screw, Torx                                     |
|              |              |   | 191          | 272489       | Gasket, Fuel Tank                               |

\* Indicates Parts Included in Gasket Set (494550)

NOTE: All component dimensions given in U S inches  
1 inch = 25.4 mm

## REPAIR PARTS

### TILLER - - MODEL NUMBER 917.292200

### BRIGGS & STRATTON ENGINE -- MODEL NUMBER 94202, TYPE NO.01115-E1

| KEY PART NO. | KEY PART NO. | DESCRIPTION                       | KEY PART NO. | KEY PART NO. | DESCRIPTION                                |
|--------------|--------------|-----------------------------------|--------------|--------------|--|
| 200          | 495213       | Blade, Governor                   | 609          | 265715       | Spring, Choke                              |
| 201          | 263174       | Link, Governor                    | 611          | 231067       | Line, Fuel                                 |
| 202          | 262470       | Link, Throttle                    | 612          | 391813       | Tube, Pickup                               |
| 209          | 260041       | Spring, Governor                  | 614          | 93306        | Pin, Cotter                                |
| 216          | 263188       | Link, Choke                       | 616          | 496818       | Crank, Governor                            |
| 222          | 499533       | Bracket, Control                  | 618          | 262803 **    | Spring                                     |
| 257          | 93543        | Screw, Hex Head                   | 621          | 296110       | Switch, Stop                               |
| 298          | 220859       | Locknut, Muffler                  | 621A         | 396847       | Switch, Stop                               |
| 300          | 493288       | Muffler, Exhaust                  | 623          | 94943        | Screw, Shoulder                            |
| 304          | 499522       | Housing, Blower                   | 634          | 271853       | Washer, Throttle Shaft, Foam               |
| 305          | 94786        | Screw, Sems                       | 635          | 66538        | Elbow, Spark Plug                          |
| 306          | 224555       | Shield, Cylinder                  | 643          | 280737       | Spacer, Air Cleaner                        |
| 307          | 93758        | Screw, Sems, Cylinder Shield Mnt. | 679          | 270382       | Washer, Choke Shaft, Foam                  |
| 308          | 224556       | Cover, Cylinder Head              | 680          | 221839       | Washer, Choke Shaft                        |
| 332          | 94877        | Nut, Flywheel                     | 689          | 263073       | Spring, Friction                           |
| 333          | 496914       | Armature, Magneto                 | 741          | 261533       | Gear, Timing                               |
| 334          | 94731        | Screw, Armature Mounting          | 780          | 225029       | Anchor, Spring                             |
| 337          | 802592       | Plug, Spark                       | 851          | 493880       | Terminal, Ignition Cable                   |
| 356          | 497298       | Wire, Ground                      | 864          | 492232       | Adapter Assembly, Muffler                  |
| 358          | 495605       | Gasket Set                        | 869          | 211172       | Seat, Intake Valve                         |
| 363          | 19203        | Puller, Flywheel                  | 870          | 211291       | Seat, Exhaust Valve                        |
| 373          | 94908        | Nut, Hex                          | 871          | 231348       | Guide, Exhaust Valve                       |
| 383          | 89838        | Wrench, Spark Plug                |              | 63709        | Guide, Intake Valve<br>(See Repair Manual) |
| 392          | 262328       | Spring, Fuel Pump Diaphragm       | 883          | 272203       | Gasket, Muffler                            |
| 393          | 225058       | Screw, Carburetor                 | 955          | 281227       | Plug                                       |
| 394          | 272538 **    | Diaphragm                         | 967          | 491588       | Filter, Air                                |
| 432          | 221377       | Cap, Spring                       | 968          | 495872       | Cover, Air Cleaner                         |
| 433          | 93265        | Pin, Diaphragm                    | 969          | 490073       | Screw, Slotted Hex,<br>(Incl. Grommet)     |
| 434          | 213963       | Cover, Diaphragm                  |              |              |  |
| 435          | 93141        | Screw, Diaphragm Cover            | 971          | 94902        | Screw, Hex                                 |
| 455          | 225502       | Cup, Flywheel                     | 987          | 398970       | Seal, Throttle Shaft                       |
| 456          | 281503       | Plate, Pawl Friction              | 995          | 497195       | Control, Throttle                          |
| 459          | 281505       | Pawl, Ratchet                     | 1036         | 499329       | Label Kit, Emission                        |
| 526          | 94914        | Screw, Hex                        | 2500         | 94202-0115   | Replacement Engine                         |
| 527          | 223786       | Clamp, Breather Tube              | —            | 495914       | Replacement Shortblock                     |
| 528          | 491435       | Filter, Air                       |              |              |  |
| 529          | 67838        | Grommet, Breather Tube            |              |              |  |
| 535          | 491435       | Filter, Air                       |              |              |  |
| 536          | 494279       | Air Cleaner Kit                   |              |              |  |
| 542          | 94897        | Screw, Hex Head                   |              |              |  |
| 608          | 499706       | Starter Assembly, Rewind          |              |              |  |

RPM Settings: Low: 1200 - 1600  
High: 3500 - 3700

\* Indicates Parts Included in Gasket Set (494550)

NOTE: All component dimensions given in U.S. inches  
1 inch = 25.4 mm






For the repair or replacement parts you need  
delivered directly to your home  
Call 7 am - 7 pm, 7 days a week

**1-800-366-PART**

(1-800-366-7278)

Para ordenar piezas con entrega a  
domicilio – 1-800-659-7084

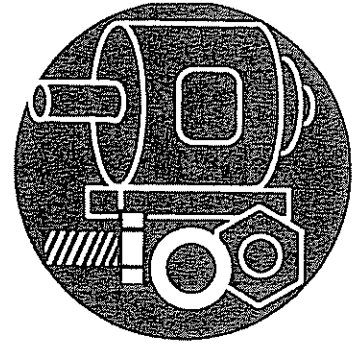


For in-house major brand repair service  
Call 24 hours a day, 7 days a week

**1-800-4-REPAIR**


(1-800-473-7274)

Para pedir servicio de reparación a  
domicilio – 1-800-676-5811

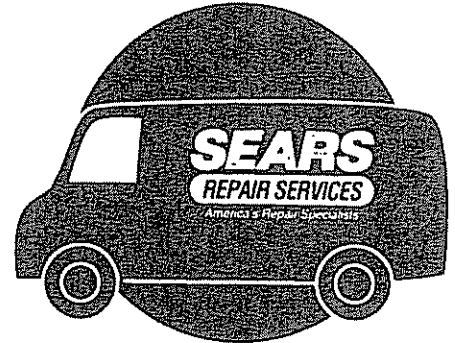


For the location of a Sears Parts and  
Repair Center in your area  
Call 24 hours a day, 7 days a week

**1-800-488-1222**

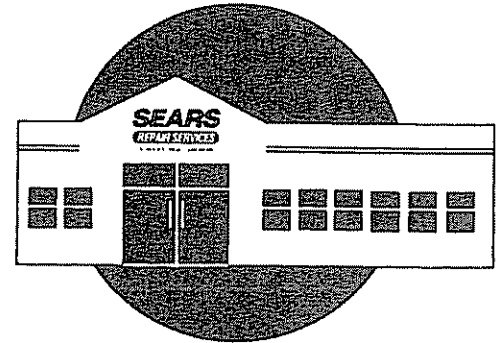

For information on purchasing a Sears  
Maintenance Agreement or to inquire  
about an existing Agreement  
Call 9 am – 5 pm, Monday–Saturday

**1-800-827-6655**

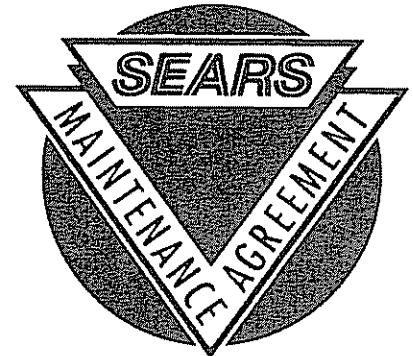

When requesting service or ordering  
parts, always provide the following  
information:

- Product Type
- Part Number
- Model Number
- Part Description



*America's Repair Specialists*



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>