

### Maintenance

Before performing any maintenance, **ALWAYS** unplug worklight. Remove dirt and grime as soon as it accumulates. Use a soft, damp cloth and a mild soap, if needed. Be sure not to get the electrical plug wet. **NEVER** submerge any part of the worklight in any solution to clean it. **DO NOT USE** solvents such as gasoline, turpentine, etc. to clean unit. Aerosols and other chemicals may fog the clear polycarbonate lens.

### One Year Full Warranty on Worklight

If this product fails due to a defect in material or workmanship within one year from the date of purchase, **RETURN IT TO YOUR NEAREST SEARS STORE OR CRAFTSMAN OUTLET IN THE UNITED STATES**, and it will be replaced free of charge. This warranty applies for only 90 days from the date of purchase if this Craftsman Worklight is used for commercial or rental purposes. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 USA  
Assembly or operation questions? Call 1-800-334-6871  
www.craftsman.com 9/2006

Contains nickel metal-hydride battery.

**BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY**

# Owner's Instructions


**CRAFTSMAN**

Caution: Read all instructions and warnings before operating.

**SAVE THESE INSTRUCTIONS! READ ALL INSTRUCTIONS!**

**NOTE: To avoid serious injury or death from electrical shock or fire:**

1. **DO NOT** handle this fixture or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
2. This fixture **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
3. **ONLY USE** the UL Listed battery charger, or 12V DC plug supplied with the fixture.
4. **DO NOT** replace batteries.
5. **DO NOT** work on this battery pack

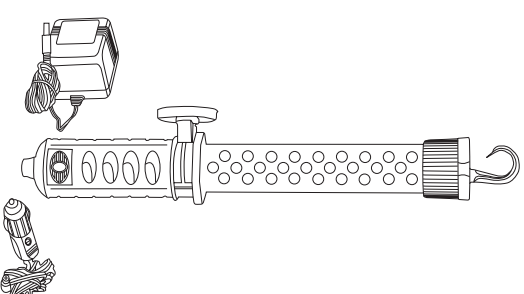

LED Work Light  
Model No. 73904

Printed in China  
325-1584



**CRAFTSMAN**

6. **DO NOT** disassemble fixture. The fixture does not have any user serviceable parts.
7. **FIXTURE IS NOT WATERPROOF** and is not intended for use in showers, saunas or in potentially wet locations. **ALWAYS** keep this fixture away from sinks, tubs, showers, etc. **NEVER ATTEMPT TO PICK UP PLUGGED-IN APPLIANCES WHEN THEY FALL INTO WATER BECAUSE FATAL ELECTROCUTION COULD RESULT.**
8. This fixture is intended for use as a general indoor lighting. **DO NOT** use in potentially dangerous locations, such as flammable or explosive atmospheres.
9. **NEVER** operate the light with the clear protective lens removed.
10. **KEEP OUT OF REACH OF CHILDREN.**
11. **DO NOT** dispose of battery in a fire.
12. **KEEP AWAY** from excessive heat or flame.
13. **DO NOT** short the positive-negative terminals together.
14. NiMH batteries may be disposed of in standard municipal waste systems.
15. **DO NOT** look directly into the light.

- Operation**
1. Depress switch in the handle one time to turn on the floodlight LED lights.
  2. Depress switch a second time to turn the floodlight off and the spotlight on.
  3. Depress the switch a third time to turn both the floodlight and spotlight on.
  4. Depress the switch a fourth time to turn both lights off.

- Recharging Utility Light**
1. Remove cap on the bottom of the worklight handle.
  2. When charging with AC adapter, insert the battery charger plug into the jack on the worklight handle and the other end into a standard 110-120V AC outlet.
  3. When charging with DC adapter, insert the battery charger plug into the jack on the worklight handle and the other end into a standard 12-volt DC outlet.
- NOTE:** Batteries will reach full charge in about 2 hours. LED indicator light glows red while the batteries are charging. When the light is fully charge, the LED indicator turns to green.

- Hanging Utility Light**
1. Hanging hook can rotate 360°.
  2. Magnet rotates 360° for attachment to vertical metal surfaces. Clings to most metal surfaces.
- WARNING:** Do not use magnet for horizontal overhead mounting.  
**CAUTION:** Do not slide on finished painted surfaces as magnet may scratch finish.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>