






## **User's Guide**


Download from Www.Somanuals.com. All Manuals Search And Download.

**Congratulations** and thank you for choosing the Crate GT15/15R Guitar Amplifier. This rugged amplifier combines outstanding features with serious clean and distorted sounds. A Reverb control (GT15R only) is provided for greater flexibility. RCA input jacks allow connection of a CD or tape player for playing along with your favorite music, and the Headphones jack lets you practice in private.

In order to get the most out of your new amplifier, we strongly urge you to read this manual before you begin playing.

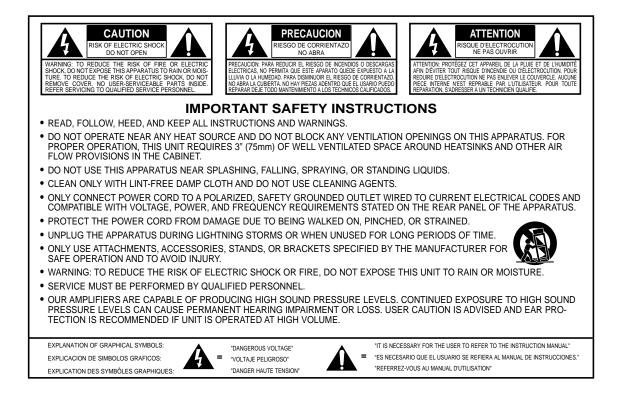

## The Front Panel:

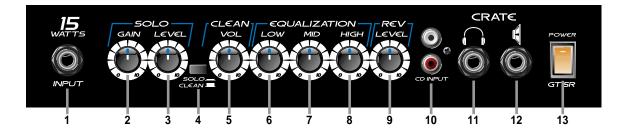

**1: INPUT:** Use this jack to connect your guitar to the amplifier by means of a shielded instrument cable.

**SOLO CHANNEL:** A high gain channel giving you sounds from a slight edge to serious overdrive.

**2: GAIN:** Use this control to adjust the amount of distortion for the Solo channel.

**3: LEVEL:** Use this control to adjust the output level of the Solo channel.

**4: SOLO/CLEAN:** Use this switch to select the Solo or Clean channel. With the switch in the out position, the Clean channel is selected. When the switch is depressed, the Solo channel is selected.

**CLEAN CHANNEL:** A normal gain channel designed to give you crystal clear sounds to medium distortion.

**5: VOL:** Use this control to adjust the output level of the Clean channel.

**6: LOW:** Use this control to adjust the low frequency level of the amplifier.

**7: MID:** Use this control to adjust the midrange frequency level of the amplifier.

**8: HIGH:** Use this control to adjust the high frequency level of the amplifier.

**9. REV LEVEL (GT15R only):** Use this control to adjust the level of reverb effect.

**10: CD INPUT:** Use these RCA jacks to connect the output from a CD player or tape deck to the amplifier. The signal at these jacks is combined into a mono signal which is sent to the internal power amp circuit. Use the CD or tape player's output level control to adjust the signal for the proper mix with your guitar.

**11: HEADPHONES:** Use this jack to connect headphones to the amplifier. The internal speaker is disconnected when headphones are used.

CAUTION: To avoid possible damage to your hearing, do not use headphones for extended periods of time at extremely loud levels.

**12: SPEAKER:** Use this jack to connect the amplifier to an external speaker. The internal speaker is disconnected when this jack is used. The impedance of the external speaker must be 4 ohms or greater.

WARNING: Do not attempt to use headphones in the Speaker jack! Permanent hearing damage could result!

**13: POWER:** Use this switch to turn the amplifier on (top of the switch depressed) and off (bottom of the switch depressed). The switch illuminates when the amplifier is turned on.

14: POWER CORD (rear panel, not shown): The grounded power cord should only be plugged into a grounded power outlet that meets all applicable electrical codes and is compatible with the voltage, power, and frequency requirements stated on the rear panel. Do not attempt to defeat the safety ground connection.



GTTS/TSK TECHNICAL SPECIFICATIONS.		
Output Power Rating		12W RMS @ 5% THD, 4Ω, 120 VAC
Gain	Solo Ch	86dB +/-6dB @ 1kHz
	Clean Ch	46dB +/-6dB @ 1kHz
CD Input		26dB +/-2dB
Maximum Input Signal Accepted		2.2 volts RMS min. @ 400Hz
Tone Controls	Low	25dB range @ 80Hz
	Mid	19dB range @ 900Hz
	High	23dB range @ 5kHz
Signal To Noise Ratio	Solo Ch	>50dB
	Clean Ch	>65dB
Speaker Size and Rating		8" Crate Custom Design 4 ohm
Power Requirements		120 VAC, 60Hz, 30VA
		100/115VAC, 50/60Hz, 30VA
		230VAC, 50/60Hz, 30VA
Size and Weight		13" H x 13-5/8" W x 8-1/4" D, 15 lbs.

## **GT15/15R TECHNICAL SPECIFICATIONS:**

The GT15/15R is covered with a durable Tolex material: wipe it clean with a lint-free cloth. Never spray cleaning agents onto the cabinet. Avoid abrasive cleansers which would damage the finish.

Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice.

Declaration Of Conformity			
	#27, Effective 01-01-2001		
Manufacturer's Name: Production Facility: Production Facility: Shipping Facility: Office Facility:	SLM Electronics 11880 Borman Drive, St. Louis, MO 63146, USA 700 Hwy 202 W, Yellville, AR 72687, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA		
Product Type:	Audio Amplifier		
Safety: EN60065, E60065, C22.2, UL6500 and/or UL813   EMC: Directive 89/336/EEC, EN55103, EN55013, EN61000, and/or FCC 47CFR 15B clA			
190	Supplementary information provided by: SLM Electronics - R & D Engineering 1 Congressional Drive, St Louis, MO 63146, USA Tel.: 314-569-0141, Fax: 314-569-0175		





@2002 SLM Electronics, a division of St. Louis Music, Inc • 1400 Ferguson Avenue • St. Louis, MO 63133 47-447-04 • 052703 Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com