Owner's Guide for the

CRATE MFX1200H Guitar Amplifier



Congratulations!

You are now the proud owner of the Crate MFX1200H Guitar Amplifier. This rugged amp head combines outstanding features with serious clean and distorted sounds. An easy to operate DSP section lets you dial in a variety of digital effects such as delay, flange, chorus and reverb – with its own level control. Channel selection, Crate's exclusive Shape circuit, and DSP on/off are controllable by the supplied three-button footswitch. A front panel insert jack allows virtually noise-free connection of your favorite effects.

Like all Crate products, your MFX1200H is designed by musicians and built using only the best components. Extensive testing confirms that this amplifier is the absolute best it can be.

In order to get the most out of your new amplifier, we strongly urge you to read the information contained in this manual before you begin playing.

And thank you for choosing



TABLE OF CONTENTS:

Important Safeguards and Precautions
The Front Panel
Suggested Settings6
System Block Diagram7
Technical Specifications







IMPORTANT SAFETY INSTRUCTIONS

- READ, FOLLOW, HEED, AND KEEP ALL INSTRUCTIONS AND WARNINGS.
- DO NOT OPERATE NEAR ANY HEAT SOURCE AND DO NOT BLOCK ANY VENTILATION OPENINGS ON THIS APPARATUS.
- DO NOT USE THIS APPARATUS NEAR SPLASHING, FALLING, SPRAYING, OR STANDING LIQUIDS.
- CLEAN ONLY WITH LINT-FREE DAMP CLOTH AND DO NOT USE CLEANING AGENTS.
- ONLY CONNECT POWER CORD TO A POLARIZED, SAFETY GROUNDED OUTLET WIRED TO CURRENT ELECTRICAL CODES AND COMPATIBLE WITH VOLTAGE, POWER, AND FREQUENCY REQUIREMENTS STATED ON THE REAR PANEL OF THE APPARATUS.
- PROTECT THE POWER CORD FROM DAMAGE DUE TO BEING WALKED ON, PINCHED, OR STRAINED.
- UNPLUG THE APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.
- ONLY USE ATTACHMENTS, ACCESSORIES, STANDS, OR BRACKETS SPECIFIED BY THE MANUFACTURER FOR SAFE OPERA-TION AND TO AVOID INJURY.
- THIS APPARATUS DOES NOT OPERATE NORMALLY AND REQUIRES SERVICE WITH ANY PHYSICAL DAMAGE FROM IMPACT OR ANY EXPOSURE TO MOISTURE.
- SERVICE MUST BE PERFORMED BY QUALIFIED PERSONNEL.
- OUR AMPLIFIERS ARE CAPABLE OF PRODUCING HIGH SOUND PRESSURE LEVELS. CONTINUED EXPOSURE TO HIGH SOUND PRESSURE LEVELS CAN CAUSE PERMANENT HEARING IMPAIRMENT OR LOSS. USER CAUTION IS ADVISED AND EAR PROTECTION IS RECOMMENDED IF UNIT IS OPERATED AT HIGH VOLUME.

EXPLANATION OF GRAPHICAL SYMBOLS: EXPLICACION DE SIMBOLOS GRAFICOS: EXPLICATION DES SYMBÔLES GRAPHIQUES:



"DANGEROUS VOLTAGE"

"VOLTAJE PELIGROSO"

"DANGER HAUTE TENSION"



"IT IS NECESSARY FOR THE USER TO REFER TO THE INSTRUCTION MANUAL"
"ES NECESARIO QUE EL USUARIO SE REFIERA AL MANUAL DE INSTRUCCIONES."
"REFERREZ-VOUS AU MANUAL D'UTILISATION"

Important Safeguards and Precautions:

All Crate products are designed for continuous safe operation. Abiding by the following rules can help prevent damage to your amplifier, yourself and others.

- The amplifier is equipped with a three-pronged AC power cord. To reduce the risk of electrical shock, NEVER remove or otherwise attempt to defeat the ground pin of the power cord.
- Connect the amplifier ONLY to a properly grounded AC outlet of the proper voltage for your amp.
- Avoid sudden temperature extremes, rain and moisture. Also, avoid sudden and intense impact. (If the unit has been subjected to any of the preceding abuses, have it looked at by an authorized service center.)
- Do not expose the unit to splashing or dripping liquid. Do not place liquid filled objects on the unit.
- NEVER set the amplifier on a support that will not bear its weight.
- Always keep the total speaker impedance at or above the rated load.
- Unplug the amplifier before cleaning it. NEVER spray liquid cleaners onto the amplifier. Wipe it with a slightly dampened, lint-free cloth to remove dirt and film.
- DO NOT use the amplifier if it has sustained damage to the chassis, controls, or power cord. Refer the unit to an authorized service center for inspection.
- Prolonged exposure to high volume levels may cause permanent hearing loss or damage. Such damage is progressive and irreversible!

Declaration Of Conformity

#30, Effective 01-01-2001

Manufacturer's Name: SLM Electronics

Production Facility: 11880 Borman Drive, St. Louis, MO 63146, USA 700 Hwy 202 W, Yellville, AR 72687, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA 1400 Ferguson Ave., St. Louis, MO 63133, USA

Product Type: Audio Amplifier

Complies with Standards:

LVD: 92/31/EEC, 93/68/EEC, & 73/23/EWG

Safety: EN60065

EMC: EN55013, EN55020, EN55022, EN61000-3-2,

& EN61000-3-3

Supplementary information provided by: SLM Electronics - R & D Engineering 1901 Congressional Drive, St Louis, MO 63146, USA Tel.: 314-569-0141, Fax: 314-569-0175

The Front Panel:



1: INPUT: Use this 1/4" jack to connect your instrument to the amplifier by means of a shielded instrument cable.

OVERDRIVE CHANNEL: A high gain channel giving you sounds from a slight edge to serious overdrive.

- 2: GAIN 1: Use this control to adjust the input gain for the Overdrive channel. Gain 1 produces less distortion than Gain 2 (#3) and is active when the Gain switch (#5) is in the out position.
- **3: GAIN 2:** Use this control to adjust the input gain for the Overdrive channel. Gain 2 produces more distortion than Gain 1 (#2) and is active when the Gain switch (#5) is depressed.
- **4: SHAPE:** Use this control to adjust the tone of the input signal for Gain 2. Rotating this control counterclockwise emphasizes the midrange frequencies. Rotating this control clockwise emphasizes the low and high frequencies. This control is active when the Gain switch (#5) is depressed.
- **5: GAIN:** Use this switch to select Gain 1 or Gain 2 for the Overdrive channel. When the switch is in the out position Gain 1 is selected. Gain 2 is selected when the switch is depressed.
- **6: LOW:** Use this control to adjust the bass response of the Overdrive channel. Rotating the control counterclockwise reduces the low frequency output. Rotating the control clockwise increases the low frequency output. The Low control provides a range of 11dB of boost or cut at 80Hz.
- **7: HIGH:** Use this control to adjust the high frequency response of the Overdrive channel. Rotating the control counterclockwise reduces

the high frequency output. Rotating the control clockwise increases the high frequency output. The High control provides a range of 10dB of boost or cut at 10kHz.

- **8: LEVEL:** Use this control to adjust the output level of the Overdrive channel.
- 9: CHAN: Use this switch to select the Overdrive channel or the Clean channel. When the switch is in the out position the Clean channel is selected. The Overdrive channel is selected when the switch is depressed. The adjacent LEDs illuminate to indicate which channel is selected. Channel selection may also be made with a footswitch (#17).
- **CLEAN CHANNEL:** A normal gain channel designed to give you crystal clear sounds.
- **10: LEVEL:** Use this control to adjust the output level of the Clean channel.
- 11: LOW: Use this control to adjust the bass response of the Clean channel. Rotating the control counterclockwise reduces the low frequency output. Rotating the control clockwise increases the low frequency output. The Low control provides a range of 22dB of boost or cut at 80Hz.
- **12: MID:** Use this control to adjust the midrange frequency response of the Clean channel. Rotating the control counterclockwise reduces the midrange frequency output. Rotating the control clockwise increases the high frequency output. The Mid control provides a range of 14dB of boost or cut at 600Hz.
- **13: HIGH:** Use this control to adjust the high frequency response of the Clean channel. Rotating the control counterclockwise reduces



the high frequency output. Rotating the control clockwise increases the high frequency output. The High control provides a range of 28dB of boost or cut at 10kHz.

14: DSP LEVEL: Use this control to adjust the amount of digital signal processing to be applied to the signal. In the fully counterclockwise position the output signal is "dry" (no effect applied). As you rotate the control clockwise the amount of effect increases. The DSP may be turned on and off with a footswitch (#17).

15: DSP MODE: Use this control to select one of the ten digital effects. The nomenclature around the Mode control defines the five types of effects available. Each effect listed has two variations as described below:

DELAY: Slapback delay

Long delay w/regeneration

FLANGE: Light Flange

Heavy Flange

CHORUS: Slow Chorus

Fast Chorus

CHO-REV: Chorus w/small room reverb

Chorus w/large room reverb

REVERB: Small room reverb

Large room reverb

16: INSERT: Use this jack to connect an external signal processor to the amplifier. Refer to the adjacent illustration for additional information.

17: FOOTSWITCH: Use this jack to connect a two-button footswitch to the amplifier for remote control of channel selection and DSP on and off.


18: ON LED: This LED illuminates when the amplifier is turned on.

19: POWER: Use this switch to turn the amplifier on (top of the switch depressed) and off (bottom of the switch depressed).

20: POWER CORD (rear panel, not shown): The grounded power cord should only be plugged into a grounded power outlet that meets all applicable electrical codes and is compatible with the voltage, power, and frequency requirements stated on the rear panel. Do not attempt to defeat the safety ground connection.

Connecting to the Insert jack:

The Insert jack (#16) allow you to patch an external effects device into the amplifier prior to its power amp stage. Use Crate's STP201, STP202 or STP203 stereo-to-mono Y cord or an adapter such as Crate's YPP117 and two 1/4" mono signal cables to connect the effect as shown below.

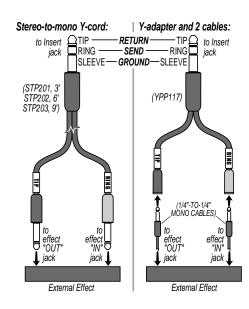

Suggested Settings:

 
Clean:



Blues:




Rhythm:



Lead:



System Block Diagram:

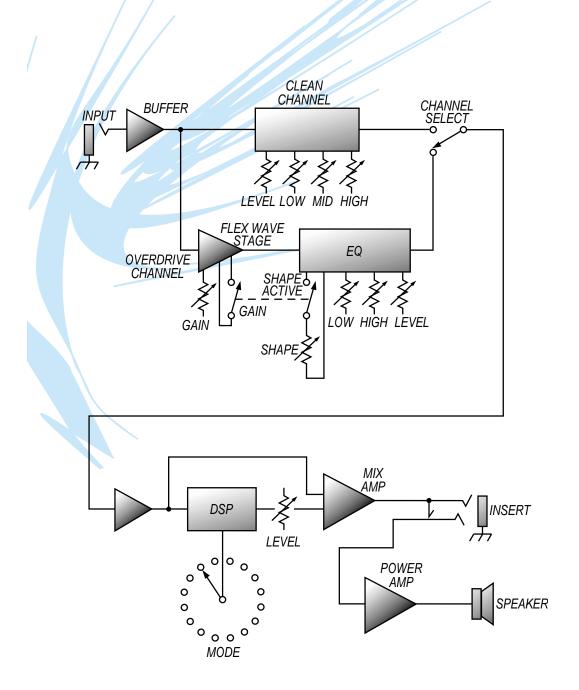

MFX1200H TECHNICAL SPECIFICATIONS:

Output Power Rating		70 watts RMS @ 5% THD 8 ohms, 120 VAC		
		100 watts RMS @ 5% THD 4 ohms, 120 VA	С	
Maximum Input Signal Accepted		8 volts peak-to-peak		
Input Impedance		470k ohms		
Overdrive Channel:	Low Control	11dB Range @ 80Hz		
	Shape Control	Proprietary Circuit		
	High Control	10dB Range @ 10kHz		
Clean Channel:	Low Control	22dB Range @ 80Hz		
	Mid Control	14dB Range @ 600Hz		
	High Control	28dB Range @ 10kHz		
Power Requirements		120 VAC, 60Hz, 230VA		
		100/115VAC, 50/60Hz, 230VA		
		230VAC, 50Hz, 230VA		
Size and Weight		9.38" H x 19.75" W x 9.5" D, 25 lbs.	V	

The MFX1200H is covered with a durable black Tolex material: wipe it clean with a lint-free cloth.

Never spray cleaning agents onto the cabinet. Avoid abrasive cleansers which would damage the finish.

Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com