

VC-120H Vintage Club Amplifier



OWNER'S MANUAL

Download from Www.Somanuals.com. All Manuals Search And Download.

 


Congratulations!

You are now the proud owner of one of the newest and most versatile tube amplifiers available for the guitar! The CRATE VC-120H offers flexibility and portability with two separate channels for a uniquely rich palette of tonal variety and simplicity of control over your sound.

Your CRATE Vintage Club Series amplifier is musician-made in the U.S.A. using the finest components available. Each unit is rigorously tested by skilled technicians and musicians to ensure that your amplifier is the best it can be!

In order to get the most out of your new amplifier, we strongly urge you to go over the information contained in this manual before you begin playing.




CAUTION Risk of ELECTRIC SHOCK Do NOT OREN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE GOVER. NO USER-SERVICEABLE PARTS INSIDE: REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	ATTENTION POUR REQUIRE DELECT NATENTION POUR REQUIRE DELECT ENLEVER LE COLVERCLE AUCUNE PECE PAR LUTILISATEUR POUR TOUTE REPARA TECHNICIEN QUALIFI	TION ROCUTION NE PAS NTERNE N'EST REPRABLE TION, SADRESSER A UN	VORSICHT: ZUR MINI DEN DECKEL ABI BENUTZER GEWAR	VORSICHT LICTRISCHE SCHLAGGEFAR NICHT OFFENEN MIERUNG ELEKTRISCHER SCHLAGGEFAR NICHT ENMARN. NTERNE TELE KONNEN NICHT YOM TET WERDEN DUULFIZIERTEM UNGSPERSONAL ZU UBERLASSEN.
THIS EQUIPMENT HAS BEEN DESIGNED AND E OF THE UNIT AND PREVENT ACCIDENTAL DAM				
CAUTION: TO REDUCE THE RISK OF ELECTRIC POWER CORD; CONNECT ONLY TO A PROPER	C SHOCK, DO NOT OPEN CHAS LY GROUNDED AC POWER OU	SSIS; DO NOT DEFEA JTLET.	T OR REMOVE T	HE GROUND PIN OF THE
WARNING: TO REDUCE THE RISK OF FIRE OR	ELECTRIC SHOCK, DO NOT EX	XPOSE THIS EQUIPM	ENT TO RAIN OF	R MOISTURE.
CAUTION: NO USER-SERVICEABLE PARTS INS	IDE. REFER SERVICING TO QU	JALIFIED SERVICE PE	RSONNEL.	
CAUTION: THIS UNIT IS CAPABLE OF PRODUCI LEVELS CAN CAUSE PERMANENT HEARING IM UNIT IS OPERATED AT HIGH VOLUME. THE CH/ TRATION (OSHA) REGULATIONS WHICH WERE 29CFR1910.95, TABLE G-16:	IPAIRMENT OR LOSS. USER CA ART BELOW SHOWS THE U.S.	AUTION IS ADVISED, GOVERNMENT'S OC	AND EAR PROTI	ECTION RECOMMENDED IF FETY AND HEALTH ADMINIS-
SOUND LEVEL SLOW RESPO	DBA, DURATION PER DAY S	OUND LEVEL DBA, DUR	ATION PER DAY	
90	NSE IN HOURS	102	IN HOURS 1 - 1 1/2	
92 95	6 4	105 110	1 1/2	
97 100	3 2	115	1/4 or less	
ACCORDING TO OSHA, ANY EXPOSURE I	N EXCESS TO THESE AMOUN	TS LISTED ABOVE CO	OULD RESULT IN	I SOME HEARING LOSS.
EXPLANATION OF GRAPHICAL SYMBOLS: GEFAHLICHE	UTE TENSION"	"IT IS NECESSARY FOR "REFERREZ-VOUS AU M "UNBEDINGT IN DER BE	ANUAL D'UTILISATI	




TABLE OF CONTENTS:
Features
The Front Panel Controls and Their Use
The Rear Panel5
Some Suggested Settings
System Block Diagram7
Technical Specifications

Features:

- All tube operation
- Two completely independent channels with individual gain and tone controls
- Channel switching from the front panel **or** footswitch (supplied)
- Individual reverb return controls for each channel
- Effects Loop for virtually noise-free connection of your favorite effect(s) controllable by a footswitch (supplied)
- Specially designed paper bobbin output transformer for a true "vintage" sound
- Durable tolex[®] covering and special cosmetic treatments for a unique stage appearance

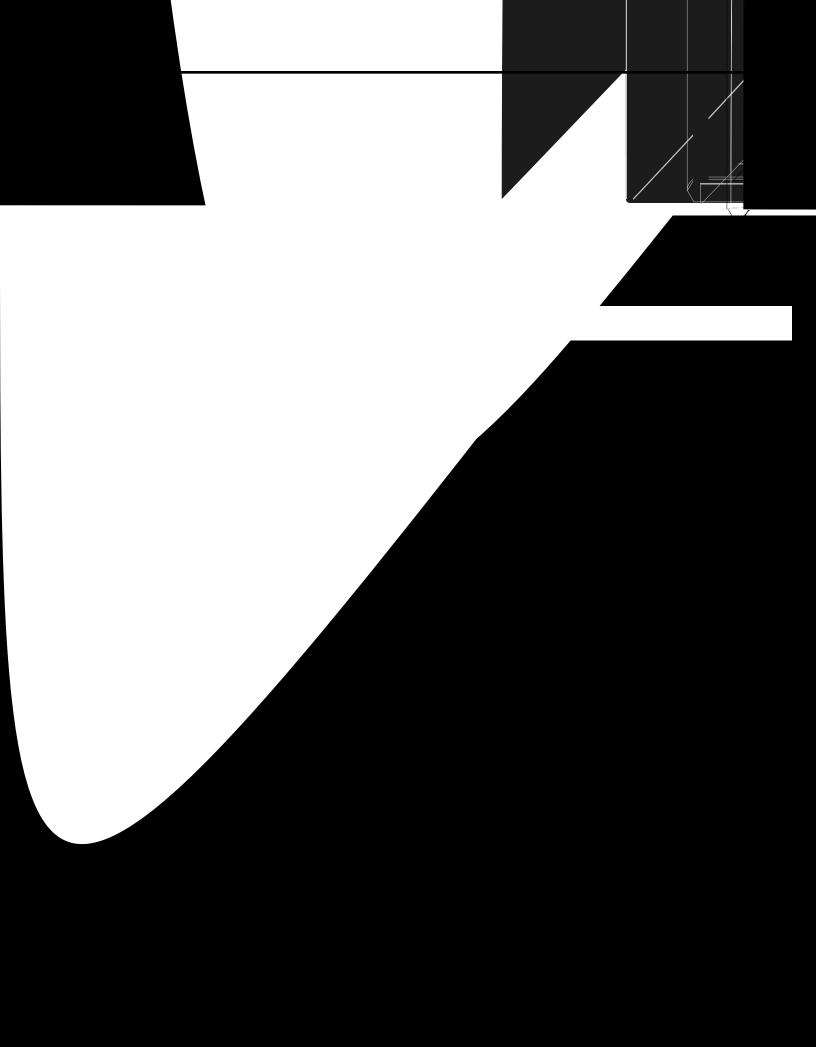



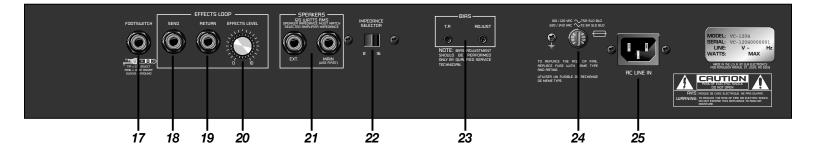

The Rear Panel:

- **17. FOOTSWITCH JACK:** Connect the supplied two button footswitch for control of channel switching and the effects loop on/off. The tip of the jack is for channel switching; the ring is for effects. When a footswitch is connected here, the front panel channel select switch is disabled.
- **18. EFFECTS LOOP SEND JACK:** Connection *to* an external effects device is made via this jack. Connect a shielded instrument patch cord from the send jack to the input jack of the effect. The send jack also doubles as a "preamp out" jack, to feed a post-eq signal to a mixing board, recording console or external amplifier.


NOTE: Effects loop operation is parallel with the signal path. Mix controls on the effects should be set to 100% (full wet). If no effects are connected to the Effects Loop, the Effects Level control (#20) acts as an extra volume boost which can be activated by the footswitch. For the best signal to noise ratio when NOT using the effects loop, keep the Effects Level control (#20) set to "0".

- **19. EFFECTS LOOP RETURN JACK:** Connection *from* an external effects device is made via this jack. Connect a shielded instrument patch cord from the output jack of the effect to the return jack. The return jack also doubles as a "power amp in" jack, to feed a line-level signal directly into the internal power amp. This is useful when "slaving" two amplifiers together. When using in this mode (slaving), make sure the front panel Master volume controls are all the way down (at "0").
- **20. EFFECTS LEVEL CONTROL:** Use this knob to set the input level of the signal from the Effects Loop Return jack (#19). The Effects Loop Send level is adjusted by the Master volume controls (#6).
- 21. SPEAKER JACKS: Connect the amplifier to your speaker cabinet(s) via these jacks, using heavy-duty speaker cables (*not* instrument patch cords). Use cabinets rated at 8 ohms or higher, in combinations which never create a load lower than 8 ohms. Make sure the Impedance switch (#22) is properly set. Always use the MAIN speaker jack *first*, then connect to the EXTENSION jack if using more than one cabinet.

22. IMPEDANCE SWITCH: For the best performance and least strain on the amp, you MUST match the amp's impedance to that of your speaker cabinet(s). Set the selector switch to the 8 or 16 ohm position, depending on the total impedance of your cabinets. The chart below can help you determine that impedance based on the following combinations of speakers connected in parallel.

CAB IMP.	<u># OF CABS</u>	TOTAL IMP.
16 ohms	2	8 ohms
32 ohms	2	16 ohms
32 ohms	4	8 ohms

 
- 23. BIAS ADJUST / BIAS TEST POINT: For qualified Service Personnel only! (All others please just ignore these internal Bias adjustment potentiometers.)
- 24. FUSE: This fuse protects the amplifier against damages caused by overload conditions in the unit. If the fuse blows, replace it only with the same size and type as indicated on the rear panel. If the fuse blows continually, the line voltage may be incorrect, or the amp may need servicing.
- 25. AC LINE IN: Firmly plug the female end of the supplied power cord into this socket, pushing it in until it is fully seated. Plug the male end of the cord into a properly grounded AC outlet of the correct voltage. DO NOT DEFEAT THE GROUND PIN OF THE AC PLUG! Use only the supplied power cord. If the amplifier is to be used outside of the United States, see your authorized Crate dealer for information about alternate line cords and power converters if needed.








System Block Diagram:

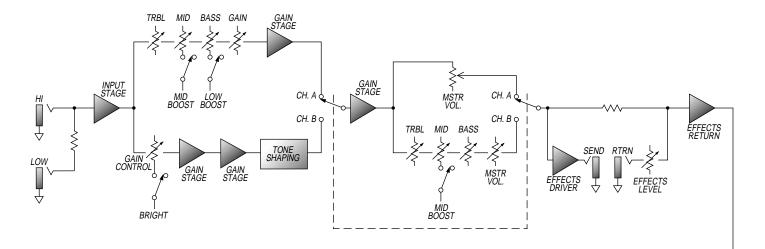

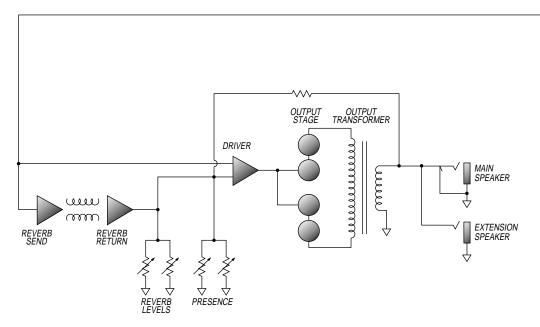

TECHNICAL SPECIFICATIONS:

Output Power Rating		120W RMS @ 5% THD, 16 ohm load, 120 VAC		
Input Impedance		1 M ohm		
Maximum Signal Accepted		0dB: 1.5V peak to peak; -6dB: 2.8V peak to peak		
Gain	Channel A: Channel B:	68dB 100dB		
Tone Control Range	Channel A: Channel B:	Treble: Mid: Bass: Mid Boost: Low Boost: Treble: Mid: Bass: Bright: Mid Boost:	16dB @ 5kHz 8dB @ 700Hz 10dB @ 50Hz 12dB @ 800Hz 13dB @ 100Hz 16dB @ 2.5kHz 6dB @ 800Hz 22dB @ 150Hz 10dB @ 3kHz 8dB @ 800Hz	
	Both Channels	Presence:	4dB @ 10kHz	
Effects Send		2.1V RMS @ full power output		
Tube Type		Preamp: (1)	Preamp: (1) 12AU7, (4) 12AX7; Power Amp: (4) 6L6GC/EL34	
Power Requirements		120VAC, 60Hz, 400VA 100/115VAC, 50/60Hz, 400VA 230VAC, 50/60Hz, 400VA		
Size and Weight		12-1/2" H x 27" W x 9-1/2" D, 47 lbs		

The VC-120H is covered with a durable black Tolex[®] material. To keep the cabinet in top condition, wipe it clean with a damp lint-free cloth to remove dirt and road film. Never spray cleaning agents directly onto the cabinet, and stay away from abrasive cleansers which could damage the finish.

Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice.





©1998 SLM ELECTRONICS • A division of St. Louis Music • 1400 Ferguson Avenue • St. Louis, Mo 63133

P/N 47-271-02 • 08/98 Download from Www.Somanuals.com. All Manuals Search And Download. Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com