

OPERATING and MAINTENANCE INSTRUCTIONS

Model CCB150 Series Banquet Warming Cabinet

ELECTRICAL SPECIFICATIONS:

Volts	Watts	Amps	Hertz	Phase	NEMA	*NEMA
120	1650	13.8	60	1	5-15P	5-20P
240	1650	6.9	60	1	6-15P	6-15P


**For Canadian use. Models designed for AC service*

HOW TO INSTALL UNIT:

1. Remove all packing material from inside the cabinet and clean cabinet thoroughly.
2. Install all channels and shelves before the unit is put into operation.
3. Plug the power cord into the proper wall outlet.

HOW TO START UNIT:

1. Push power switch to **ON**.
The yellow light will turn on.
2. Turn thermostat to #10.
3. Preheat (assuming a "cold" cabinet of 75° F/25° C):
 - (a) To 150° F/65° C takes about 30 minutes.
 - (b) To 175° F/79° C takes about 45 minutes.
 - (c) To 190° F/88° C takes about 1 hour.
4. Put food into the cabinet.
5. Turn thermostat to the required temperature.
NOTE: No.8 is about 175° F/79° C.
 No.7 is about 160° F/71° C.
 No.6 is about 145° F/63° C.
 Proper food holding temperature is 140° F/60° C or higher.

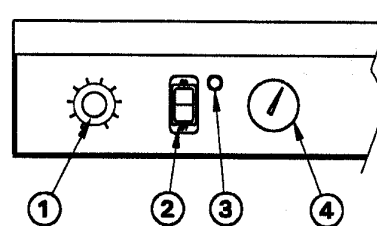

PARTS IDENTIFICATION

1. Thermostat
2. Power Switch
3. Yellow Indicator Light
4. Temperature Display

TO TURN OFF UNIT:

Push the power switch to **OFF**.
The yellow light will go out.

OPERATING and MAINTENANCE INSTRUCTIONS

Model CCB150 Series Banquet Warming Cabinet

MAINTENANCE: Hot Unit Removal Instructions:

1. Unplug power cord from wall outlet.
2. Lift unit off from front and rear of cabinet.

HOW TO CLEAN UNIT:



BEFORE Cleaning the Cabinet:


1. Allow Cabinet to Cool.
2. Remove Hot Unit From Cabinet.
3. Do NOT Use Abrasives or Harsh Chemicals.

Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

	SOIL	CLEANER	METHOD
CABINET (Stainless Steel)	Routine cleaning.	Soap, ammonia, or detergent* and water.	1. Sponge on with cloth. 2. Rinse.
	Stubborn spots and stains.	Mild abrasive made for stainless steel.	1. Apply with damp sponge or cloth. 2. Rub lightly.
	Burnt-on foods or grease.	Chemical oven cleaner	Follow Oven Cleaner Manufacturer's directions.
	Hard water, spots and scale.	Vinegar	1. Swab or wipe with cloth. 2. Rinse and dry.

* Mild detergents include soaps and non-abrasive cleaners.

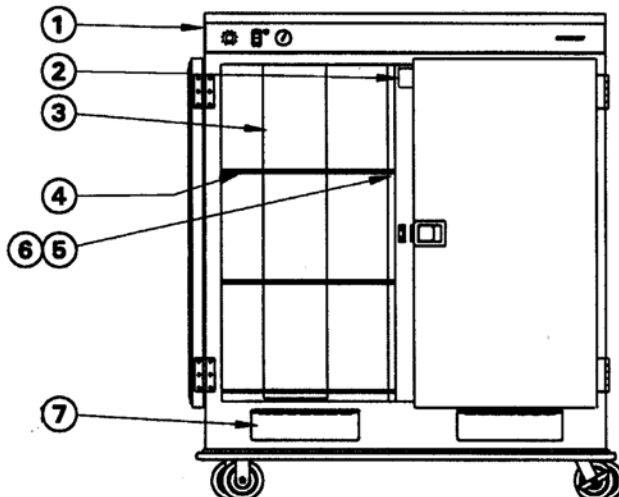

REMOVABLE PARTS IDENTIFICATION:

DESCRIPTION	Qty.
1. Hot Unit.....	1
2. Vent.....	1
3. Air Tunnels.....	2
4. Wire Grids.....	6
5. Channel Post.....	1
6. Shelf Channels.....	3
7. Utility Drawers.....	2



5925 Heisley Road • Mentor, OH 44060-1833
 877/CRES COR (273-7267) • 440/350-1100
 Fax: 440/350-7267 • www.crescor.com

Insulated Banquet Cabinet	FL-2246
Rev. 0 (12/00)	Page 3 of 4

OPERATING and MAINTENANCE INSTRUCTIONS

Model CCB150 Series Banquet Warming Cabinet

TROUBLE-SHOOTING CHART:

FAILURE	Possible Cause
1. Yellow light at switch does not light.	1a. Circuit breaker/fuse to wall outlet blown. 1b. Cord unplugged from wall outlet. 1c. Switch is OFF
2. Unit does not heat.	2a. Thermostat set too low or is OFF 2b. Switch is OFF
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts. UNPLUG UNIT FROM WALL OUTLET.
4. Blower does not work or makes noise.	4a. Defective Blower.
5. Excess moisture in cabinet.	5a. Open vent. 5b. "Slack out" foods from oven or fryer for 5 minutes before putting in hot cabinet.

If cause is none of the above, refer to our list of *Authorized Service Centers, FL-1400.*

REPLACEMENT PARTS:

DESCRIPTION	120 Volt	240 Volt
Hot Unit.....	HU18671164*	HU18671165
Blower Kit	0769-005-K	0769-006-K1
Heater Kit	0811-214-01	0811-215-01
Thermostat Kit	0848-062-K	0848-062-K
Thermometer Kit	5238-030-K	5238-030-K
Power Cord.....	0810-029-02*	0810-039-03
Power Switch	0808-118	0808-116
Pilot Light.....	0766-094	0766-095

CABINET PARTS:

DESCRIPTION	CMP Part No.
Door Latch	1006-143-K
Door Strike	1006-144-K
Door Hinge	0519-084
Door Gasket	0861-225
Door Ass'y. Complete	1221-462-K
Wire Grid	1170-041
Push Handle	1072-089
Utility Drawer	5069-008
Center Channel Ass'y.....	1043-041-K

For Canadian Use:*


Hot Unit (120 Volt)	HU18671164C
Power Cord Plug	0713-017

OPERATING and MAINTENANCE INSTRUCTIONS


Model CCB150 Series Banquet Warming Cabinet

ELECTRICAL SPECS.

MODEL #0671-164
 1650W, 120V, 60Hz, 1 Ph
 AC SERVICE

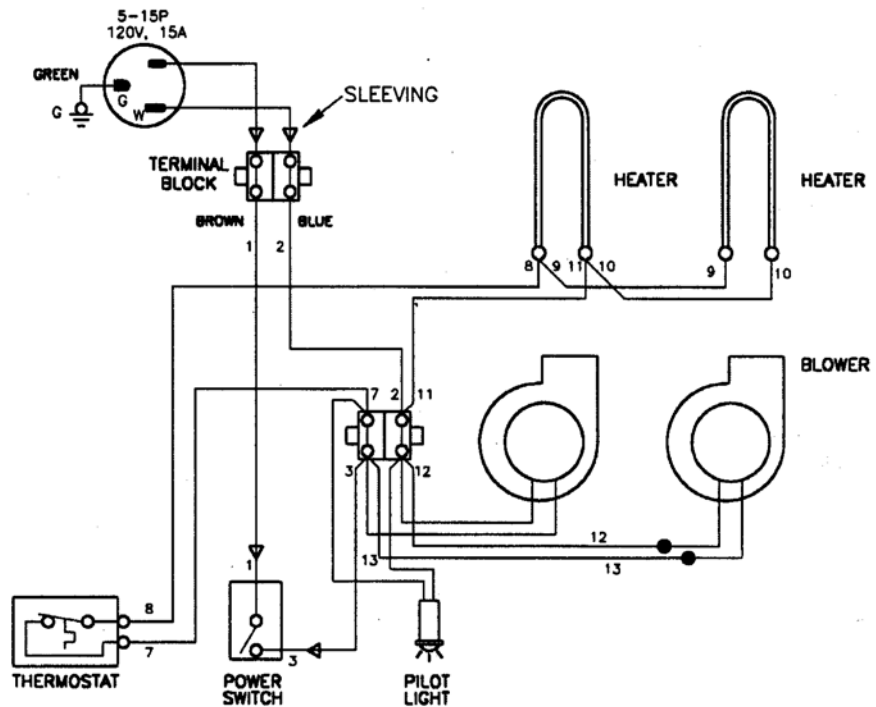

HOT UNIT #0671-165
 1650W, 240V, 60Hz, 1 Ph
 AC SERVICE

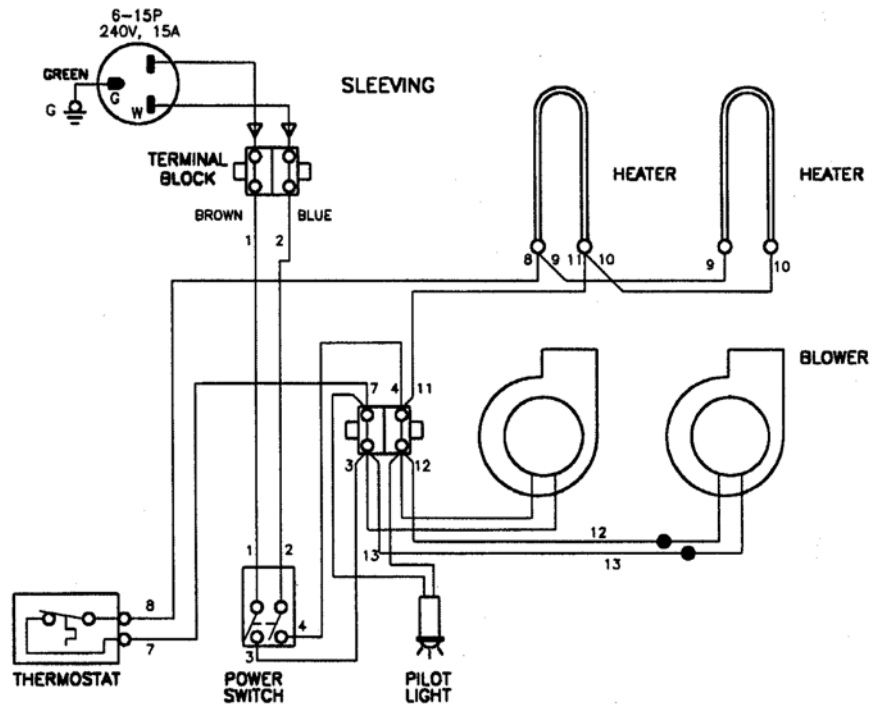

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>