 


KEY HOLE A

USE THIS TEMPLATE TO DETERMINE THE POSITION OF TELEPHONE ON WALL, AND WHERE TO LOCATE SCREW HOLES.

 
REMOVE TEMPLATE FROM WALL BEFORE INSERTING PLASTIC ANCHORS OR SCREWS

USE ONLY FOR WALL INSTALLATION OF TELEPHONE SET

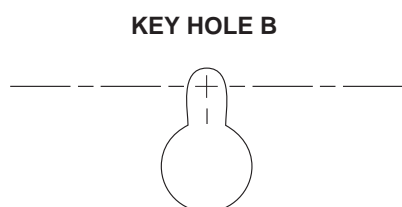

KEY HOLE B

910-009100-007

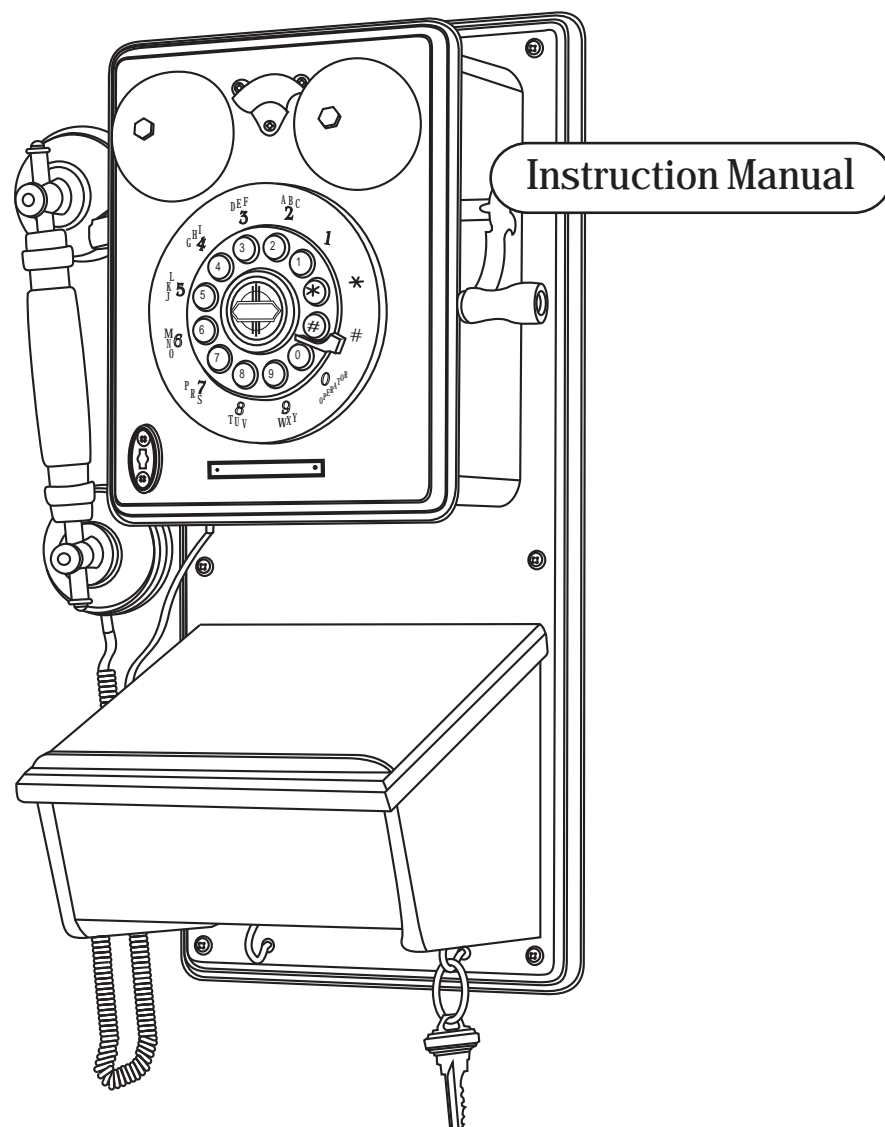

FCC Requirements

1. This equipment complies with 47CFR Part 68 and ACTA technical requirements. On the bottom of this equipment is a label that contains, among other information, the registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.
2. The USOC number of the registration jack for the equipment is RJ11C/RJ11W.
3. A FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is TIA/EIA-IS-968 compliant. See Installation Instructions details.
4. The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.
5. If this terminal equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
6. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted services.
7. The equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs.
8. Please follow instructions for repairing if any (e.g. battery replacement section), otherwise do not alternate or repair any parts of device except specified.
9. This equipment if it uses a telephone handset is hearing aid compatible.
10. If trouble is experienced with this equipment, for repair or warranty information, please contact service center at the below. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions, should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
5. Slots and openings in the cabinet and back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
8. Unplug this product from the wall outlet and refer servicing to qualified service personnel in the following cases:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
9. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
10. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
11. Avoid using a telephone (other than a cord less type) during an electric storm. There may be a remote risk of electric shock from lightning.
12. Do not use the telephone to report a gas leak in the vicinity of the leak.
13. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

WARRANTY

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the original purchaser.

Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the original customer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday to Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

**CROSLEY
RADIO**

ATTN: RETURNS DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEY RADIO assumes no responsibility for units sent without prior Return Authorization.

The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit.

The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio, high standards of Quality and Workmanship.

Set Up DIAL MODE

Locate the DIAL MODE switch on the rear of the telephone body. Slide the switch to Tone unless you have Dial-Pulse (Rotary) telephone service in your area in which case, slide the switch to the PULSE position.

RINGER CONTROL

The RINGER CONTROL switch is on the rear of the telephone body. It allows you to turn the ringer OFF or set it to ring at either LOW or HIGH volume. You can still make or receive calls with the ringer in OFF position, however, you will not hear the incoming ring.

RECEIVER VOLUME

The RECEIVER VOLUME CONTROL switch, located on the rear of the telephone body, allows you to adjust the volume of the receiver earphone from LO, MID and HI.

HANDSET CORD

To assemble, insert one end of handset cord into the HANDSET CORD JACK and the other end to the HANDSET CORD JACK located on the left side of the telephone body.

Installation

MODULAR WALL JACK

To install the telephone directly on a modular wall jack :

 
 
1. Connect the 15 inch line cord to the LINE CORD jack on the rear of the telephone body.
2. Tuck the line cord into the channel on the cabinet rear.
3. Peel and stick the rubber pads on rear of telephone cabinet in designated areas.
4. Hold the telephone body up next to the modular jack and plug the line cord into this jack.
5. Tuck the excess line cord into the recess provided on the rear of the telephone body.
6. Line up the mounting holes of the telephone body with the mounting studs (screw heads) on the modular jack or wall.
7. Push the telephone body against the wall jack and down until it is held securely in place by the mounting studs.

WALL

If you are not mounting directly onto a modular wall jack, proceed as follows :

1. Install the 7 foot line cord into the LINE CORD jack on the rear of the telephone body. If the desired location is further than 7 foot from a wall jack, you will have to obtain a longer line cord available at most hardware stores.
2. Place the provided TEMPLATE against the wall in the position desired.
3. Mark the wall by poking either a pen or pencil through the indicated spots on the template.
4. If there is no stud at this location, it will be necessary to install the provided wall anchors. Drill a small pilot hole at the marked locations. Tap the anchors into the holes. Then insert screws, but DO NOT TIGHTEN. Leave the screw heads protruding about 1/4 inch.
5. If there is a stud at this location, simply install the two screw into the stud. REMEMBER. Leave screw head protruding.

LOCATION OF PARTS

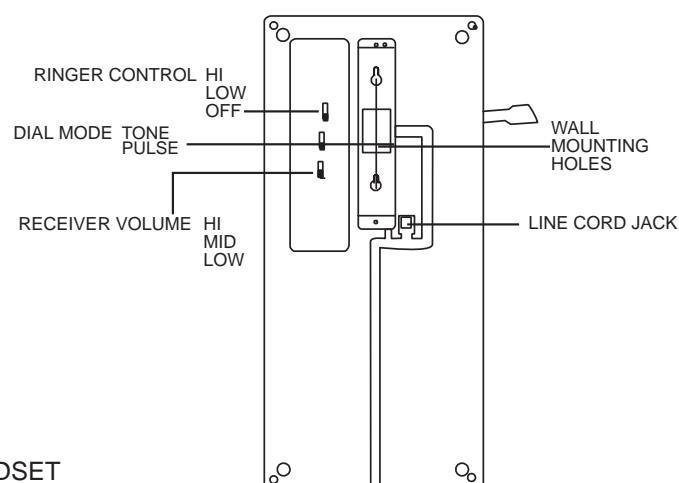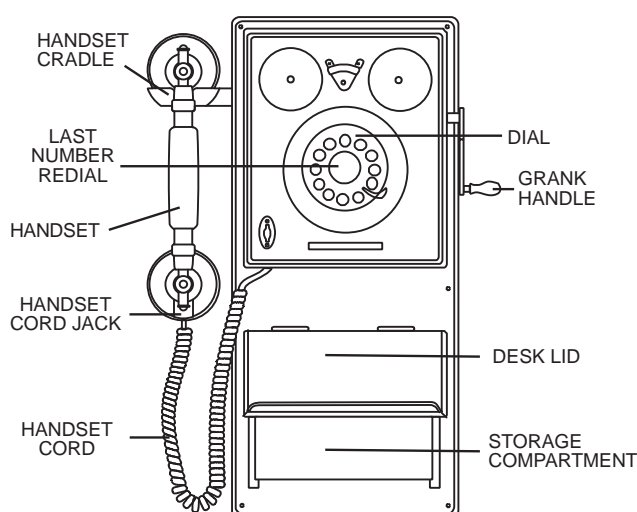

PARTS INCLUDED

- 1 -TELEPHONE HANDSET
- 1 -TELEPHONE BODY
- 1 -7 FOOT LINE CORD
- 1 -15 INCH LINE CORD
- 1 -DARK BROWN HANDSET CORD
- 2 -SCREWS WITH WALL ARCHORS
- 1 -WALL MOUNTING TEMPLATE.
- 4 -RUBBER SPACER PADS.

6. Telephone is then mounted according to procedure detailed in MOUNTING TO MODULAR PLUG.

NOTE: If you encounter difficulty fitting the telephone body onto the screw, or the telephone wobbles when installed, either tighten or loosen then screw to adjust.

MAKING AND ANSWERING CALLS

To get a dial tone or answer an incoming call, lift the handset.
To hang up, either replace the handset or simply press the HANDSET CRADLE.

IN CASE OF DIFFICULTY

If you are having problems with your telephone, try the following suggestion.

NO DIAL TONE

1. Make sure that all plugs are connected properly. Check the connections at the wall jack, the telephone cabinet and handset.
2. Try another modular jack within your home which you know to be working properly.

CALLS CANNOT BE DIALED OR DIALED SLOWLY

Check to make sure that the DIAL MODE switch is in the correct position for the type of service available in your area.

TELEPHONE DOES NOT RING

Check that RINGER CONTROL switch is not set to OFF.
If there are several telephones connected to the same line, try disconnecting some of the other telephones. Having too many telephones connected to the same line can cause low ringer volume or poor sound quality during calls.

CARE AND MAINTENANCE

Avoid rough treatment to the telephone. Do not drop the handset and always replace it gently onto the cradle.
Clean only with a cloth slightly dampened with water only. Do not use detergent, waxes, solvent, spray, alcohol or excessive water.

LAST NUMBER REDIALING

To redial the last number dialed, momentarily depress the center disk.

To Install Wall Anchors

If the location you have chosen to mount your telephone is a hollow wall without any beams you will have to use the included wall anchors.

To install, place the template against the wall where you wish to place your telephone. Mark the wall at the location of the two + on the template by pushing a pen or pencil through the template. Drill a 1/4" hole at each mark.

 
Push the wall anchor into the hole and gently tap until it is flush with the wall.

With a phillips screwdriver, begin tightening the screw.
CLOCKWISE. Stop turning when you feel firm resistance.

Turn the screw counter clockwise until the screw head is about 1/4" out of the wall.

Install the 7 foot line cord at back of the telephone . Adjust the switches to your preference. Position the line cord through the slot on the bottom of the cabinet. Line up the holes with the two screws. Place the telephone onto these two screws and gently pull down.

This may require a little fine tuning until the phone is seated securely.

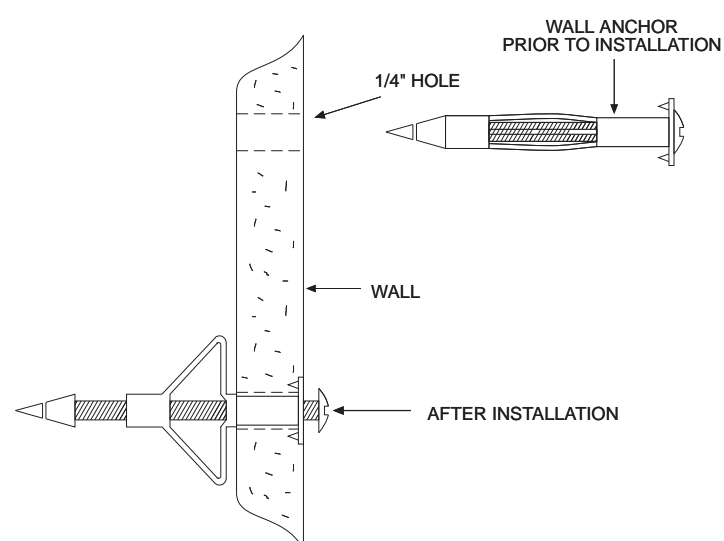

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>